

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hello Kitty](#) /

› [Hello Kitty KT2003MBY Karaoke System & CD Player User Manual](#)

Hello Kitty KT2003MBY

Hello Kitty KT2003MBY Karaoke System & CD Player

Model: KT2003MBY

1. INTRODUCTION

Thank you for purchasing the Hello Kitty KT2003MBY Karaoke System & CD Player. This manual provides essential information for the safe and efficient operation of your new device. Please read these instructions thoroughly before use and retain them for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain or moisture.
- Do not block ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Avoid placing microphones too close to the speakers to prevent feedback.
- Keep the unit away from direct sunlight, heat sources, and excessive dust.
- Clean the unit only with a dry cloth.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Hello Kitty KT2003MBY Karaoke System & CD Player
- Two Microphones
- Instruction Manual (this document)
- *Note: If an AC power adapter is included, it will be found in the packaging. The unit is primarily battery-powered.*

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your karaoke system.



Figure 4.1: Front view of the Hello Kitty KT2003MBY Karaoke System with the lid closed. The iconic Hello Kitty face design is visible on the top panel, with 'OPEN' and 'CLOSE' buttons for the CD compartment and a carrying handle at the bottom.

4.1 Front Panel Controls



Figure 4.2: Detailed view of the control panel, showing buttons for STOP, PLAY/PAUSE, SKIP-, SKIP+, and a MIC 2 VOL knob. A DISCO LIGHT switch is also visible.

- **STOP Button:** Stops CD playback.
- **PLAY/PAUSE Button:** Starts or pauses CD playback.
- **SKIP- Button:** Skips to the previous track.
- **SKIP+ Button:** Skips to the next track.
- **MIC 2 VOL Knob:** Adjusts the volume for Microphone 2.
- **DISCO LIGHT Switch:** Toggles the disco light function (OFF/FLASH/ON).

4.2 CD Compartment



Figure 4.3: The CD compartment shown open, revealing the CD spindle and the 'OPEN' indicator. The pink lid is hinged for easy access.

The top-loading CD compartment is accessed by pressing the 'OPEN' button located on the front of the unit. It supports standard audio CDs and CD-R/RW discs.

4.3 Microphone Ports and Speakers



Figure 4.4: The karaoke system with its lid open, showcasing the two integrated speakers and the two microphones connected to their respective ports. The microphones are held in place by built-in holders.

The unit features two microphone input jacks (MIC 1 and MIC 2) and two integrated 3-inch speakers for audio output.

5. SETUP

1. Power Connection:

- The unit is battery-powered. Open the battery compartment (location not specified, typically on the bottom or back) and insert the required batteries (type not specified, refer to compartment markings) ensuring correct polarity.
- If an optional AC power adapter is available and included, connect it to the DC input jack on the unit and then to a standard wall outlet.

2. Microphone Connection:

Insert the microphone cables into the MIC 1 and MIC 2 jacks on the unit.

3. Loading a CD:

- Press the 'OPEN' button to open the CD compartment lid.
- Place a CD with the label side facing up onto the center spindle.
- Gently close the CD compartment lid until it clicks securely.

6. OPERATING INSTRUCTIONS

6.1 CD Playback

1. **Playing a CD:** After loading a CD, press the **PLAY/PAUSE** button to begin playback.
2. **Pausing Playback:** Press the **PLAY/PAUSE** button during playback to pause. Press again to resume.
3. **Stopping Playback:** Press the **STOP** button to stop playback.
4. **Skipping Tracks:** Press **SKIP+** to advance to the next track. Press **SKIP-** to go to the beginning of the current track or the previous track.
5. **Repeat Function:** The unit supports repeat functions. Press the relevant button (if labeled 'REPEAT') to repeat the current track or the entire CD.
6. **Program Play:** The unit supports program play. Refer to the unit's specific programming instructions (if a dedicated 'PROGRAM' button is present) to create a custom playback order.
7. **Random Play:** The unit supports random play. Press the relevant button (if labeled 'RANDOM') to play tracks in a shuffled order.

6.2 Karaoke Function

1. **Microphone Use:** Ensure microphones are connected to the MIC 1 and MIC 2 jacks.
2. **Adjusting Microphone Volume:** Use the **MIC 2 VOL** knob to adjust the volume of Microphone 2. Volume control for Microphone 1 is not explicitly detailed; it may be fixed or controlled by a master volume if present.
3. **Avoiding Feedback:** To prevent a high-pitched squealing sound (feedback), avoid pointing the microphones directly at the speakers and maintain a reasonable distance from the unit.

6.3 Disco Light

The unit features a flashing disco light for added ambiance.

- Slide the **DISCO LIGHT** switch to 'ON' for a steady light.
- Slide the **DISCO LIGHT** switch to 'FLASH' for a flashing light effect.
- Slide the **DISCO LIGHT** switch to 'OFF' to turn off the light.

7. MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Store them in their cases to prevent scratches and dust accumulation. Clean dirty CDs with a soft, lint-free cloth, wiping from the center outwards.
- **Storage:** When not in use for extended periods, store the unit in a cool, dry place. If battery-powered, remove batteries to prevent leakage.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|----------------------------------|---|--|
| Unit does not power on. | Dead batteries or no power connection. | Replace batteries. If using an AC adapter, ensure it is securely plugged in. |
| CD does not play. | CD inserted incorrectly, dirty/scratched CD, or lid not closed. | Reinsert CD label-side up, clean or replace CD, ensure lid is securely closed. |
| No sound from speakers. | Volume too low, or unit in pause mode. | Increase volume. Ensure PLAY/PAUSE is not active. |
| Microphone feedback (squealing). | Microphone too close to speakers or microphone volume too high. | Move microphone away from speakers, reduce microphone volume (MIC 2 VOL knob). |
| Microphone not working. | Microphone not properly connected or volume too low. | Ensure microphone is fully plugged into the jack, increase MIC VOL knob (for MIC 2). |

9. SPECIFICATIONS

- Model:** KT2003MBY
- Brand:** Hello Kitty
- Power Source:** Battery Powered (Specific battery type not provided, refer to unit's battery compartment)
- Compatible Discs:** CD, CD-R/RW
- Speakers:** Two 3-inch speakers
- Dimensions:** 16.2 x 11.9 x 4.8 inches
- Item Weight:** 4.6 pounds
- Connectivity:** Auxiliary (Input for external audio devices, if available)
- Included Components:** Karaoke System, 2 Microphones

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.

© 2023 Hello Kitty. All rights reserved.

Related Documents - KT2003MBY

| | |
|---|---|
|  <p>MANUFACTURER: HELLO KITTY REFERENCE: HK68109 CODE: 4172308</p> | <p>Hello Kitty Karaoke 68109 User Guide and Features</p> <p>Comprehensive user guide for the Hello Kitty Karaoke 68109, detailing features, setup, operation, safety precautions, and connectivity options.</p> |
|  <p>Sleeping Kitty Alarm Clock with Digital Tuning Radio</p> | <p>Hello Kitty Sleeping Kitty Alarm Clock with Digital Tuning Radio - User Manual KT2052P</p> <p>User manual for the Hello Kitty Sleeping Kitty Alarm Clock with Digital Tuning Radio (Model KT2052P). Learn about setup, operation, safety instructions, and warranty information.</p> |
|  <p>PERSONAL STEREO CASSETTE PLAYER WITH VOICE RECORDER AND DIGITAL ALARM CLOCK</p> <p>OWNER'S MANUAL HK39</p> | <p>Hello Kitty HK39 Personal Stereo Cassette Player with Voice Recorder & Alarm Clock - Owner's Manual</p> <p>Official owner's manual for the Hello Kitty HK39 Personal Stereo Cassette Player with Voice Recorder and Digital Alarm Clock. Learn how to operate, set the time, alarm, and use the cassette and voice recording features.</p> |
|  <p>AM/FM STEREO CD DUAL ALARM CLOCK RADIO</p> <p>USER MANUAL KT2053A</p> <p>CAUTION: ELECTRICALLY OPERATED PRODUCT. Please use care when plugging into AC outlet.</p> | <p>Hello Kitty KT2053A AM/FM Stereo CD Dual Alarm Clock Radio User Manual</p> <p>User manual for the Hello Kitty KT2053A AM/FM Stereo CD Dual Alarm Clock Radio by Spectra Merchandising International. Features include AM/FM radio, CD player, dual alarms, sleep timer, and troubleshooting tips.</p> |
|  <p>Assembly Instructions for Hello Kitty Storage Box</p> | <p>Hello Kitty Storage Box Assembly Instructions</p> <p>Detailed assembly instructions for the Hello Kitty Storage Box, including parts list, step-by-step diagrams, and safety warnings. Ensure correct assembly for safe use.</p> |
|  <p>OWNER'S INSTRUCTION MANUAL FOR HELLO KITTY DANCING LED WATER TOWER SPEAKER</p> <p>INSTRUCTION MANUAL FOR HELLO KITTY DANCING LED WATER TOWER SPEAKER</p> | <p>Hello Kitty Dancing LED Water Tower Speaker Instruction Manual</p> <p>Instruction manual for the Hello Kitty Dancing LED Water Tower Speaker, covering setup, controls, Bluetooth pairing, and compliance information.</p> |