

[Manuals.plus](#) /

› [KIDS PREFERRED](#) /

› KIDS PREFERRED Disney Baby Mickey Mouse Mini Jingler Plush Toy Instruction Manual

KIDS PREFERRED 79297

KIDS PREFERRED Disney Baby Mickey Mouse Mini Jingler Plush Toy Instruction Manual

Model: 79297

INTRODUCTION

Thank you for choosing the KIDS PREFERRED Disney Baby Mickey Mouse Mini Jingler Plush Toy. This manual provides important information regarding the proper use, care, and maintenance of your new plush toy. Please read it thoroughly to ensure a safe and enjoyable experience.



Image: Front view of the KIDS PREFERRED Disney Baby Mickey Mouse Mini Jangler Plush Toy.

This adorable Mickey Mouse plush toy is designed to be a comforting companion for babies and toddlers. It features a soft, huggable design and an internal jangler for auditory stimulation.

SAFETY INFORMATION

- Always supervise infants and young children during play.
- Inspect the toy regularly for any signs of damage or wear. Discontinue use if any parts become loose or detached.
- Keep away from open flames or direct heat sources.
- This toy is suitable for ages newborn and up.

SETUP

The Disney Baby Mickey Mouse Mini Jangler Plush Toy requires no assembly. It is ready for use directly out of its packaging.

1. Remove all packaging materials, tags, and plastic fasteners before giving the toy to a child.
2. Perform a quick visual inspection to ensure the toy is in good condition and free from any loose threads or small parts.

OPERATING INSTRUCTIONS

This plush toy is designed for sensory engagement and comfort.

- **Jingler Feature:** Gently shake or squeeze Mickey's belly to activate the internal jingler sound. This provides auditory stimulation for infants.
- **Cuddling and Comfort:** The soft fabric and huggable design make it ideal for cuddling and providing comfort.
- **Developmental Play:** Encourage interaction by pointing out Mickey's features, such as his ears, nose, and hands.



Image: Close-up view of the Mickey Mouse plush toy's face, highlighting its soft texture and embroidered features.

MAINTENANCE AND CARE

To keep your Mickey Mouse plush toy clean and in good condition:

- **Surface Washable:** The toy is surface washable only. Do not immerse in water.
- **Cleaning Procedure:**
 - a. Dampen a clean cloth with mild soap and water.
 - b. Gently wipe the soiled areas of the plush toy.
 - c. Use a separate clean, damp cloth to wipe off any soap residue.
 - d. Allow the toy to air dry completely before returning it to a child.
- Do not bleach, iron, or tumble dry.





Image: Full view of the Mickey Mouse plush toy, showcasing its overall design and proportions.

TROUBLESHOOTING

The Disney Baby Mickey Mouse Mini Jangler Plush Toy is a simple, non-electronic item. Most issues can be resolved with basic care.

Problem	Possible Cause	Solution
Jangler sound is faint or absent.	Insufficient shaking or squeezing.	Ensure the toy is shaken or squeezed firmly. The jangler is designed to be gentle.
Toy appears dirty.	Normal use and play.	Refer to the "Maintenance and Care" section for surface washing instructions.
Loose threads or minor damage.	Wear and tear from use.	Carefully trim loose threads. If damage is significant or affects safety, discontinue use.

For issues not covered here, please contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.5 x 3 x 6 inches
Item Weight	0.8 ounces
Model Number	79297
Manufacturer Recommended Age	0 - 4 years
Care Instructions	Surface washable
Brand	KIDS PREFERRED

WARRANTY AND SUPPORT

KIDS PREFERRED is committed to providing high-quality products. While specific warranty details are not provided for this item, we stand by the quality of our toys.

For any questions, concerns, or support regarding your Disney Baby Mickey Mouse Mini Jangler Plush Toy, please contact KIDS PREFERRED customer service through their official website or the retailer where the product was purchased.

Please retain this instruction manual for future reference.

