



Manuals.plus /

› Timelink /

› Timelink 88141 Green LED Loud Alarm Clock User Manual

## Timelink 88141

# Timelink 88141 Green LED Loud Alarm Clock User Manual

MODEL: 88141

## 1. Introduction

---

Thank you for choosing the Timelink 88141 Green LED Loud Alarm Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new alarm clock. Please read these instructions carefully before use and retain them for future reference.

## 2. Safety Information

---

- Ensure the power cord is not damaged or frayed.
- Do not expose the unit to water or excessive moisture.
- Avoid placing the clock near heat sources or in direct sunlight.
- Use only the specified battery type (1 "AA" battery) for backup.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.

## 3. Package Contents

---

- Timelink 88141 Green LED Loud Alarm Clock
- AC Power Cord (integrated)
- User Manual (this document)

## 4. Product Overview

---

The Timelink 88141 is a compact alarm clock featuring a bright green LED display and user-friendly controls. It offers both loud and soft alarm settings, a snooze function, and a battery backup for timekeeping during power interruptions.



Figure 1: Angled view of the Timelink 88141 alarm clock, showing the green LED display and top-mounted controls.



Figure 2: Front view of the alarm clock, highlighting the large green LED time display and the 'PM' and 'ALM' indicators.



Figure 3: Top view of the alarm clock, illustrating the control buttons: HOUR, MIN, TIME, ALARM, SNOOZE, and the SOFT/LOUD and OFF/ON switches.

### Control Buttons and Switches:

- **HOUR Button:** Adjusts the hour for time and alarm settings.
- **MIN Button:** Adjusts the minute for time and alarm settings.
- **TIME Button:** Used in conjunction with HOUR and MIN to set the current time.
- **ALARM Button:** Used in conjunction with HOUR and MIN to set the alarm time.
- **SNOOZE Button:** Temporarily silences the alarm for a short period.
- **SOFT • LOUD Switch:** Selects the alarm volume level.
- **OFF • ON Switch:** Turns the alarm function on or off.

## 5. Setup

### 5.1 Power Connection

1. Uncoil the integrated AC power cord.
2. Plug the power cord into a standard 120V AC wall outlet. The green LED display should illuminate.

### 5.2 Battery Backup Installation

The clock requires one "AA" battery (not included) for battery backup. This feature maintains time settings during a power outage, but the display will not be lit, and the alarm will not sound.

1. Locate the battery compartment on the bottom of the clock.
2. Open the battery compartment cover.
3. Insert one "AA" battery, observing the correct polarity (+ and - markings).
4. Close the battery compartment cover securely.

## 6. Operating Instructions

## 6.1 Setting the Current Time

1. Press and hold the **TIME** button.
2. While holding **TIME**, press the **HOUR** button repeatedly to advance the hour. Observe the 'PM' indicator for afternoon hours.
3. While holding **TIME**, press the **MIN** button repeatedly to advance the minutes.
4. Release the **TIME** button when the desired time is set.

## 6.2 Setting the Alarm Time

1. Press and hold the **ALARM** button.
2. While holding **ALARM**, press the **HOUR** button repeatedly to advance the alarm hour. Observe the 'PM' indicator.
3. While holding **ALARM**, press the **MIN** button repeatedly to advance the alarm minutes.
4. Release the **ALARM** button when the desired alarm time is set.

## 6.3 Turning the Alarm On/Off

- To turn the alarm **ON**, slide the **OFF • ON** switch (located on the top of the clock) to the 'ON' position. The 'ALM' indicator on the display will light up.
- To turn the alarm **OFF**, slide the **OFF • ON** switch to the 'OFF' position. The 'ALM' indicator will turn off.

## 6.4 Adjusting Alarm Volume

- Slide the **SOFT • LOUD** switch (located on the top of the clock) to select your preferred alarm volume.

## 6.5 Snooze Function

- When the alarm sounds, press the large **SNOOZE** button on the top of the clock. The alarm will temporarily stop and sound again after approximately 9 minutes.
- To cancel snooze and turn off the alarm completely, slide the **OFF • ON** switch to 'OFF'.

## 7. Maintenance

---

### 7.1 Cleaning

- Wipe the clock's exterior with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

### 7.2 Battery Replacement

- Replace the "AA" backup battery annually or if the clock experiences frequent power outages to ensure reliable timekeeping.
- Dispose of used batteries responsibly according to local regulations.

## 8. Troubleshooting

---

Problem	Possible Cause	Solution
Display is blank	No AC power; Power outage	Ensure AC cord is securely plugged in. Check wall outlet.
Alarm does not sound	Alarm is off; Alarm time not set; Volume too low	Slide ALARM switch to 'ON'. Set alarm time correctly. Adjust SOFT/LOUD switch.
Time is incorrect after power outage	No battery backup; Dead battery	Install a fresh "AA" battery for backup. Reset the time.

## 9. Specifications

Feature	Detail
Model Number	88141
Display Type	Green LED Digital
Power Source	Electric AC Powered
Battery Backup	1 x "AA" Battery (Not Included)
Special Features	Loud/Soft Alarm Settings, Snooze Function
Approximate Dimensions (L x H x W)	4.75" x 2" x 2.5" (12.1 x 5.1 x 6.9 cm)
Approximate Weight	0.5 lb (249 g)
Material	Plastic

## 10. Warranty and Support

This Timelink 88141 Green LED Loud Alarm Clock comes with a 1-year manufacturer's warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, unauthorized modification, or improper installation. For warranty claims or technical support, please refer to the contact information provided with your purchase documentation or visit the official Timelink website.