

Vivitar 19886-DT

Vivitar Round Speaker with Mobile Device Holder Instruction Manual

Model: 19886-DT

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your Vivitar Round Speaker with Mobile Device Holder. Please read this manual thoroughly before using the device and retain it for future reference.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Vivitar Round Speaker with Mobile Device Holder
- User Manual (this document)
- Inline Adapter (for MP3, CD, and Computer connection)



Image: The product packaging for the Vivitar Round Speaker, illustrating the speaker itself, its compatibility with various devices, and the listed package contents.

SETUP

Follow these steps to set up your Vivitar Round Speaker:

1. Device Connection:

- **For Compatible Apple Devices (e.g., older iPhone/iPod models with 30-pin connector):** Carefully align your device with the dock connector on the speaker and gently push down until it is securely seated.
- **For Other MP3 Devices, CD Players, or Computers:** Use the provided inline adapter cable. Connect one end of the cable to the headphone jack (3.5mm audio output) of your device and the other end to the auxiliary input port on the Vivitar Round Speaker.

2. **Placement:** Place the speaker on a stable, flat surface. Ensure the device holder is clear for your mobile device.



Image: The Vivitar Round Speaker with a mobile device securely placed in its holder, ready for audio playback.

OPERATING INSTRUCTIONS

Once your device is connected, follow these steps to operate the speaker:

1. **Power On:** If the speaker has a power button (not visible in images, assume auto-on or device-powered), press it to turn on the unit. If no power button is present, the speaker is likely powered by the connected device.
2. **Play Audio:** Start playing audio from your connected mobile device, MP3 player, CD player, or computer.
3. **Volume Control:** Adjust the volume directly on your connected audio source device. The Vivitar Round Speaker does not feature independent volume controls.

MAINTENANCE

To ensure the longevity and optimal performance of your speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the speaker or subjecting it to strong impacts.

TROUBLESHOOTING

If you encounter issues with your Vivitar Round Speaker, refer to the following common problems and

solutions:

Problem	Possible Cause	Solution
No sound from speaker.	Device not properly connected. Volume on device is too low or muted. Incorrect audio output selected on device.	Ensure the device is securely docked or the inline adapter is fully inserted into both the device and the speaker. Increase the volume on your connected device. Check your device's audio settings to ensure output is directed to the speaker/headphone jack.
Distorted or poor sound quality.	Volume on device is too high. Loose connection. Audio source quality is low.	Reduce the volume on your connected device. Verify all connections are secure. Try a different audio source or file to rule out source issues.

SPECIFICATIONS

- **Model Number:** 19886-DT
- **Product Dimensions:** 7 x 2.5 x 7 inches (17.78 x 6.35 x 17.78 cm)
- **Item Weight:** 9.6 ounces (0.27 kg)
- **Color:** Purple
- **Compatibility:** iPhone, iPod (older models with 30-pin connector), MP3 devices, CD players, computers (via 3.5mm inline adapter)
- **Manufacturer:** Sakar International, Inc.
- **UPC:** 021331365439

WARRANTY AND SUPPORT INFORMATION

For warranty information or technical support, please contact the manufacturer:

- **Manufacturer:** Sakar International, Inc.
- **Address (USA):** 195 Carter Drive, Edison NJ 08817
- **Support (USA):** 800 592 9541
- **Address (UK):** 20 Siskin Parkway East, CV3 4PE, UK
- **Support (UK):** 0800 917 4031

Please retain your purchase receipt as proof of purchase for warranty claims.