

Manuals.plus /

› Logitech /

› Logitech K830 Illuminated Living-Room Wireless Keyboard and Touchpad User Manual

## Logitech K830

# Logitech K830 Illuminated Living-Room Wireless Keyboard and Touchpad User Manual

## INTRODUCTION

---

The Logitech K830 Illuminated Living-Room Wireless Keyboard and Touchpad is designed to simplify text entry and entertainment control for your Internet-connected TV or PC. Featuring bright, backlit keys and an integrated touchpad, it offers a convenient and comfortable experience from your couch. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.

## WHAT'S IN THE BOX

---

- Logitech K830 Illuminated Living-Room Wireless Keyboard
- Logitech Unifying Receiver (USB dongle)
- USB Charging Cable

## SETUP

---

### 1. Charging the Keyboard

Before initial use, fully charge your Logitech K830 keyboard. Connect the supplied USB charging cable to the micro-USB port on the side of the keyboard and the other end to a USB power source, such as a computer's USB port, a USB wall adapter, or a PlayStation 4 console.

### 2. Connecting the Unifying Receiver

Locate the Logitech Unifying Receiver (USB dongle) included in the package. Plug this receiver into an available USB port on your Internet-connected TV, PC, or PlayStation 4. The keyboard uses a 2.4 GHz wireless connection via this receiver.

### 3. Powering On/Off

Slide the power switch located on the side of the keyboard to the 'On' position to begin using the device. Slide it to

the 'Off' position to conserve battery life when not in use.

## OPERATING INSTRUCTIONS

---

### Typing and Navigation

The K830 features a standard QWERTY keyboard layout with well-spaced keys for comfortable and efficient typing. Use the keys for text input in search bars, web browsers, and messaging applications.

### Integrated Touchpad

The large, responsive touchpad on the right side of the keyboard provides precise cursor control. It supports multi-touch gestures such as swiping, scrolling, and zooming, similar to a laptop touchpad. **Note:** Touchpad functionality may vary depending on the operating system or application you are using. For example, some PlayStation 4 applications may not fully utilize the touchpad for navigation.

### Illuminated Keys

The keys are backlit, allowing for easy visibility and typing in dark or dimly lit environments. The backlighting automatically adjusts based on ambient light and illuminates when you touch the keys, dimming after a few seconds of inactivity to conserve battery. You can also manually adjust the brightness levels.

### Media Keys

Dedicated media keys (often integrated into the F-keys) provide quick access to volume control, playback functions, and other common media actions.

### PlayStation 4 Compatibility

The Logitech K830 keyboard is compatible with PlayStation 4 for text input. This is particularly useful for typing messages, entering search queries, and adding descriptions when sharing gameplay videos or screenshots. While native PS4 applications generally support keyboard input, third-party streaming apps like Netflix or Amazon Video may not fully recognize the keyboard for search functions.



An angled view of the Logitech K830 keyboard, showcasing its compact design, full QWERTY layout, and integrated touchpad on the right side.



A person comfortably holding the Logitech K830 keyboard on their lap, demonstrating its suitability for living room use with an internet-connected TV.

## MAINTENANCE

---

### Cleaning the Keyboard

To clean your keyboard, first ensure it is powered off using the side switch. Use a soft, lint-free cloth, lightly dampened with a screen cleaner or mild cleaning solution. Gently wipe the keys and surfaces. Avoid harsh chemicals or abrasive materials. The keys are designed to be durable and resist falling out during cleaning.

### Battery Care

The Logitech K830 features a long-lasting rechargeable battery. To maximize battery life, power off the keyboard when not in use. Recharge the keyboard when the battery indicator light signals low power. Charging is quick and convenient via the included USB cable.

## TROUBLESHOOTING

---

### Keyboard Not Responding

- Ensure the keyboard's power switch is in the 'On' position.
- Verify that the Logitech Unifying Receiver is securely plugged into a working USB port on your device.
- Check the keyboard's battery level and recharge if necessary.
- Try plugging the Unifying Receiver into a different USB port.

### Touchpad Not Working or Inconsistent

- Confirm that the application or operating system you are using supports touchpad input.

- Ensure the keyboard is fully charged.
- Clean the touchpad surface to remove any dirt or debris that might interfere with tracking.

## Keys Not Illuminating

- Check the keyboard's battery level; low battery can affect backlighting.
- Ensure the ambient light sensor is not obstructed.
- Manually adjust the brightness settings to ensure they are not set to the lowest level.

## SPECIFICATIONS

---

<b>Brand</b>	Logitech
<b>Model Name</b>	K830
<b>Model Number</b>	920-006081
<b>Connectivity Technology</b>	RF Wireless (2.4 GHz)
<b>Compatible Devices</b>	PC, Internet-Connected TVs, PlayStation 4
<b>Keyboard Layout</b>	QWERTY
<b>Number of Keys</b>	85
<b>Keyboard Backlighting</b>	Single Color, Adjustable Brightness
<b>Power Source</b>	Battery Powered (Rechargeable)
<b>Material</b>	Plastic
<b>Item Weight</b>	1.1 Pounds

## WARRANTY AND SUPPORT

---

For detailed warranty information, technical support, and additional resources, please visit the official Logitech support website. You can find product registration, FAQs, and contact information for customer service there.

**Logitech Official Website:** [www.logitech.com](http://www.logitech.com)