

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SadoTech](#) /

› [SadoTech Wireless Doorbell System Model B00J4FHOB0 Instruction Manual](#)

SadoTech B00J4FHOB0

SadoTech Wireless Doorbell System Model B00J4FHOB0 Instruction Manual

1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the installation, operation, and maintenance of your SadoTech Wireless Doorbell System, Model B00J4FHOB0. This system is designed for versatile use in various environments, including homes, apartments, businesses, and classrooms, offering a reliable and convenient way to receive alerts.

The system features a wireless transmitter button and two plug-in chime receivers, allowing for flexible placement and customizable alerts. Key features include a long operating range, multiple chime options, adjustable volume, and an LED flash for visual notification.



Image 1.1: SadoTech Wireless Doorbell System components.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Wireless Transmitter Button
- 2 x Plug-In Chime Receivers
- 1 x A23 Battery (pre-installed in transmitter, may require tab removal)
- 1 x Double-Sided Adhesive Tape
- 2 x Anchors
- 2 x Screws
- 1 x User Manual (this document)



Image 2.1: All-in-One Doorbell Kit contents and features.

3. SETUP AND INSTALLATION

3.1. Transmitter Button Installation

The wireless transmitter button can be installed using either the provided double-sided adhesive tape or screws and anchors. Ensure the installation surface is clean and dry for optimal adhesion or secure mounting.

Method 1: Adhesive Tape

1. Remove the protective tab from the A23 battery inside the transmitter to activate it.
2. Clean the desired installation area on your door frame or wall thoroughly.
3. Peel off one side of the double-sided adhesive tape and firmly attach it to the back of the transmitter button.
4. Peel off the other side of the adhesive tape and press the transmitter firmly onto the cleaned surface for at least 30 seconds.

Method 2: Screws and Anchors (Recommended for permanent installation)

1. Remove the back cover of the transmitter button.
2. Use the pre-drilled holes on the back plate as a template to mark the screw positions on your wall or door frame.
3. Drill pilot holes at the marked positions. Insert the plastic anchors into the pilot holes.
4. Align the transmitter's back plate with the anchors and secure it with the provided screws.
5. Snap the front cover back onto the transmitter.



Image 3.1: Simple setup steps for the SadoTech doorbell.

3.2. Receiver Chime Installation

The chime receivers are plug-in units. Simply insert them into any standard electrical outlet where you desire to hear the doorbell chime. For optimal coverage, place receivers in central locations or areas where the chime needs to be clearly audible.

ATTENTION WHERE YOU NEED IT

FITS ANY STANDARD OUTLET



Image 3.2: Suggested placement of receivers for wide coverage.

3.3. Pairing Transmitter and Receiver

Your SadoTech doorbell system typically comes pre-paired. If re-pairing is necessary or if you are adding new components, follow these steps:

1. Plug the receiver into an electrical outlet.
2. Press and hold the volume button on the side of the receiver until the LED light on the receiver starts flashing (approximately 5 seconds).
3. While the receiver's LED is flashing, press the transmitter button once. The receiver will chime, and its LED will stop flashing, indicating successful pairing.
4. Test the pairing by pressing the transmitter button. The receiver should chime.

Video 3.3: SadoTech Wireless Doorbell - Setup Installation. This video demonstrates the process of setting up and pairing the wireless doorbell components.

4. OPERATING INSTRUCTIONS

4.1. Changing Chimes

Your SadoTech doorbell offers over 50 different chime melodies. To change the chime, press the 'Sound'

button located on the side of the receiver. Each press will cycle through the available melodies. Once you hear a melody you like, stop pressing the button, and the receiver will save your selection.

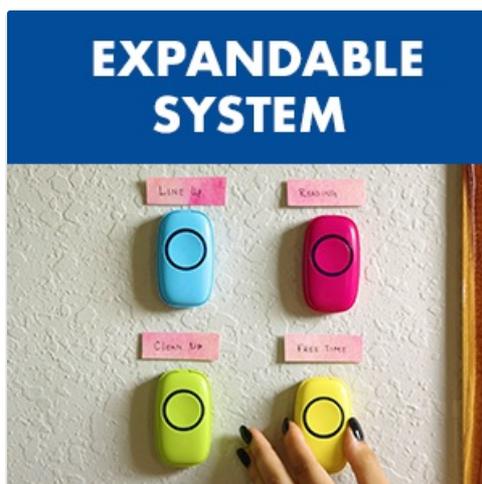


Image 4.1: Over 50 chimes available for selection.

4.2. Adjusting Volume

The receiver has 4 adjustable volume levels. To adjust the volume, press the 'Volume' button on the side of the receiver. Each press will cycle through the volume levels from lowest to highest. Select the desired volume level for your environment.

PERSONALIZE TO YOUR SPACE



- Multiple Colors
- 50+ Chimes
- Adjustable Volume
- Silent Mode
- Built-In Memory



Image 4.2: Personalize your doorbell with adjustable volume and chimes.

4.3. LED Flash Notification

Both the transmitter button and the receiver units feature an LED flash. When the transmitter button is pressed, its LED will illuminate. Simultaneously, the receiver's LED will flash along with the chosen chime, providing a visual alert, which is particularly useful for individuals with hearing impairments or in noisy environments.



5. MAINTENANCE

5.1. Transmitter Battery Replacement

The wireless transmitter button is powered by an A23 battery, which typically lasts up to 3 years. When the transmitter's performance declines or it stops working, it may be time to replace the battery.

1. Carefully open the transmitter casing, usually by prying it open from a small notch on the side or bottom.
2. Remove the old A23 battery.
3. Insert a new A23 12V Alkaline battery, ensuring correct polarity.
4. Close the transmitter casing securely.

Video 5.1: SadoTech Doorbell Model CXR (Transmitter Button) - Setup Installation. This video demonstrates the setup and battery installation for the transmitter button.

6. TROUBLESHOOTING

- **Doorbell not ringing:**

Check if the transmitter battery is active (remove tab) or needs replacement. Ensure receivers are plugged in and powered. Re-pair the transmitter and receiver as described in Section 3.3.

- **Limited range:**

Ensure there are no major metal obstructions between the transmitter and receiver. The stated range is up to 1000 feet in open air; walls and other structures can reduce this. Consider relocating receivers.

- **Settings reset after power outage:**

The receivers have a built-in memory, but in rare cases of power fluctuations, settings might reset to default. Simply re-select your preferred chime and volume settings.

- **Adhesive not holding:**

Ensure the installation surface was thoroughly cleaned and dry before applying the adhesive tape. For a more secure and permanent solution, use the provided screws and anchors.

7. SPECIFICATIONS

Feature	Specification
Manufacturer	SadoTech
Model Number	B00J4FHOB0
Item Weight	6.9 ounces
Product Dimensions	3.2 x 1.5 x 3.5 inches
Power Source (Transmitter)	1 x A23 12V Alkaline Battery
Power Source (Receiver)	110 Volts (Plug-in)
Operating Range	Up to 1000 feet (open air)
Chime Options	50+ melodies

Volume Levels	4 (30dB - 110dB)
Color	White
Material	ABS
Special Features	LED Flash, Built-in Memory, Weatherproof Transmitter

8. WARRANTY AND SUPPORT

For product support, warranty information, or any questions regarding your SadoTech Wireless Doorbell System, please contact SadoTech directly.

You can visit their website or send an email to:

Email: support@sadotech.com

Registering your product may provide additional benefits such as faster support response times, free e-booklets with tips, and exclusive discount offers.