



[Manuals.plus](#) /

› [SadoTech](#) /

› SadoTech Wireless Doorbell System CX Model User Manual

SadoTech CX

SadoTech Wireless Doorbell System CX Model User Manual

Model: CX (B00J4FVZU6)

INTRODUCTION

This manual provides detailed instructions for the SadoTech Wireless Doorbell System CX Model. Please read thoroughly before installation and operation to ensure proper functionality and longevity of your device. This system is designed for ease of use and versatility, suitable for homes, apartments, offices, and classrooms.

ALL-IN-ONE DOORBELL KIT

Receiver



Transmitter

○ Wireless

○ 1000 ft. (305 m)
Range Per Receiver

○ 3-Year
Battery Life

Image: The SadoTech Wireless Doorbell System, showing a plug-in receiver and a push-button transmitter.

SETUP AND INSTALLATION

Your SadoTech Wireless Doorbell System includes two main components: the plug-in chime receiver and the push-button transmitter. Installation is designed to be straightforward with two primary methods.

Package Contents:

- 2 x Wireless Doorbell Transmitters (push buttons)
- 1 x Plug-in Chime Receiver
- Double-sided adhesive tape
- Anchors and screws for optional permanent installation
- 1 x A23 battery (pre-installed in transmitters)

Installation Methods:

1. Using Double-Sided Adhesive Tape:

- Clean the desired surface for the transmitter thoroughly to ensure strong adhesion.
- Peel off one side of the double-sided adhesive tape and firmly attach it to the back of the transmitter.
- Peel off the other side of the tape and press the transmitter firmly onto the cleaned surface for at least 30 seconds.

2. Using Screws and Anchors (for permanent installation):

- Open the transmitter casing. You may need a small screwdriver to gently pry it open.
- Locate the screw holes on the back plate of the transmitter.
- Mark the desired installation spot on your wall or door.
- Drill pilot holes if necessary and insert the provided anchors.
- Secure the transmitter's back plate to the wall using the provided screws.
- Reattach the front cover of the transmitter.

Receiver Setup: Simply plug the chime receiver into any standard electrical outlet indoors. Ensure it is placed in a location where the chime can be easily heard throughout your desired area.

ATTENTION WHERE YOU NEED IT

FITS ANY STANDARD OUTLET



Image: A visual guide demonstrating the simple three-step setup process: attaching the adhesive to the transmitter, placing the transmitter, and plugging in the receiver.

OPERATING INSTRUCTIONS

The SadoTech Wireless Doorbell System offers customizable sounds and volume levels for a personalized experience.

Pairing Transmitters with Receiver:

Your doorbell system typically comes pre-paired. If re-pairing is needed or you add new transmitters:

1. Plug in the receiver to an electrical outlet.
2. On the receiver, press and hold the volume button and the chime selection button simultaneously for a few seconds until the receiver enters learning mode (often indicated by a light flash or a specific sound).
3. Immediately press the push button on the transmitter you wish to pair. The receiver should chime, indicating successful pairing.

4. Repeat for any additional transmitters.

Changing Chime Sounds:

The system offers over 50 unique chime sounds. To change the chime:

- On the receiver, press the 'chime selection' button (often indicated by a music note or similar icon) repeatedly to cycle through the available melodies.
- Stop pressing when you hear your desired chime. The receiver will remember your selection.

Adjusting Volume:

The receiver has 4 adjustable volume settings, ranging from 30dB to 110dB.

- On the receiver, press the 'volume control' button (often indicated by a speaker icon) repeatedly to cycle through the volume levels.
- Select the volume that best suits your environment.

PERSONALIZE TO YOUR SPACE



- Multiple Colors
- 50+ Chimes
- Adjustable Volume
- Silent Mode
- Built-In Memory



Image: An illustration highlighting the customization options of the SadoTech doorbell, including various colors, over 50 chimes, adjustable volume, silent mode, and built-in memory.

SIMPLE SETUP

INSTALL IN MINUTES

1. ATTACH **2. PLACE** **3. PLUG IN**



INCLUDES: ALL-WEATHER ADHESIVE, ANCHORS & SCREWS, 23A BATTERY

Image: A close-up of the SadoTech receiver plugged into a wall, emphasizing its adjustable volume from 30dB to 110dB, suitable for various environments.

MAINTENANCE

Battery Replacement:

The transmitters are powered by an A23 battery, which typically lasts up to 3 years. When the transmitter stops working or its range decreases, it may be time to replace the battery.

- Gently open the transmitter casing (a small screwdriver may be needed).
- Remove the old A23 battery.
- Insert a new A23 battery, ensuring correct polarity.

- Close the casing securely.

Cleaning:

Wipe the doorbell components with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish or internal components.

Weather Resistance:

The SadoTech Wireless Doorbell is designed to operate reliably in temperatures ranging from -4°F to 140°F, making it suitable for various outdoor conditions.

TROUBLESHOOTING

- **Doorbell not chiming:**
 - Check if the receiver is properly plugged into a working electrical outlet.
 - Ensure the transmitter battery is not depleted. Replace if necessary.
 - Re-pair the transmitter and receiver as described in the 'Operating Instructions' section.
 - Verify that the transmitter is within the operating range (up to 1000 feet) of the receiver. Obstacles like thick walls or metal structures can reduce range.
- **Chime sound is too low or too loud:**
 - Adjust the volume using the 'volume control' button on the receiver.
- **Unexpected chimes:**
 - Ensure no other wireless devices are interfering with the doorbell's frequency.
 - If the issue persists, try un-pairing and re-pairing the transmitter and receiver.

SPECIFICATIONS

Feature	Detail
Manufacturer	SadoTech
Part Number	ST-CX
Item Weight	5 ounces
Product Dimensions	3.25 x 1.5 x 3.5 inches
Item Model Number	B00J4FVZU6
Batteries	2 A23 batteries required (included)
Size	2 push buttons + 1 receiver
Color	White
Material	ABS Plastic
Installation Method	Self-adhesive tape or anchors/screws (included)

Item Package Quantity	1
Number Of Pieces	3
Coverage	Up to 1000 feet (900 feet listed in specifications)
Switch Style	Push button
Battery Cell Type	Alkaline

WARRANTY AND SUPPORT

For specific warranty information, please refer to the product packaging or contact SadoTech customer support directly.

SadoTech is committed to providing high-quality products and customer satisfaction.

For further assistance, please visit the official SadoTech website or contact their customer service department.

[Visit the SadoTech Store on Amazon](#)