

NESPRESSO 3192

Nespresso Aeroccino 3192 Milk Frother Lid Replacement Part User Manual

Model: 3192

PRODUCT OVERVIEW

This document provides instructions for the Nespresso Aeroccino 3192 milk frother lid replacement part. This original Nespresso accessory is designed to ensure proper function and fit for your Aeroccino milk frother.



Image: Top view of the Nespresso Aeroccino 3192 milk frother lid. The lid is clear with a black Nespresso logo in the center, designed to fit the Aeroccino milk frother.

INSTALLATION

Follow these steps to properly install the replacement lid on your Nespresso Aeroccino 3192 milk frother:

1. **Ensure Compatibility:** Verify that your milk frother is a Nespresso Aeroccino model 3192 or Aeroccino +. This lid is specifically designed for these models.
2. **Remove Old Lid (if applicable):** If replacing an existing lid, gently lift and remove the old lid from the frother base.
3. **Position New Lid:** Place the new replacement lid onto the top of the Aeroccino milk frother. Ensure the lid sits securely and evenly on the frother's rim.
4. **Check Seal:** Lightly press down on the lid to confirm it forms a proper seal with the frother. This helps prevent splashes during operation.

USAGE AND COMPATIBILITY

This replacement lid is an essential component for the Nespresso Aeroccino 3192 milk frother. It is designed to:

- Contain milk during the frothing process.
- Prevent splashes and spills.
- Maintain optimal temperature for milk frothing.

The lid is compatible with Nespresso Aeroccino 3192 and Aeroccino + models. Using this original part ensures proper fit and performance.

CLEANING AND CARE

Regular cleaning of the lid is important for hygiene and to maintain its appearance. Follow these guidelines:

- **After Each Use:** Remove the lid and rinse it under warm running water immediately after each use to prevent milk residue from drying.
- **Hand Washing:** Wash the lid by hand using a soft sponge and mild dish soap. Avoid abrasive cleaners or scouring pads, which can scratch the surface.
- **Drying:** Dry the lid thoroughly with a soft cloth or allow it to air dry completely before storing or reattaching to the frother.
- **Dishwasher:** Refer to your main Aeroccino frother manual for specific dishwasher compatibility of its components. Generally, hand washing is recommended for longevity.

TROUBLESHOOTING

If you encounter issues with your replacement lid, consider the following:

Problem	Possible Cause	Solution
Lid does not fit securely.	Incorrect model or improper alignment.	Ensure your frother is an Aeroccino 3192 or Aeroccino +. Realign the lid carefully.
Milk splashes during frothing.	Lid not sealed properly or frother overfilled.	Press the lid down firmly to ensure a good seal. Do not exceed the maximum fill line on your frother.
Lid appears cloudy or stained.	Milk residue buildup or hard water.	Clean immediately after use. Use a soft cloth and mild detergent. For hard water stains, a vinegar solution can be used sparingly, followed by thorough rinsing.

SPECIFICATIONS

Feature	Detail
Brand	NESPRESSO

Feature	Detail
Model Number	3192
Product Type	Aeroccino Milk Frother Lid (Replacement Part)
Material	Clear Plastic with Silicone Seal
Weight	20 grams
Dimensions (Packaging)	10.4 x 9.6 x 1.6 cm
Compatibility	Nespresso Aeroccino 3192, Aeroccino + Milk Frothers

WARRANTY INFORMATION

Specific warranty details for this replacement part are not provided in the product information. Please refer to your original Nespresso Aeroccino milk frother warranty documentation or contact Nespresso customer support for information regarding replacement parts.

CUSTOMER SUPPORT

For further assistance or inquiries regarding your Nespresso Aeroccino 3192 lid, please visit the official Nespresso website or contact their customer service department. You can find contact information on the [Nespresso Brand Store on Amazon](#).

