

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Electrolux](#) /

› [Electrolux 134792700 Heater Installation and Maintenance Manual](#)

## Electrolux 134792700

# Electrolux 134792700 Heater Installation and Maintenance Manual

Brand: Electrolux | Model: 134792700

## INTRODUCTION

This manual provides detailed instructions for the safe and effective installation, operation, and maintenance of your Electrolux 134792700 Heater. Please read all instructions carefully before beginning any procedures.

The Electrolux 134792700 Heater is an OEM replacement part designed for specific dryer models. It operates at 5500 watts and is silver in color, weighing approximately 2.91 pounds.

## SAFETY INFORMATION

- Always disconnect power to the appliance before performing any service or maintenance.
- Wear appropriate personal protective equipment, such as gloves and eye protection.
- If you are unsure about any step, consult a qualified technician.
- Keep all parts and tools away from children.

## SETUP AND INSTALLATION

This section outlines the steps for replacing the heating element in your dryer. It is recommended to follow these steps carefully.

### Tools Required:

- Phillips head screwdriver
- Wrench (for ground wire)
- Marker (optional, for labeling wires)

## Installation Steps:

1. **Disconnect Power:** Unplug the dryer from the electrical outlet. Ensure the power is completely off before proceeding.



Image: Dryer power cord being unplugged from the wall outlet.

2. **Remove Top Panel:** Locate and remove the two screws at the upper back of the dryer. Slide the top panel off.

Your browser does not support the video tag.

Video: A 360-degree view of the Electrolux 134792700 Heater, showing its cylindrical shape, heating coils, and electrical connections. This video provides a detailed look at the component being installed.

3. **Remove Control Panel:** Remove the two additional screws located on the sides of the control panel, near the top. Gently lift and prop the control panel out of the way.
4. **Remove Front Panel:** Locate and remove the four screws securing the front panel. Two are typically at the top corners, and two are at the bottom corners.
5. **Disconnect Door Light:** Carefully disconnect the door light assembly from the front panel. This usually involves pushing it in, rotating, and pulling it out.
6. **Disconnect Wires from Heating Element:** Label the wires (top, middle, bottom) connected to the heating element for easy reassembly. Disconnect all wires by pushing the two parts together and pulling. Loosen the ground wire with a wrench.
7. **Remove Old Heating Element:** Unscrew the long screw holding the heating element in place. Carefully pull the old heating element out of its housing. Note the condition of the old coils.
8. **Install New Heating Element:** Place the new Electrolux 134792700 Heater into the housing. Secure it with the long screw. Reconnect the wires according to your labels (top, middle, bottom) and tighten the ground wire.
9. **Reassemble Dryer:** Reattach the lint trap housing, reconnect the door light, reattach the front panel, secure the control panel, and finally, slide the top panel back into place and secure its screws.
10. **Test Run:** Plug the dryer back into the electrical outlet. Open the dryer door to confirm the interior light turns on. Close the door and start a short cycle to ensure the dryer heats up and operates correctly.

## OPERATING INSTRUCTIONS

After successful installation, operate your dryer according to its original manufacturer's instructions. Ensure the lint trap is clean before each use for optimal performance and safety.

## MAINTENANCE

- **Lint Trap Cleaning:** Clean the lint trap before or after every load to maintain drying efficiency and prevent fire hazards.
- **Vent Cleaning:** Periodically inspect and clean the dryer vent system to ensure proper airflow. Blocked vents can lead to longer drying times and potential overheating.
- **Component Inspection:** Annually inspect the heating element and other internal components for signs of wear or damage.

## TROUBLESHOOTING

If your dryer displays an E64 error code, this typically indicates a "Heater Open Circuit" or a "Heating Element or Wiring Defective" issue. Replacing the heating element, as described in the installation section, is the primary solution for this error.

### Common Issues and Solutions:

- **Dryer Not Heating:** Check the heating element for visible damage or continuity with a multimeter. Ensure all electrical connections are secure.
- **Long Drying Times:** Clean the lint trap and dryer vent thoroughly. Overloading the dryer can also cause this.
- **E64 Error Code:** This indicates a heating element or wiring defect. Replace the heating element following the instructions in the Setup section.

## SPECIFICATIONS

Feature	Detail
Brand	Electrolux
Model Number	134792700
Item Length	13 Inches
Color	Silver
Wattage	5500 watts
Item Weight	2.91 Pounds

UPC	612058423436
Oven Cooking Mode	Forced Air

## WARRANTY INFORMATION

Specific warranty details for the Electrolux 134792700 Heater are not provided in this manual. Please refer to the product packaging or contact Electrolux customer service for warranty information.

## CUSTOMER SUPPORT

For further assistance or technical support regarding your Electrolux 134792700 Heater, please contact Electrolux customer service. Contact information can typically be found on the official Electrolux website or product documentation.

If you receive a damaged product or encounter any problems during use, please contact the seller directly for assistance. They typically respond within 24 hours.

Your browser does not support the video tag.

Video: A general message about after-sales support, encouraging customers to contact the seller for product issues.