

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Solis](#) /

› [Solis Fan-Tastic 750 Pedestal Fan User Manual](#)

Solis 750

Solis Fan-Tastic 750 Pedestal Fan User Manual

Model: 750 | Brand: Solis

[Introduction](#)

[Safety Instructions](#)

[Package Contents](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Solis Fan-Tastic 750 Pedestal Fan. This powerful and quiet fan is designed to provide effective and comfortable cooling, featuring an active anion generator for improved air quality. This manual provides detailed instructions for safe operation, assembly, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.





Image 1.1: The Solis Fan-Tastic 750 Pedestal Fan, showcasing its sleek design and sturdy base.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not operate the fan with a damaged cord or plug. If damaged, contact authorized service personnel.
- Keep fingers, hair, and loose clothing away from the rotating blades.
- Do not insert any objects into the fan grille.

- Always unplug the fan before cleaning or performing any maintenance.
- Do not use the fan in wet or damp locations, such as bathrooms.
- Place the fan on a stable, flat surface to prevent tipping.
- This appliance is for household use only. Do not use outdoors or for commercial purposes.
- The fan features a safety shut-off function: the fan will automatically stop if contact is made with the protective grille.



Image 2.1: Illustrates the safety shut-off feature, where the fan automatically stops if the grille is touched.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, contact your retailer immediately.

- Solis Fan-Tastic 750 Pedestal Fan Unit (main body, fan head, base)
- Remote Control (requires 2 AAA batteries, not included)
- User Manual (this document)



Image 3.1: The Solis Fan-Tastic 750, highlighting its 5-year guarantee.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Solis Fan-Tastic 750 fan.

- 1. Base Assembly:** Place the fan base on a flat, stable surface.
- 2. Attach Pedestal:** Insert the main pedestal pole into the base, ensuring it clicks securely into place.
- 3. Connect Fan Head:** Carefully attach the fan head unit to the top of the pedestal pole. Ensure all connections are firm.
- 4. Power Connection:** Plug the power cord into a suitable electrical outlet.
- 5. Remote Control Batteries:** Open the battery compartment on the remote control and insert 2 AAA batteries, observing polarity (+/-).





Image 4.1: Side view of the fan, illustrating the connection points for assembly.

5. OPERATING INSTRUCTIONS

Your Solis Fan-Tastic 750 can be operated using the control panel on the unit or the included remote control.

5.1. Control Panel and Display

The fan features an LCD display and control buttons on the main unit for easy access to all functions.





Image 5.1: Detailed view of the fan's control panel and LCD display.

5.2. Power On/Off and Speed Adjustment

- **Power:** Press the **Power** button on the control panel or remote to turn the fan on or off.
- **Speed:** The fan offers 3 adjustable speed settings. Press the **Speed** button repeatedly to cycle through low, medium, and high speeds. The current speed will be indicated on the LCD display.
- **Foot Switch:** For added convenience, a foot switch is located on the base of the fan. This allows you to activate/deactivate the fan and adjust the speed without bending down.



Image 5.2: Demonstrates the convenient foot switch located on the fan's base.

5.3. Operating Modes

Press the **MODE** button to cycle through the available operating modes:

- **Normal Mode:** Provides a continuous airflow at the selected speed.
- **Natural Mode:** Simulates natural breeze by varying fan speed.
- **Sleep Mode:** Gradually reduces fan speed over time for quiet operation during sleep.

5.4. Oscillation

The fan offers both horizontal and vertical oscillation to distribute air more widely.

- Press the **SWING** button to activate or deactivate horizontal oscillation.
- The fan also supports vertical oscillation for comprehensive air circulation.

5.5. Anion Generator

The built-in anion generator helps improve air quality and promote well-being.

- Press the **ANION** button to turn the anion generator on or off.

5.6. Timer Function

The timer function allows you to program the fan to automatically shut off after a set period.

- Press the **TIMER** button repeatedly to set the desired shut-off time, from 0.5 to 7 hours, in 0.5-hour increments.
- The set time will be displayed on the LCD screen.

6. MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and appearance of your fan.

- **Always unplug the fan from the power outlet before cleaning.**
- **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Grille Cleaning:** Use a vacuum cleaner with a brush attachment to remove dust from the fan grille. For deeper cleaning, the front grille can be carefully removed (refer to assembly instructions in reverse) to access the blades. Ensure the fan is completely unplugged before attempting this.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging.

7. TROUBLESHOOTING

If you experience issues with your Solis Fan-Tastic 750, please consult the table below before contacting customer support.

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power outlet faulty; safety shut-off activated.	Ensure power cord is securely plugged in. Test outlet with another device. Check if anything is obstructing the grille.
Weak airflow.	Fan speed too low; grille or blades are dusty.	Increase fan speed. Clean the fan grille and blades as per maintenance instructions.
Fan is noisy.	Fan not on a stable surface; loose parts; dust accumulation.	Place fan on a flat, stable surface. Check for any loose components. Clean the fan thoroughly.
Remote control not working.	Batteries are dead or incorrectly inserted; remote not aimed at sensor.	Replace batteries (2 AAA). Ensure correct polarity. Aim remote directly at the fan's control panel sensor.

8. TECHNICAL SPECIFICATIONS

Brand:	Solis
Model Number:	750
Color:	Silver/Black
Diameter:	40 cm
Power:	60 Watts
Voltage:	230V AC
Material:	Plastic
Number of Speeds:	3
Airflow (max):	67 m ³ /min

Noise Level (max):	63 dB(A) (at step 3)
Weight:	8.7 kg
Dimensions (H x Ø):	125 x 40 cm
Remote Control Batteries:	2 x AAA (not included)



130 cm

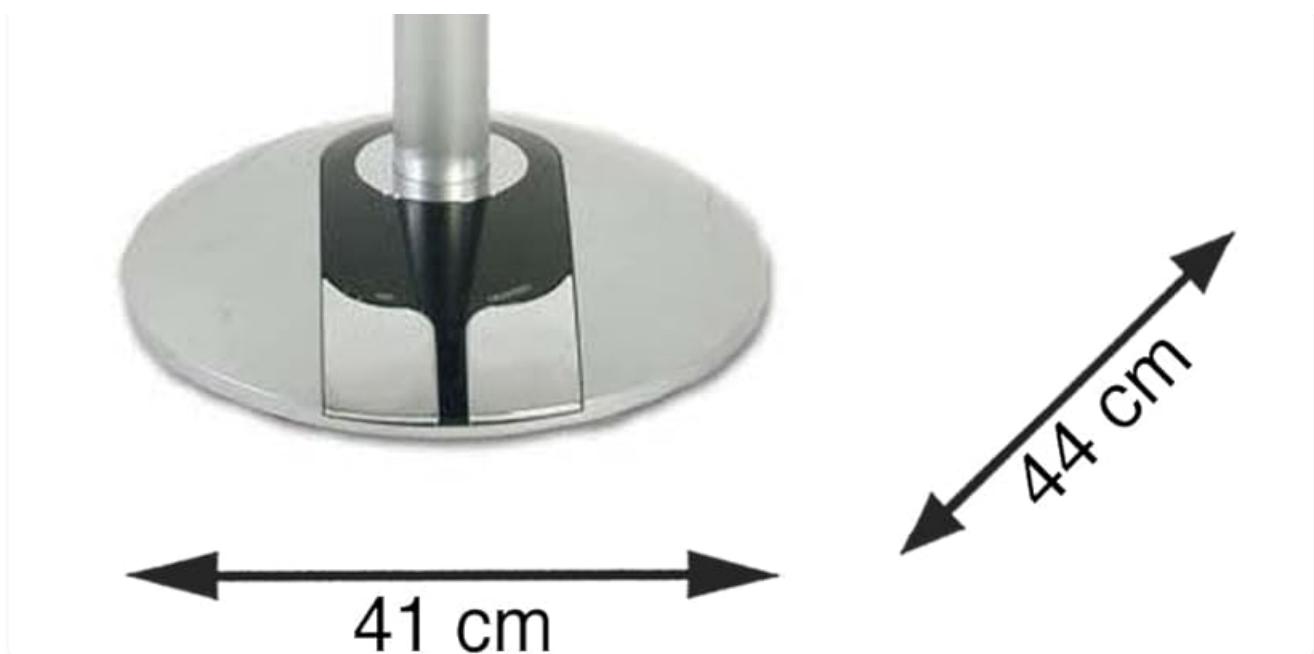


Image 8.1: Visual representation of the fan's dimensions.

9. WARRANTY AND SUPPORT

Solis products are manufactured with high-quality standards and come with a manufacturer's warranty. The Solis Fan-Tastic 750 includes a 5-year guarantee, subject to registration.

- **Warranty Registration:** To activate your 5-year guarantee, please register your product at www.solis.com/registration.
- **Customer Support:** For technical assistance, spare parts, or warranty claims, please contact Solis customer service or your local retailer. Refer to the Solis website for contact information in your region.