

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for KRELL SACD Standard (Model RT306468) User Manual

Redi-Remote RT306468

Redi-Remote Replacement Remote Control User Manual

For KRELL SACD Standard (Model 306468)

1. INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed specifically for use with KRELL SACD Standard units, model number 306468. This remote is a custom-built replacement and is not an original KRELL product. It is engineered to perform all functions of the original remote for the specified KRELL unit.

2. PRODUCT OVERVIEW

The Redi-Remote replacement remote control offers a straightforward solution for operating your KRELL SACD Standard. It is pre-programmed and requires no additional setup for compatibility with your device.

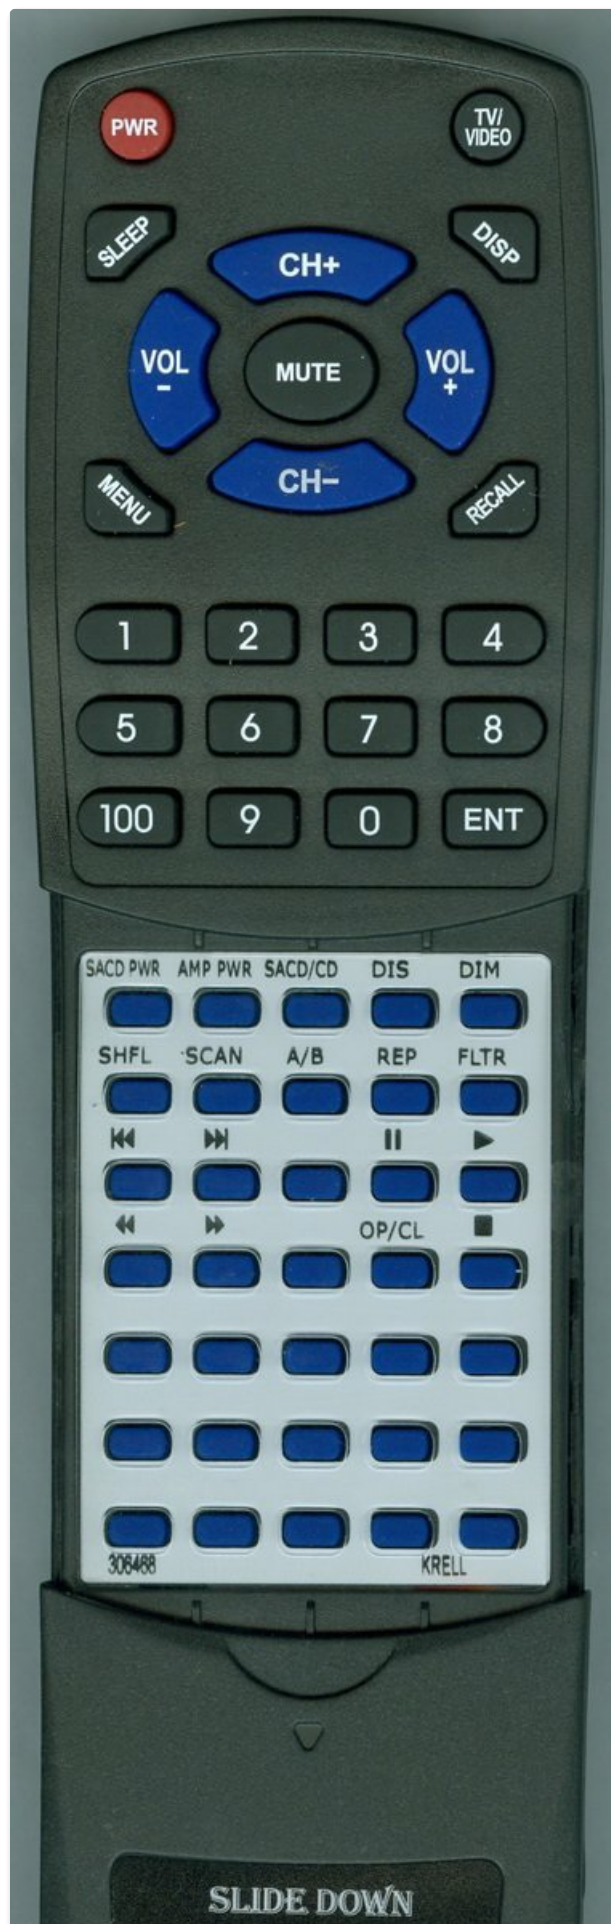


Figure 1: Redi-Remote Replacement Remote Control. This image displays the front view of the remote control, highlighting its button layout and ergonomic design.

Key Features:

- **Dedicated Functionality:** This remote is designed exclusively for the KRELL SACD Standard (Model 306468) and cannot be programmed to control other auxiliary devices.
- **No Programming Required:** Ready to use out of the box with the specified KRELL unit.
- **Compact Design:** Measures approximately 7.5 inches (19 cm) in length, 2.25 inches (5.7 cm) in width, and 0.75 inches (1.9 cm) in thickness.
- **Standard Operation:** Operates using infrared (IR) technology.

3. SETUP

Battery Installation:

The remote control requires four (4) AAA batteries for operation. These batteries are typically included with your purchase.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or press the latch to open the battery compartment.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Once batteries are installed, the remote is ready for use with your KRELL SACD Standard unit.

4. OPERATING INSTRUCTIONS

This Redi-Remote is designed to replicate the full functionality of your original KRELL SACD Standard remote. Point the remote directly at the KRELL SACD Standard unit for optimal performance.

Accessing Lower Half Buttons:

Some functions may be located on buttons covered by a sliding panel. To access these buttons:

- Locate the cover on the lower half of the remote control.
- Gently slide this cover downwards to reveal additional buttons and functions.
- Slide the cover back up to protect the buttons when not in use.

Refer to your KRELL SACD Standard's original manual for specific button functions if you are unfamiliar with the layout.

5. MAINTENANCE

To ensure the longevity and proper functioning of your remote control:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace all four AAA batteries simultaneously when the remote's performance diminishes. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

- If your remote control is not functioning as expected, consider the following:
- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh AAA batteries if necessary.
 - **Line of Sight:** Confirm there are no obstructions between the remote control and the KRELL SACD Standard unit. The remote operates via infrared, requiring a clear line of sight.
 - **Remote Compatibility:** Verify that this remote is indeed for the KRELL SACD Standard, model 306468. This remote is not universal and will not work with other devices.
 - **Unit Power:** Ensure your KRELL SACD Standard unit is powered on and functioning correctly.

If issues persist after performing these checks, please refer to the Warranty and Support section for further assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RT306468
Compatible Devices	KRELL SACD Standard (Model 306468)
Connectivity Technology	Infrared (IR)
Power Source	4 x AAA Batteries (included)
Product Dimensions	7 x 2.5 x 1 inches (17.78 x 6.35 x 2.54 cm)
Item Weight	4.5 ounces (127.57 grams)
Special Feature	No Programming Required
Max Number of Supported Devices	1

8. WARRANTY AND SUPPORT

This Redi-Remote replacement remote control is manufactured by Redi-Remote. For any concerns regarding the remote control after purchase, it is recommended to contact the seller or manufacturer directly for support. Please retain your proof of purchase for warranty claims or support inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00JAKSOP4>

More documents and user manuals: <https://manuals.plus/>