



[Manuals.plus](#) /

> [Redi-Remote](#) /

> Redi-Remote Replacement Remote Control User Manual for MARANTZ Models RC870CC, CC870, ZK223W0010

Redi-Remote RTZK223W0010

Redi-Remote Replacement Remote Control User Manual

FOR MARANTZ MODELS RC870CC, CC870, ZK223W0010

1. Introduction

This document serves as the official instruction manual for the Redi-Remote replacement remote control, specifically designed for compatibility with MARANTZ audio/video units. This remote is a custom-built replacement and is not an original MARANTZ product. It is engineered to perform all functions of the original remote for the specified MARANTZ models: **RC870CC, CC870, and ZK223W0010**. This remote does not require programming and cannot be configured to control auxiliary devices.

2. Product Overview

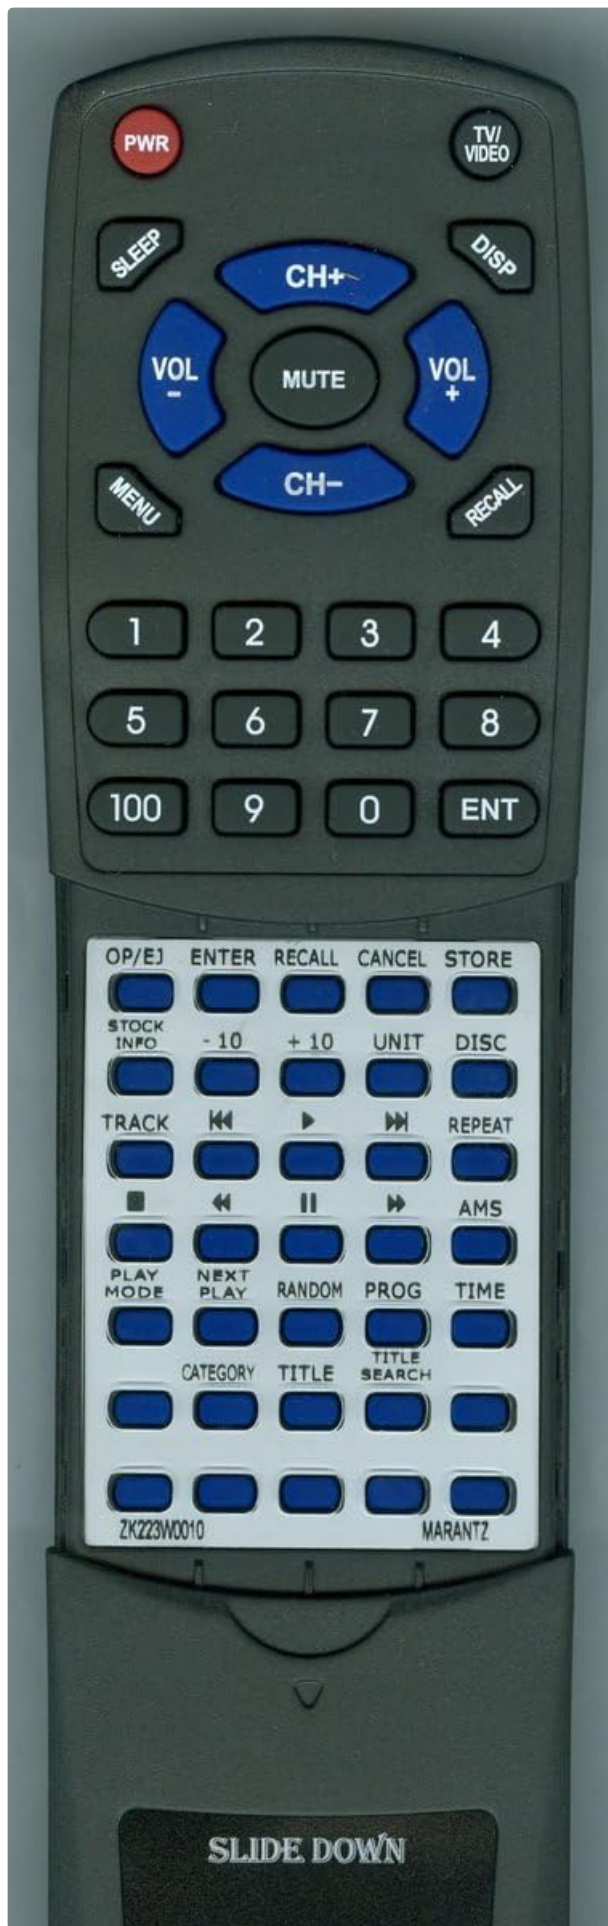


Image: Front view of the Redi-Remote replacement remote control. The remote is dark gray with a silver-colored lower section that slides down to reveal additional buttons. The upper section features power, volume, channel, and navigation buttons, while the lower section contains numerical and media control buttons.

The Redi-Remote replacement remote control features a standard layout with a primary control area and a secondary area concealed by a sliding cover. The remote measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness.

Button Functions:

- **PWR (Power):** Turns the MARANTZ unit on or off. (Red button, top left)
- **TV/VIDEO:** Selects the TV/Video input source. (Top right)
- **SLEEP:** Activates or deactivates the sleep timer function.
- **DISP (Display):** Changes the information displayed on the unit's screen.
- **VOL +/- (Volume):** Adjusts the audio volume level. (Blue buttons)
- **MUTE:** Silences or restores the audio output.
- **CH +/- (Channel):** Changes channels or navigates through menus. (Blue buttons)
- **MENU:** Accesses the unit's main menu.
- **RECALL:** Recalls previous settings or information.
- **Number Pad (0-9, 100, ENT):** Used for direct input of numbers (e.g., track numbers, time settings) and for selecting channels. "100" button for direct access to channels 100 and above. "ENT" confirms numerical entries.

Lower Section Buttons (Slide Down to Reveal):

The lower section of the remote is revealed by sliding down the cover labeled "SLIDE DOWN". This section contains controls primarily for media playback and advanced functions.

- **OP/EJ (Open/Eject):** Opens or ejects the disc tray.
- **ENTER:** Confirms selections within menus or functions.
- **RECALL:** Recalls specific settings or memory.
- **CANCEL:** Cancels the current operation or menu.
- **STORE:** Saves current settings or preferences.
- **STOCK INFO:** Displays stock information (functionality depends on the MARANTZ unit).
- **-10 / +10:** Skips backward or forward by 10 units (e.g., tracks, minutes).
- **UNIT:** Selects different units or components.
- **DISC:** Selects different discs in a multi-disc changer.
- **TRACK (|< / >|, ||, >):**
 - |<: Skip to the beginning of the current track or previous track.
 - >|: Skip to the next track.
 - ||: Pause playback.
 - >: Play/Resume playback.
 - << / >>: Fast reverse / Fast forward.
- **REPEAT:** Repeats playback (e.g., single track, entire disc).
- **AMS (Automatic Music Search):** Initiates automatic music search.
- **PLAY MODE:** Cycles through different playback modes.
- **NEXT PLAY:** Selects the next item in a playlist.
- **RANDOM:** Activates random playback.
- **PROG (Program):** Enters program mode for creating custom playlists.
- **TIME:** Displays or adjusts time-related functions.
- **CATEGORY:** Navigates through content categories.

- **TITLE:** Accesses disc titles or menu titles.
- **TITLE SEARCH:** Initiates a search for specific titles.

3. Setup

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. (Note: 4 AAA batteries are included with the remote).
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is ready for use immediately after battery installation. No programming is required.

4. Operating Instructions

This Redi-Remote is designed to function identically to the original MARANTZ remote for models RC870CC, CC870, and ZK223W0010. Ensure a clear line of sight between the remote control and the MARANTZ unit's infrared sensor.

4.1 Basic Functions

- To turn the unit **On/Off**: Press the **PWR** button.
- To adjust **Volume**: Press the **VOL +** or **VOL -** buttons.
- To **Mute** audio: Press the **MUTE** button. Press again to unmute.
- To change **Channels**: Press the **CH +** or **CH -** buttons.
- To select **Input Source**: Press the **TV/VIDEO** button.

4.2 Advanced Functions (Lower Section)

Slide down the cover labeled "SLIDE DOWN" to access the advanced media and system control buttons. Refer to the "Product Overview" section for a detailed description of each button's function.

- **Media Playback:** Use the **TRACK** buttons (Play, Pause, Skip, Fast Forward, Fast Reverse) for controlling audio or video playback.
- **Disc Operations:** Use **OP/EJ** for disc tray control, **DISC** for multi-disc changers.
- **Menu Navigation:** Use **MENU**, **ENTER**, **CANCEL** for navigating and confirming selections within the unit's menus.
- **Programming and Search:** Utilize **PROG**, **RANDOM**, **TITLE SEARCH** for advanced content management.

5. Troubleshooting

- **Remote not responding:**
 - Ensure the remote has fresh batteries and they are inserted with correct polarity.
 - Check for any obstructions between the remote control and the MARANTZ unit's infrared sensor.
 - Confirm you are pointing the remote directly at the unit.

- **Specific buttons not working:**

- This remote is designed for specific MARANTZ models. Ensure your unit is one of the compatible models (RC870CC, CC870, ZK223W0010).
- Clean the remote's surface and buttons with a soft, dry cloth to remove any debris that might impede button presses.

- **Remote does not control other devices:**

- This Redi-Remote is a dedicated replacement for the specified MARANTZ units and cannot be programmed to control auxiliary devices.

6. Specifications

Brand	Redi-Remote
Compatible MARANTZ Models	RC870CC, CC870, ZK223W0010
Redi-Remote Model Number	RTZK223W0010
Product Dimensions	7 x 2.5 x 1 inches (approximately)
Item Weight	4.5 ounces
Batteries Required	4 AAA batteries (included)
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Required
Max Number of Supported Devices	1 (Dedicated to the specified MARANTZ unit)

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace all four AAA batteries when the remote's performance diminishes or if it stops responding. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.

8. Support

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. This remote is a custom replacement and direct support is provided by the manufacturer/seller.

No specific warranty information is provided in the product details. Please refer to your purchase documentation or contact the seller for details regarding warranty coverage.

