

[Manuals.plus](#) /

> [KidKraft](#) /

> KidKraft 53017 Grocery Marketplace Instruction Manual

KidKraft 53017

KidKraft 53017 Grocery Marketplace

Instruction Manual

INTRODUCTION

Welcome to the world of imaginative play with your new KidKraft 53017 Grocery Marketplace! This comprehensive manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure a safe and enjoyable experience for your child.

Product Overview

The KidKraft Grocery Marketplace is designed to inspire hours of creative role-play, allowing young shoppers to engage in realistic grocery store scenarios. Key features include:

- Cash register that opens and closes
- Convenient storage space under the counter
- Chalkboard surface for displaying the daily specials
- Large enough that multiple children can play at once
- Smart, sturdy construction





Figure 1: Fully assembled KidKraft 53017 Grocery Marketplace.

SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembly and use of this product. Keep this manual for future reference.

- **Adult Assembly Required:** This product contains small parts and requires adult assembly.
- **Supervision:** Children should always be supervised while playing with this product.
- **Choking Hazard:** Keep small parts away from children under 3 years of age during assembly.
- **Stability:** Ensure the marketplace is placed on a flat, stable surface to prevent tipping.
- **Maintenance:** Regularly inspect the product for loose parts, damage, or wear. Discontinue use if any damage is found.

PACKAGE CONTENTS

Before beginning assembly, please ensure all components are present and undamaged. Refer to the parts list included in your product packaging. The main components typically include:

- Wooden frame pieces
- Countertop and shelves
- Fabric awning
- Cash register unit
- Storage bins
- Assembly hardware (screws, dowels, etc.)

ASSEMBLY INSTRUCTIONS

Assembly of the KidKraft Grocery Marketplace is designed to be straightforward. Please follow the detailed, step-by-step instructions provided in the separate assembly manual included with your product. A Phillips head screwdriver is typically required.

1. Unpack all components and verify against the parts list.
2. Identify all hardware and separate by type.
3. Follow the numerical sequence of steps in the assembly manual, ensuring all screws are tightened securely but do not overtighten.
4. Attach the fabric awning according to the instructions.
5. Once assembled, place the cash register and storage bins in their designated areas.



Figure 2: Children enjoying the assembled marketplace.

OPERATING YOUR GROCERY MARKETPLACE

The KidKraft Grocery Marketplace offers various interactive elements for engaging play.

Using the Cash Register

The included cash register features a functional drawer that opens and closes, allowing children to simulate transactions. It also includes a pretend card reader for swiping play credit cards.



Figure 3: Child interacting with the cash register.



Figure 4: Close-up of a child pressing buttons on the cash register.

Utilizing Storage and Display Areas

The marketplace includes multiple shelves and two removable storage bins, perfect for organizing and displaying play food items. The chalkboard surface allows children to write daily specials or product names, enhancing the realistic play experience.



Figure 5: Child organizing play food in the marketplace bins.



Figure 6: Child using the chalkboard feature to label items.

CARE AND MAINTENANCE

Proper care will extend the life of your KidKraft Grocery Marketplace.

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap. Do not use abrasive cleaners or harsh chemicals. Dry thoroughly.
- **Storage:** Store the marketplace indoors in a dry environment to prevent damage from moisture or extreme temperatures.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Chalkboard:** Use only standard chalk on the chalkboard surface. Wipe clean with a damp cloth.

TROUBLESHOOTING

If you encounter any issues with your KidKraft Grocery Marketplace, please refer to the following common solutions:

Problem	Possible Cause	Solution
Marketplace feels wobbly after assembly.	Loose screws or uneven surface.	Check and tighten all assembly screws. Ensure the marketplace is on a flat, level floor.
Cash register drawer sticks.	Debris in the track or misalignment.	Inspect the drawer track for any obstructions. Ensure the cash register is correctly seated on the countertop.
Chalkboard surface not erasing cleanly.	Using incorrect writing tools or residue buildup.	Use only standard chalk. Wipe with a damp cloth and dry thoroughly. For stubborn marks, a mild soap solution can be used.

PRODUCT SPECIFICATIONS

Attribute	Detail
Model Number	53017
Material Type	Engineered Wood
Product Dimensions (L x W x H)	60.96 x 41.02 x 120.02 cm (24 x 16.15 x 47.25 inches)
Item Weight	9.48 kg (20.9 lbs)
Recommended Age	18 months and up
Assembly Required	Yes
Color	Multicolor

WARRANTY INFORMATION

KidKraft products are manufactured with quality and durability in mind. For specific warranty details regarding your KidKraft 53017 Grocery Marketplace, please refer to the warranty card included with your purchase or visit the official KidKraft website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

Should you have any questions, require replacement parts, or need further assistance, please contact KidKraft customer support. Contact information can typically be found on the KidKraft website or on the product packaging.

Note: Always provide your product model number (53017) when contacting customer support for faster service.

