

Singtrix SGTX2

Singtrix Portable Karaoke Machine Instruction Manual

Model: SGTX2

Contents

Setup

Operation

Product Overview

Maintenance

Package

Troubleshooting

Specifications

Support



1. PRODUCT OVERVIEW

The Singtrix Portable Karaoke Machine (Model SGTX2) is an all-in-one vocal effects system designed to enhance singing performance. It features studio-quality vocal effects, including pitch correction, harmonies, reverb, and delay. The system is compatible with various music sources, including YouTube karaoke videos and MP3s, and includes a voice-cancellation option for standard songs.



Figure 1: Singtrix Portable Karaoke Machine System Components.

Key Features:

- **Advanced Vocal Effects:** Over 375 professional vocal effects, including natural pitch-correction, hard-tune, harmonies, reverb, and delay.
- **4-Part Harmonies:** Instant 4-part harmonies and choir effects via the "HIT" button.
- **Integrated PA System:** 40-Watt 2.1 Stereo PA speaker with built-in subwoofer for immersive sound.
- **Versatile Music Compatibility:** Works with YouTube karaoke videos, MP3s, and streaming music via a 3.5mm audio input.
- **Voice Cancellation:** Option to create karaoke tracks from standard songs.
- **Adjustable Skill Levels:** Settings for beginner, intermediate, and professional users.

2. PACKAGE CONTENTS

Verify that all the following items are included in your Singtrix Stadium Bundle:

- Studio Controller with 350+ built-in effects
- 1 Singtrix Microphone with Hit Effect button
- 1 40-Watt 2.1 Stereo Speaker with Subwoofer
- 1 Full-sized Microphone Stand with boom-arm
- 1 Mobile Device Holder stand attachment
- Cable Package (includes necessary audio and power cables)



Figure 2: The Singtrix Studio Controller, featuring an LCD screen, effect, skill level, and volume controls.



Figure 3: The Singtrix Pro Quality Microphone, equipped with a dedicated Hit Effect control button.



Figure 4: The 40-Watt 2.1 Stereo Speaker, featuring an integrated subwoofer for enhanced audio.

3. SETUP INSTRUCTIONS

Follow these steps for a quick and easy setup of your Singtrix system:

1. **Assemble the Microphone Stand:** Securely assemble the full-sized microphone stand and attach the mobile device holder.
2. **Position Components:** Place the 40-Watt speaker on a stable surface. Position the Studio Controller within easy reach, ideally attached to the microphone stand using the provided holder.
3. **Connect the Microphone:** Plug the Singtrix Microphone into the Microphone Input 1 on the Studio Controller.
4. **Connect the Speaker:** Connect the speaker to the Studio Controller using the appropriate audio cable from the cable package. Ensure a secure connection.
5. **Connect Music Source:** Use the 3.5mm audio input on the Studio Controller to connect your music device (smartphone, tablet, computer, MP3 player).
6. **Power On:** Connect the power adapters to the Studio Controller and the speaker, then plug them into a power outlet. Turn on the power for both units.



5 MINUTE SETUP

Figure 5: Visual guide for the 5-minute setup process, showing all components ready for connection.

4. OPERATING INSTRUCTIONS

4.1 Studio Controller Functions

The Studio Controller is the central hub for managing your vocal effects and system settings.

- **Effects Knob:** Rotate to browse and select from over 375 vocal effects. The LCD screen will display the selected effect.
- **Skill Level Knob:** Adjusts the level of pitch correction and vocal enhancement. Options typically include Beginner, Intermediate, and Professional.
- **Song Voice Knob:** Reduces or removes original vocals from a music track when using the voice-cancellation feature.
- **Mic Volume Knob:** Controls the volume of your microphone input.
- **Main Volume Knob:** Adjusts the overall output volume of the system.
- **HIT Effect Button:** Activates instant harmonies or other designated "HIT" effects, transforming your voice with a single press.

4.2 Microphone Usage

The Singtrix microphone is designed for optimal vocal performance and includes a dedicated button for quick effect activation.

- Hold the microphone approximately 2-4 inches from your mouth for best sound capture.
- Press the **HIT** button on the microphone to activate the pre-assigned "HIT" effect on the Studio Controller. This often triggers harmonies or other dramatic vocal changes.

4.3 Connecting Music Sources

The Singtrix system is designed to work with a wide range of audio sources.

- Connect your smartphone, tablet, or computer to the 3.5mm audio input on the Studio Controller using the provided cable.
- Play karaoke tracks from YouTube, MP3 files, or streaming music services through your connected device.
- Adjust the volume on your music device and the Singtrix Main Volume knob for balanced sound.

5. MAINTENANCE

Proper care will ensure the longevity and optimal performance of your Singtrix system.

- **Cleaning:** Wipe down the Studio Controller, microphone, and speaker with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the system in a clean, dry place away from direct sunlight and extreme temperatures. Consider packing it away to prevent dust accumulation.
- **Cable Care:** Avoid sharp bends or kinks in the cables. Store them neatly to prevent damage.
- **Power Off:** Always power off and unplug the system when not in use for extended periods.

6. TROUBLESHOOTING

If you encounter issues with your Singtrix system, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound from speaker.	Speaker not powered on, cables loose, volume too low.	Ensure speaker is powered and connected. Check all audio cables. Increase Main Volume and speaker volume.
Microphone not working.	Microphone not connected to Input 1, Mic Volume too low, faulty microphone.	Verify microphone is plugged into Input 1. Increase Mic Volume. Test with another microphone if available.
Music not playing through system.	Music device not connected, device volume too low, incorrect input selected (if applicable).	Ensure music device is connected via 3.5mm audio input. Increase volume on music device.
Distorted sound.	Volume levels too high (clipping), faulty cable.	Reduce Main Volume and Mic Volume. Check audio cables for damage.
Vocal effects not applying.	Effect knob set to 'Off' or basic setting, Skill Level too low.	Rotate the Effects knob to select a desired effect. Adjust the Skill Level knob.

7. SPECIFICATIONS

Feature	Detail
Model Number	SGTX2
Item Weight	21 Pounds
Product Dimensions	22 x 15 x 15 inches
Power Source	Corded Electric
Material	Plastic
Output Wattage	40 Watts
Microphone Form Factor	Handheld
Connectivity Technology	3.5mm Audio Input, Stereo Speaker Outputs
Compatible Devices	Any device with analog audio output (tablet, smartphone, MP3 player, computer)
Special Features	Vocal effects, vocal tuning, voice changer/morphing
Included Components	Cables, Microphone, Stand



8. WARRANTY AND SUPPORT

For product inquiries, service, or support, please contact Singtrix directly. They are committed to resolving any issues and ensuring customer satisfaction.

Note: Specific warranty details may vary. Please refer to your product packaging or the official Singtrix website for the most current warranty information.



Related Documents - SGTx2

	<p>Singtrix Quick Start Guide: Tips for Singing Like a Rockstar</p> <p>Learn how to set up and use your Singtrix Party Bundle with this quick start guide. Discover tips for optimizing vocal effects, mixing music, and troubleshooting common issues for an amazing singing experience.</p>
	<p>Singtrix Party Bundle Quick-Start Guide: Tips, Setup, and Troubleshooting</p> <p>A comprehensive quick-start guide for the Singtrix Party Bundle, covering setup, optimal volume mixing, finding karaoke music, using presets, vocal tips, troubleshooting common issues, and component specifications.</p>