

[Manuals.plus](#) /

> [Wasabi Power](#) /

> Wasabi Power Battery and Charger Kit for Leica BP-DC14, BP-DC14-U, 18536, and Leica C Cameras Instruction Manual

## Wasabi Power KIT-BTR-BCN10-LCH-BCN10-02

# Wasabi Power Battery and Charger Kit Instruction Manual

For Leica BP-DC14, BP-DC14-U, 18536, and Leica C Cameras

## 1. INTRODUCTION

Thank you for choosing the Wasabi Power Battery and Charger Kit. This kit provides a reliable power solution for your Leica C camera, featuring two high-capacity batteries and a versatile charger. This manual will guide you through the proper setup, operation, and maintenance to ensure optimal performance and longevity of your product.

## 2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 2 x Wasabi Power BP-DC14/BP-DC14-U Compatible Batteries (3.7V, 1050mAh)
- 1 x Wasabi Power Mini Rapid AC Charger
- 1 x Car Charging Adapter
- 1 x European Plug Adapter



Image: Complete Wasabi Power Battery and Charger Kit components.

## 3. SETUP

### 3.1 Charging the Batteries

The Wasabi Power charger is designed for convenience and can be used with various power sources.

1. **Insert Battery:** Carefully insert the Wasabi Power battery into the charger slot, ensuring the positive (+) and negative (-) terminals align correctly.
2. **Connect to Power:** Choose your preferred power source:
  - **AC Wall Outlet (US):** Fold out the US plug from the charger and plug it directly into a standard AC wall outlet (110-240V).
  - **AC Wall Outlet (Europe):** Attach the European plug adapter to the US plug, then plug into a European AC wall outlet.
  - **Car Adapter:** Connect the car charging adapter cable to the charger, then plug the adapter into your vehicle's 12V car outlet.
3. **Charging Indicator:** The LED indicator on the charger will illuminate to show charging status. Refer to the 'Troubleshooting' section for details on indicator behavior.
4. **Charging Complete:** Once charging is complete, disconnect the charger from the power source and remove the battery.



*Image: Wasabi Power Mini Rapid AC Charger with US plug.*



*Image: Wasabi Power Charger with Car Charging Adapter.*

### **3.2 Inserting Batteries into Camera**

Refer to your Leica C camera's instruction manual for specific details on battery compartment access and insertion. Generally, open the battery compartment cover, align the battery according to the polarity indicators, and gently push it into place until it locks securely. Close the compartment cover.

## **4. OPERATING INSTRUCTIONS**

Once the batteries are charged and inserted into your camera, you can operate your device as usual. The Wasabi Power batteries are designed to meet or exceed OEM standards, providing reliable power for your photography needs.

- Ensure batteries are fully charged before important shooting sessions.
- Always carry a spare charged battery for extended use.
- The charger is compatible with original Leica BP-DC14/BP-DC14-U batteries, and Wasabi Power batteries are compatible with original Leica chargers.

## 5. MAINTENANCE

Proper care will extend the life of your batteries and charger:

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid fully discharging lithium-ion batteries frequently, as this can reduce their lifespan.
- Clean battery contacts and charger terminals periodically with a dry, soft cloth to ensure good connection.
- Do not disassemble, crush, or puncture the batteries or charger.
- Dispose of old batteries responsibly according to local regulations.

## 6. TROUBLESHOOTING

- **Charger LED always green:** Some chargers may display a green light when plugged in, regardless of battery presence or charge status. This indicates power is supplied to the charger. The LED may change color (e.g., red/orange) when a depleted battery is inserted and actively charging, then revert to green when fully charged. If the LED remains green with a depleted battery, ensure the battery is correctly seated and try a different power outlet.
- **Battery not charging:** Ensure the battery is correctly inserted into the charger and the charger is securely connected to a working power source. Check for any debris on the battery or charger contacts.
- **Battery not powering camera:** Ensure the battery is fully charged and correctly inserted into the camera. If the issue persists, try a different charged battery.
- **Reduced battery life:** Battery performance can degrade over time with repeated charge cycles. Ensure proper storage and charging practices. Extreme temperatures can also affect battery performance.

## 7. SPECIFICATIONS

- **Battery Type:** Lithium-Ion
- **Battery Voltage:** 3.7V
- **Battery Capacity:** 1050mAh (3.9Wh)
- **Charger Input Voltage:** AC 110-240V (US/EU plug), DC 12V (Car Adapter)
- **Charger Output Voltage:** 4.2V DC
- **Compatibility:** Leica BP-DC14, BP-DC14-U, 18536, Leica C
- **Model Number:** KIT-BTR-BCN10-LCH-BCN10-02
- **Item Weight:** 6.4 ounces (total kit)

## 8. WARRANTY AND SUPPORT

This Wasabi Power product includes a **3-year manufacturer warranty**. For warranty claims, technical support, or any questions regarding your product, please contact Wasabi Power customer service through their official website or the retailer where the product was purchased. Please retain your proof of purchase for warranty validation.