

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Enders](#) /

› [Enders DALGETY 3-Burner Gas Camping Stove User Manual](#)

Enders 1852

Enders DALGETY 3-Burner Gas Camping Stove User Manual

Model: 1852

INTRODUCTION

Thank you for choosing the Enders DALGETY 3-Burner Gas Camping Stove. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new camping stove. Please read these instructions carefully before use and retain them for future reference. The Enders Dalgety stove line is designed for superior quality and attractive design, offering various finishes and equipment features. This model is equipped with three powerful burners for versatile outdoor cooking.

SAFETY INFORMATION

WARNING: Failure to follow these instructions could result in fire, explosion, or carbon monoxide poisoning, which could cause property damage, personal injury, or death.

- Use outdoors only. Do not operate this appliance in an enclosed area such as a camper, tent, car, or home.
- Read all instructions before operating the appliance.
- Keep children and pets away from the stove during operation.
- Do not leave the operating appliance unattended.
- Ensure proper ventilation.
- Always connect and disconnect the gas cylinder outdoors, away from any ignition source.
- Check for gas leaks using a soapy water solution before each use. Never use a flame to check for leaks.
- Do not modify this appliance. Any modification may be dangerous.
- Keep flammable materials away from the stove.
- Allow the stove to cool completely before cleaning or storing.

PACKAGE CONTENTS

Verify that all components are present and undamaged:

- Enders DALGETY 3-Burner Gas Camping Stove (Model 1852)
- Chrome-plated steel grid
- Instruction Manual

Note: Gas cylinder and regulator are sold separately.

SETUP AND ASSEMBLY

1. **Unpack the Stove:** Carefully remove all packaging materials. Place the stove on a stable, level, non-combustible surface. Ensure the practical rubber feet are securely in place for added stability.
2. **Connect Gas Supply:**
 - Ensure the stove's control knobs are in the "OFF" position.
 - Connect the gas regulator (not included) to the gas cylinder according to the regulator's instructions.
 - Connect the other end of the regulator hose to the gas inlet on the stove. Hand-tighten securely. Do not overtighten.
 - Perform a leak test: Open the gas cylinder valve. Apply a soapy water solution to all gas connections. If bubbles appear, there is a leak. Close the gas valve immediately and re-tighten connections. Repeat the leak test. Do not use the stove if a leak persists.
3. **Place Cooking Grid:** Position the chrome-plated steel grid securely over the burners.

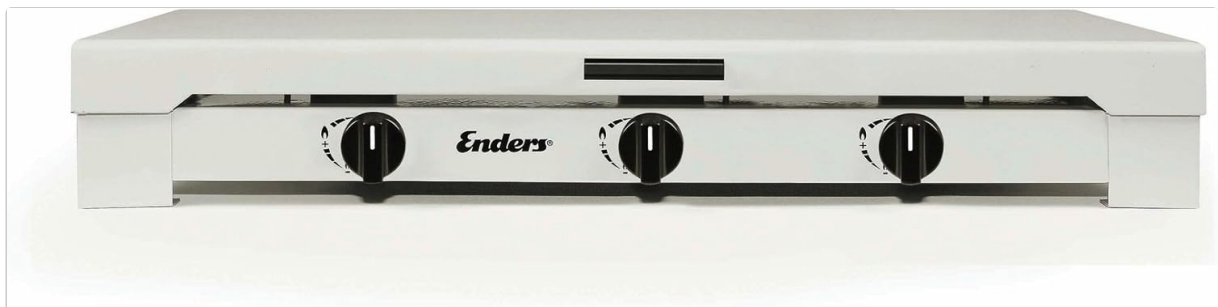


Figure 1: Front view of the Enders DALGETY 3-Burner Gas Camping Stove, showing the three control knobs and the Enders logo.

OPERATING INSTRUCTIONS

1. **Prepare for Lighting:**
 - Ensure the stove is on a stable surface and the gas cylinder is connected.
 - Open the valve on the gas cylinder.
2. **Lighting a Burner (Manual Ignition):**
 - Turn the desired burner control knob slowly to the "HIGH" position.
 - Immediately apply a lit match or a long-nosed lighter to the burner.
 - Once lit, adjust the flame to the desired cooking intensity by turning the control knob.
 - If the burner does not light within 5 seconds, turn the control knob to "OFF", wait 5 minutes for gas to dissipate, and then repeat the lighting procedure.
3. **Adjusting Flame:** The three powerful burners are continuously adjustable. Turn the control knob clockwise to decrease the flame and counter-clockwise to increase it.

4. Turning Off the Stove:

- Turn all burner control knobs to the "OFF" position.
- Close the valve on the gas cylinder.



Figure 2: The Enders DALGETY 3-Burner Gas Camping Stove being used outdoors at a campsite, demonstrating its portability and cooking capacity.

CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and safe operation of your stove.

- **Cleaning:** Allow the stove to cool completely. Wipe down the stainless steel burner area and chrome-plated grid with a damp cloth and mild detergent. Rinse thoroughly and dry. Do not use abrasive cleaners or scouring pads, as they can damage the finish. The stove is designed for easy and quick cleaning.
- **Storage:** Disconnect the gas cylinder. Ensure the stove is clean and dry before storing. Store in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the gas hose and connections for any signs of wear, cracks, or damage. Replace any damaged parts immediately with genuine Enders replacement parts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner does not light.	No gas flow, clogged burner, faulty regulator.	Check gas cylinder valve is open. Ensure gas hose is connected. Check for clogs in burner ports. Test regulator.

Problem	Possible Cause	Solution
Low flame or inconsistent flame.	Low gas pressure, partially clogged burner, low gas in cylinder.	Check gas cylinder level. Clean burner ports. Ensure regulator is functioning correctly.
Gas smell.	Gas leak.	IMMEDIATELY turn off gas supply. Perform a leak test with soapy water. Do not operate if a leak is detected. Seek professional assistance if unable to resolve.

SPECIFICATIONS

Feature	Detail
Brand	Enders
Model Number	1852
Number of Burners	3
Burner Type	Stainless Steel
Ignition Type	Manual
Power Output (per burner)	2.3 kW
Fuel Type	Propane (Gas)
Grill Material	Chrome-plated Steel
Dimensions (approx.)	62 x 35.8 x 10.4 cm (24.4 x 14.1 x 4.1 inches)
Weight	1.5 kg (3.3 lbs)

WARRANTY AND SUPPORT

Enders products are manufactured to high-quality standards. For warranty information, please refer to the documentation provided at the time of purchase or visit the official Enders website. For technical support or spare parts, please contact Enders customer service.

Keep your purchase receipt as proof of purchase for warranty claims.