

PROSCAN PKCR2713_AMZ

PROSCAN ELITE PKCR2713AMZ Under Counter CD Player with Clock Radio and Bluetooth

Model: PKCR2713_AMZ



INTRODUCTION

The PROSCAN ELITE PKCR2713AMZ is a versatile under-counter audio system designed to provide entertainment and convenience in your kitchen or workspace. Featuring a CD player, FM radio, and Bluetooth connectivity, this unit allows you to enjoy your favorite music from various sources. Its space-saving design and intuitive controls make it a practical addition to any home.

WHAT'S IN THE BOX

Verify that all items are present before beginning installation:

- PROSCAN ELITE PKCR2713AMZ Under Counter CD Player
- Mounting Kit (includes template and hardware)
- Full Function Remote Control
- AC Power Adapter

SETUP AND INSTALLATION

Follow these steps to properly install your under-counter CD player:

1. **Choose a Location:** Select a flat, sturdy surface under a kitchen cabinet. Ensure there is adequate space for the unit and access to a power outlet.
2. **Prepare for Mounting:** Use the provided mounting template to mark the drilling locations under your cabinet.
Note: Some users have reported the template may not be perfectly accurate; verify measurements before drilling.
3. **Drill Pilot Holes:** Carefully drill pilot holes at the marked locations.
4. **Attach Mounting Plate:** Secure the mounting plate to the underside of the cabinet using the provided screws.

5. **Mount the Unit:** Slide the PROSCAN ELITE unit onto the mounting plate until it clicks securely into place.
6. **Connect Power:** Plug the AC power adapter into the unit and then into a wall outlet.
7. **Install Backup Batteries:** For clock and preset memory retention during power outages, install 2 x AA batteries (not included) into the battery compartment.



Image: Bottom view of the unit, illustrating the mounting points and product information label.

OPERATING INSTRUCTIONS

Front Panel Controls



Image: Front panel of the unit, showing the display, CD tray, and various control buttons.

- **POWER Button:** Press to turn the unit on or off.
- **SOURCE Button:** Cycle through available modes: CD, FM Radio, Bluetooth.

- **VOLUME +/- Buttons:** Adjust the audio output level.
- **OPEN/CLOSE Button:** Eject or retract the CD tray.
- **SKIP/TUNE Buttons:**
 - In CD mode: Skip to the next/previous track.
 - In FM mode: Tune to the next/previous radio station.
- **PLAY/PAUSE Button:** Play or pause CD playback.
- **PAIR Button:** Initiate Bluetooth pairing mode.
- **DISPLAY Button:** Adjust display brightness or cycle through display information.
- **CLK SET/MEM Button:** Set the clock or save/recall radio presets.
- **TIMER Button:** Set sleep timer or alarm functions.
- **REPEAT Button:** Repeat current track or entire CD.
- **PROG Button:** Program CD playback order.
- **RANDOM Button:** Play CD tracks in random order.

CD Player Operation

1. Press the **OPEN/CLOSE** button to open the CD tray.
2. Place a CD onto the tray with the label side facing up.
3. Press the **OPEN/CLOSE** button again to close the tray. The unit will automatically begin playing the CD.
4. Use the **PLAY/PAUSE**, **SKIP/TUNE**, **REPEAT**, **PROG**, and **RANDOM** buttons to control playback.

FM Radio Operation

1. Press the **SOURCE** button until "FM" appears on the display.
2. Use the **SKIP/TUNE** buttons to manually tune to a desired frequency or press and hold to auto-scan for the next available station.
3. To save a preset: Tune to the desired station, then press and hold the **CLK SET/MEM** button until the preset number flashes. Use the **SKIP/TUNE** buttons to select a preset number, then press **CLK SET/MEM** again to confirm.
4. To recall a preset: Briefly press the **CLK SET/MEM** button and use the **SKIP/TUNE** buttons to select the desired preset.

Bluetooth Operation

1. Press the **SOURCE** button until "BT" or "Bluetooth" appears on the display. The unit will enter pairing mode, indicated by a flashing Bluetooth icon.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "PROSCAN ELITE" or similar from the list of devices.
4. Once paired, the Bluetooth icon on the unit's display will stop flashing, and you can stream audio from your device to the unit.
5. To disconnect, either turn off Bluetooth on your device or press and hold the **PAIR** button on the unit.



Image: Side view of the unit, highlighting the 'LINE IN' auxiliary input port.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by the edges. Keep them clean and free of scratches to ensure optimal playback.
- **Battery Replacement:** Replace backup batteries (AA) annually or when the clock/presets are not retained during power outages.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	No power, AC adapter not connected.	Ensure AC adapter is securely plugged into the unit and a working wall outlet.
No sound from speakers.	Volume too low, incorrect source selected, muted.	Increase volume. Press SOURCE to select correct mode (CD, FM, BT). Check if unit is muted.
CD skips or does not play.	Dirty or scratched CD, CD inserted incorrectly.	Clean the CD with a soft cloth. Ensure CD is inserted label-side up. Try a different CD.
Poor FM radio reception.	Weak signal, internal antenna position.	Reposition the unit for better reception. Note: This unit does not have an AM feature.
Bluetooth pairing issues.	Device too far, Bluetooth not enabled on device, unit not in pairing mode.	Ensure device is within range. Enable Bluetooth on your device. Press PAIR button on unit.

SPECIFICATIONS

- **Product Dimensions:** 14 x 4 x 12.5 inches (L x W x H)
- **Item Weight:** 0.035 ounces
- **Brand:** PROSCAN
- **Model Number:** PKCR2713_AMZ
- **Connectivity Technology:** Bluetooth
- **Color:** Silver

- **Speaker Type:** Stereo
- **Power Output:** 2 x 1.2 W
- **Power Source:** AC Adapter with Battery Backup (2 x AA, not included)
- **Features:** Under-cabinet mounting, CD player, FM radio, Bluetooth 3.0, LED display, remote control.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official PROSCAN website. Keep your proof of purchase for warranty claims.




Online Resources:



- Official PROSCAN Store: [PROSCAN ELITE Store](#)
- User Manual (PDF): [Download PDF Manual](#)



© 2024 PROSCAN. All rights reserved.

Related Documents - PKCR2713_AMZ

<div>尺寸105*148mm</div> <div>80g书纸</div> <div>黑白印刷</div>	<div>Proscan Elite 13.3" Swivel Screen Portable DVD Player User Manual</div> <div>This user manual provides comprehensive instructions for the Proscan Elite 13.3" Swivel Screen Portable DVD Player (Model No.: PEDVD1332), covering setup, operation, features, troubleshooting, and warranty information.</div>
<div></div>	<div>Proscan PKCR2713 AMZ Undercabinet Music System with Bluetooth Instruction Manual</div> <div>This manual provides instructions for operating the Proscan PKCR2713 AMZ Undercabinet Music System with Bluetooth, including setup, controls, radio, CD, and Bluetooth functions.</div>
<div></div>	<div>Proscan PDVD1187 Portable Blu-ray/DVD Player User Manual</div> <div>Comprehensive user manual for the Proscan PDVD1187 portable Blu-ray and DVD player, covering setup, operation, features, specifications, and troubleshooting.</div>
<div></div>	<div>PROSCAN PRCD682BT Portable CD Player with Bluetooth Radio Owner's Manual</div> <div>Owner's manual for the PROSCAN PRCD682BT portable CD player. This document provides detailed information on safety instructions, power connection, battery operation, control locations, AUX IN, Bluetooth, radio, and CD playback modes. It also includes specifications and warranty information for the device.</div>

	<p>Proscan PRCD682BT Portable CD Player: AM/FM Radio, Bluetooth - Owner's Manual</p> <p>Get detailed instructions for your Proscan PRCD682BT portable CD player. This manual covers setup, operation of AM/FM radio, Bluetooth streaming, and CD playback for this versatile audio device.</p>
<p>PROSCAN</p> <p>PLT7777G</p>  <p>USER'S MANUAL</p>	<p>PROSCAN PLT7777G Tablet User Manual</p> <p>Comprehensive user manual for the PROSCAN PLT7777G tablet, covering setup, features, system settings, specifications, and important attention points.</p>