

[Manuals.plus](#) /

› [Klarstein](#) /

› Klarstein Mr.Silver-Frost Ice Maker Instruction Manual

Klarstein Mr.Silver-Frost

Klarstein Mr.Silver-Frost Ice Maker Instruction Manual

Model: Mr.Silver-Frost

1. INTRODUCTION

Thank you for choosing the Klarstein Mr.Silver-Frost Ice Maker. This manual provides important information regarding the safe operation, installation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before using the ice maker and retain them for future reference.

The Klarstein Mr.Silver-Frost is designed to produce ice cubes efficiently for your household needs. It features a 3.3-liter water tank, 150 watts of power, and offers three selectable ice cube sizes.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Read all instructions before operating the appliance.
- Ensure the power supply voltage matches the rating label on the appliance (AC 220-240 V, 50 Hz).
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Unplug the appliance from the power outlet when not in use, before cleaning, or during maintenance.
- Keep the appliance out of reach of children. Close supervision is necessary when used near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- Do not use accessories not recommended by the manufacturer, as this may cause hazards.
- Do not use outdoors. This appliance is for indoor household use only.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for anything other than its intended use.
- Ensure proper ventilation around the appliance. Maintain at least 10 cm clearance on all sides.
- Use only potable water in the water tank.
- The refrigerant R600 is flammable. Handle with care and ensure proper ventilation.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Klarstein Mr.Silver-Frost Ice Maker.



Image: The Klarstein Mr.Silver-Frost Ice Maker in a kitchen setting, next to two glasses filled with ice and a blue beverage, and a glass bottle. The ice maker has a brushed stainless steel finish and a white top.



Image: A close-up front view of the Klarstein Mr. Silver-Frost Ice Maker, highlighting its control panel. The panel features a blue illuminated LCD screen displaying '05:59', a power button, 'ON/OFF', 'SELECT', 'CLOCK', and 'TIMER' buttons.

Main Components:

- **Control Panel:** With LCD display, power button, size selection, and timer functions.
- **Water Tank:** 3.3-liter capacity for water supply.
- **Ice Basket:** Removable basket for collecting produced ice cubes.
- **Ice Scoop:** For hygienic removal of ice cubes.
- **Viewing Window:** Located on the lid to monitor ice production.
- **Water Drainage Plug:** For emptying the water tank.

4. SETUP

4.1 Unpacking

1. Carefully remove the ice maker from its packaging.

2. Remove all packaging materials, including any tape or protective films.
3. Check for any damage during transit. If the appliance is damaged, do not operate it and contact your retailer.

4.2 Placement

- Place the ice maker on a stable, level surface away from direct sunlight and heat sources (e.g., ovens, radiators).
- Ensure there is at least 10 cm of clear space around the appliance for proper ventilation.
- Do not place the appliance in an enclosed cabinet or directly against a wall that could obstruct airflow.

4.3 Initial Cleaning

Before first use, clean the appliance thoroughly:

1. Remove the ice basket and ice scoop. Wash them with warm water and a mild detergent. Rinse thoroughly and dry.
2. Clean the interior of the water tank and the ice-making components with a soft cloth dampened with warm water and a small amount of mild detergent. Rinse by wiping with a clean, damp cloth.
3. Drain any residual water through the drainage plug.
4. Wipe the exterior of the appliance with a soft, damp cloth.

5. OPERATING INSTRUCTIONS

5.1 Filling the Water Tank

1. Open the lid of the ice maker.
2. Pour potable water into the water tank, ensuring not to exceed the maximum fill line. The tank has a capacity of 3.3 liters.
3. Close the lid securely.

5.2 Powering On and Selecting Ice Cube Size

1. Plug the ice maker into a grounded electrical outlet.
2. Press the **ON/OFF** button to turn on the appliance. The LCD display will illuminate.
3. Press the **SELECT** button repeatedly to choose your desired ice cube size: Small, Medium, or Large. The selected size will be indicated on the display.

5.3 Ice Production Cycle

Once the size is selected, the ice maker will begin its production cycle. The first batch of ice cubes will be ready in approximately 6 to 15 minutes, depending on the selected size and ambient temperature.



Image: A close-up view of the internal ice-making mechanism of the Klarstein Mr.Silver-Frost Ice Maker, showing multiple ice-forming rods covered in a thin layer of ice.

The ice maker will continue to produce ice until the ice basket is full or the water tank is empty. The daily production volume is approximately 15 kg of ice.

5.4 Using the Timer Function

The ice maker features an adjustable timer for scheduled operation:

1. With the appliance on, press the **TIMER** button.
2. Use the **CLOCK** and **SELECT** buttons to adjust the desired delay time (from 0.5 to 19.5 hours) before the ice maker starts or stops.
3. Confirm the setting by pressing the **TIMER** button again or wait a few seconds for it to set automatically.

5.5 Removing Ice Cubes



Image: An open view of the Klarstein Mr.Silver-Frost Ice Maker's interior, showing a white plastic ice basket filled with ice cubes and a white plastic scoop resting inside.

Use the provided ice scoop to remove ice cubes from the ice basket. Do not use your hands or other utensils that may damage the interior.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your ice maker and ensure optimal performance.

6.1 Daily Cleaning

- After each use, unplug the appliance.
- Remove the ice basket and empty any remaining ice.
- Open the drainage plug at the bottom of the unit to drain any residual water from the tank.
- Wipe the interior and exterior with a soft, damp cloth.
- Dry all parts thoroughly before reassembling or storing.

6.2 Periodic Deep Cleaning

Perform a deep clean every few weeks or as needed:

1. Prepare a cleaning solution of water and a small amount of white vinegar or a mild descaling agent suitable for food-contact appliances.
2. Pour the solution into the water tank.
3. Run a few ice-making cycles (without consuming the ice) to circulate the cleaning solution through the system.
4. Drain the cleaning solution completely.
5. Rinse the tank and internal components thoroughly by filling with clean water and running several cycles, draining the water each time, until no cleaning solution residue remains.
6. Clean the ice basket and scoop as described in Section 4.3.

6.3 Storage

If the ice maker will not be used for an extended period:

- Perform a thorough deep cleaning.
- Ensure all internal and external parts are completely dry.
- Store the appliance in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Before contacting customer support, please refer to the following troubleshooting guide for common issues:

Problem	Possible Cause	Solution
Ice maker does not turn on.	No power supply.	Check if the power cord is securely plugged into a working outlet.
No ice production.	Water tank is empty.	Fill the water tank with potable water.
	Ice basket is full.	Remove ice from the basket.
	Ambient temperature is too high.	Ensure the appliance is in a cool, well-ventilated area.
Ice cubes are too small or soft.	Water temperature is too high.	Use colder water.
	Ambient temperature is too high.	Ensure proper ventilation and a cooler environment.
Water leakage.	Drainage plug is not properly closed.	Ensure the drainage plug is securely closed.
	Overfilling the water tank.	Do not exceed the maximum fill line.

8. SPECIFICATIONS

Technical details for the Klarstein Mr.Silver-Frost Ice Maker:



Image: A diagram showing the dimensions of the Klarstein Mr.Silver-Frost Ice Maker. The width is 30cm, depth is 37cm, and height is 38cm.

Feature	Detail
Model	Mr.Silver-Frost
Water Tank Capacity	3.3 Liters
Wattage	150 Watts
Voltage	AC 220-240 V, 50 Hz
Refrigerant	R600
Material	Stainless Steel Housing, Plastic Components
Item Weight	Approx. 11 Kilograms
Dimensions (W x H x D)	30 x 38 x 37 cm
Cable Length	2 meters

Feature	Detail
Ice Production Time	6-15 minutes (per cycle, depending on size)
Daily Ice Production	Approx. 15 kg
Ice Cube Sizes	Small, Medium, Large
Timer Function	0.5 - 19.5 hours

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact your retailer. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00JFVDVMY>

More documents and user manuals: <https://manuals.plus/>