

Severin SA 2968

Severin Multi Sandwich Toaster SA 2968 Instruction Manual

Model: SA 2968

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Severin Multi Sandwich Toaster SA 2968. Please read these instructions carefully before operating the appliance and retain them for future reference.

The Severin Multi Sandwich Toaster SA 2968 is a versatile 3-in-1 appliance designed for preparing sandwiches, waffles, and grilled items. It features interchangeable plates, a non-stick coating for easy cleaning, and indicators for precise cooking control.

SAFETY INSTRUCTIONS

Important Safety Precautions:

- Always ensure the appliance is unplugged from the power outlet before cleaning, assembly, or disassembly.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner. Contact customer service for repair.
- Use the appliance only for its intended household purpose.
- Do not use abrasive cleaning agents or sharp objects on the non-stick plates, as this can damage the coating.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from flammable materials.
- The appliance surfaces become hot during use. Use the heat-insulated handle and wear oven mitts if necessary.

- Do not leave the appliance unattended while in operation.

PRODUCT COMPONENTS

The Severin Multi Sandwich Toaster SA 2968 includes the main unit and three sets of interchangeable non-stick plates:

- **Main Unit:** Features a heat-resistant housing, heat-insulated handle with locking clip, and indicator lights.
- **Sandwich Plates:** Designed for making sealed sandwiches.
- **Grilling Plates:** Ideal for grilling meats, vegetables, or paninis.
- **Brussels Waffle Plates:** For preparing classic Belgian waffles.



The Severin Multi Sandwich Toaster SA 2968 showing its 3-in-1 function with interchangeable plates, non-stick coating, ready indicator, space-saving vertical storage, and heat-insulated handles.



The three sets of interchangeable plates: sandwich, waffle, and grill plates.

SETUP

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Clean the interchangeable plates with warm soapy water, rinse thoroughly, and dry completely.
3. **Plate Installation:** Ensure the appliance is unplugged and cool. Select the desired plates (sandwich, grill, or waffle). Align the plates with the slots in the main unit and press down until they click securely into place.
4. **Positioning:** Place the appliance on a flat, stable, heat-resistant surface, ensuring adequate ventilation around it.

OPERATING INSTRUCTIONS

The appliance features a pilot standby light (red) and a ready-to-use indicator (green) for precise cooking time control.

General Operation:

1. Ensure the correct plates are installed and locked.
2. Close the appliance and plug it into a suitable 230V power outlet. The red pilot light will illuminate, indicating the appliance is heating up.
3. Wait for the green ready indicator light to illuminate. This signifies that the appliance has reached the optimal cooking temperature.
4. Open the appliance, place your food item(s) on the lower plate, and close the lid, ensuring the locking clip is engaged.
5. Cook for the recommended time (refer to specific food instructions below). The green light may cycle on and off during cooking as the thermostat maintains temperature.

6. Once cooking is complete, open the appliance and carefully remove the food using a heat-resistant plastic or wooden utensil. Do not use metal utensils, as they can damage the non-stick coating.
7. Unplug the appliance from the power outlet after use.

Using Sandwich Plates:

1. Install the sandwich plates.
2. Preheat the appliance until the green light illuminates.
3. Lightly butter or oil the outer sides of your bread slices. Place one slice of bread on each lower plate, add your desired filling, and cover with the second slice of bread.
4. Close the lid and lock the clip. Cook for approximately 3-5 minutes, or until the sandwiches are golden brown and the filling is heated through.
5. Carefully remove the sandwiches.



Toasted sandwiches prepared using the sandwich plates.

Using Waffle Plates:

1. Install the Brussels waffle plates.
2. Preheat the appliance until the green light illuminates.
3. Lightly grease the waffle plates with cooking spray or oil.
4. Pour approximately 1/2 to 3/4 cup of waffle batter onto the center of the lower plate, ensuring it spreads evenly. Do not overfill.
5. Close the lid and lock the clip. Cook for approximately 4-7 minutes, or until the waffles are golden brown and crisp.
6. Carefully remove the waffles.



Freshly cooked waffles on the waffle plates.

Using Grilling Plates:

1. Install the grilling plates.
2. Preheat the appliance until the green light illuminates.
3. Lightly grease the grilling plates with cooking spray or oil.
4. Place your food items (e.g., chicken breast, vegetables, panini) on the lower grilling plate.
5. Close the lid and lock the clip. Cook for the desired time, turning if necessary, until the food is cooked to your preference.
6. Carefully remove the grilled food.



Grilled food being prepared on the grilling plates.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Remove Plates:** Once cool, press the plate release buttons (if applicable) and carefully remove the cooking plates.
3. **Clean Plates:** Wash the non-stick plates in warm, soapy water. For stubborn residue, soak the plates for a few minutes before cleaning. Use a soft sponge or cloth. Do not use abrasive cleaners, steel wool, or metal utensils, as these will damage the non-stick coating. The plates are dishwasher safe.
4. **Clean Exterior:** Wipe the exterior housing of the appliance with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing the appliance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction; internal fault.	Ensure plug is securely inserted. Test outlet with another appliance. If still not working, contact customer service.
Food sticks to plates.	Plates not properly greased; non-stick coating damaged; food residue.	Lightly grease plates before each use. Ensure plates are clean. Avoid using metal utensils.
Food not cooking evenly.	Appliance not fully preheated; uneven food placement.	Wait for the green ready light to illuminate before adding food. Distribute food evenly on the plates.

Problem	Possible Cause	Solution
Smoke or unusual odor during first use.	Protective oils burning off.	This is normal for initial use. Ensure good ventilation. If smoke persists, unplug and contact customer service.

SPECIFICATIONS

- **Model:** SA 2968
- **Brand:** Severin
- **Colour:** Black-Chrome
- **Material:** Stainless Steel (housing), BPA Free (plates)
- **Power:** 1000 watts
- **Voltage:** 230 Volts
- **Product Dimensions (D x W x H):** 9D x 23W x 23H centimetres
- **Item Weight:** 2.9 Kilograms
- **Special Features:** Non-stick coating, 3-in-1 interchangeable plates, pilot standby and ready indicators, heat-insulated handle, vertical storage capability.



Product dimensions of the Severin Multi Sandwich Toaster SA 2968.

STORAGE

The Severin Multi Sandwich Toaster SA 2968 is designed for space-saving vertical storage.

1. Ensure the appliance is completely cool and clean.
2. Wrap the power cord neatly.
3. Store the appliance in an upright position in a dry place.



The appliance can be stored vertically to save space.

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Severin website or contact their customer service department directly. Keep your proof of purchase for warranty claims.