

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Kitchen Safe](#) /
- › [Kitchen Safe Medium Time Locking Container User Manual](#)

## Kitchen Safe KSafe

# Kitchen Safe Medium Time Locking Container User Manual

Model: KSafe

## INTRODUCTION

The Kitchen Safe Time Locking Container is designed to assist in developing better habits by temporarily securing items. This medium-sized container features a programmable timer that locks the contents until the set time expires, providing an external aid for self-control.



Figure 1: Kitchen Safe Time Locking Container, designed to help break habits.

## SETUP

- 1. Unpack the Container:** Carefully remove the Kitchen Safe from its packaging. Ensure all components, including the lid with the timer and the clear base, are present and undamaged.
- 2. Install Batteries:** The device requires 2 AA batteries (included). Locate the battery compartment on the underside of the lid. Insert the batteries, ensuring correct polarity.
- 3. Initial Power-On:** The digital display on the lid should activate, showing '0 Days 00 Hrs 00 Min 00 Sec'.

## OPERATING INSTRUCTIONS

### 1. Placing Items Inside

Lift the lid from the clear base. Place the items you wish to secure inside the container. The medium size is suitable for items up to 5.25" x 6.75" (133mm x 171mm), such as cell phones, game controllers, TV remotes, snacks, or other small personal items.



Figure 2: Example items placed inside the medium Kitchen Safe container.

### 2. Setting the Timer

1. Place the lid securely onto the base.
2. Rotate the central dial on the lid to adjust the desired lock duration. You can set the timer from 1 minute up to 10 days. The display will show the selected time in Days, Hours, Minutes, and Seconds.
3. Once the desired time is displayed, press the central dial down firmly to activate the lock.
4. A 5-second countdown will appear on the display. During this period, you can press the dial again to cancel the locking process. If not canceled, the container will lock automatically after 5 seconds.



Figure 3: Step-by-step guide for setting and activating the timer lock.

### 3. Locking Mechanism

Once the timer is set and activated, the locking tabs on the lid will engage with the base, preventing the lid from being removed. The display will show a padlock icon and the remaining time. There is no override mechanism to open the container before the timer reaches zero.

The kSafe will **NOT unlock** until the timer reaches zero. There are **no overrides** so you can combat addiction for good.



Figure 4: The display indicating the locked status and remaining time.

#### 4. Unlocking

The container will automatically unlock when the timer counts down to zero. The locking tabs will retract, allowing the lid to be removed. An audible signal may indicate successful unlocking.

#### 5. Adding Time

If you wish to extend the lock duration after the timer has been set, you can rotate the dial again and press it to add more time. This action can only increase the remaining time, not decrease it.

#### 6. Charging Access

The container features an access port for charging cables, allowing electronic devices to be charged while locked inside.

### MAINTENANCE

---

- **Cleaning:** Wipe the exterior of the container with a soft, damp cloth. Do not immerse the lid in water or use abrasive cleaners, as this may damage the electronic components. The clear base can be hand-washed with mild soap and water.
- **Battery Replacement:** Replace the AA batteries when the display becomes dim or unresponsive. The timer will pause if batteries are removed while locked, but the container will remain locked until the original set time expires.
- **Storage:** Store the Kitchen Safe in a cool, dry place when not in use.

### TROUBLESHOOTING

---

- **Container does not lock:** Ensure the lid is properly seated on the base and the central dial is pressed firmly after setting the time. Check battery levels.
- **Timer display is blank:** Replace the AA batteries. If the issue persists, contact customer support.
- **Lid does not open after timer expires:** Ensure the timer has fully reached '0 Days 00 Hrs 00 Min 00 Sec'. If it remains stuck, gently try to lift the lid. If it still does not open, contact customer support.
- **Accidental Lock:** If the container is locked accidentally and immediate access is required, the base can be broken. However, this will require purchasing a replacement base.

### SPECIFICATIONS

---

Feature	Detail
Brand	Kitchen Safe
Model Number	KSafe
Product Dimensions	5.5"D x 5.5"W x 5.5"H
Lock Type	Timer
Capacity	3.5 Liters
Material	Plastic
Special Feature	Programmable
Mounting Type	Tabletop
Item Weight	2.2 Pounds
Water Resistance Level	Not Water Resistant
Batteries	2 AA batteries (included)
Maximum Lock Duration	10 Days

## PRODUCT VIDEOS

---

### How to Set the Timer and Lock

Your browser does not support the video tag.

Video 1: A user demonstrates how to set the timer and lock the Kitchen Safe container, showing the digital display and the engaging lock mechanism.

### Overview of Kitchen Safe Functionality

Your browser does not support the video tag.

Video 2: This video provides a general overview of the Kitchen Safe, highlighting its use for securing various items and the timer setting process.

### Detailed Demonstration of Locking and Unlocking

Your browser does not support the video tag.

Video 3: A comprehensive demonstration of the Kitchen Safe's locking and unlocking features, including setting the timer and showing the secure mechanism.

## WARRANTY AND SUPPORT

---

For product policies, return policy, and warranty information, please visit the official Kitchen Safe website: [www.TheKitchenSafe.com](http://www.TheKitchenSafe.com).

