

Onkyo RC-319S

Onkyo RC-319S Audio Remote Control User Manual

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Onkyo RC-319S Audio Remote Control. Please read this manual thoroughly before using the product to ensure safe and optimal performance. Keep this manual for future reference.

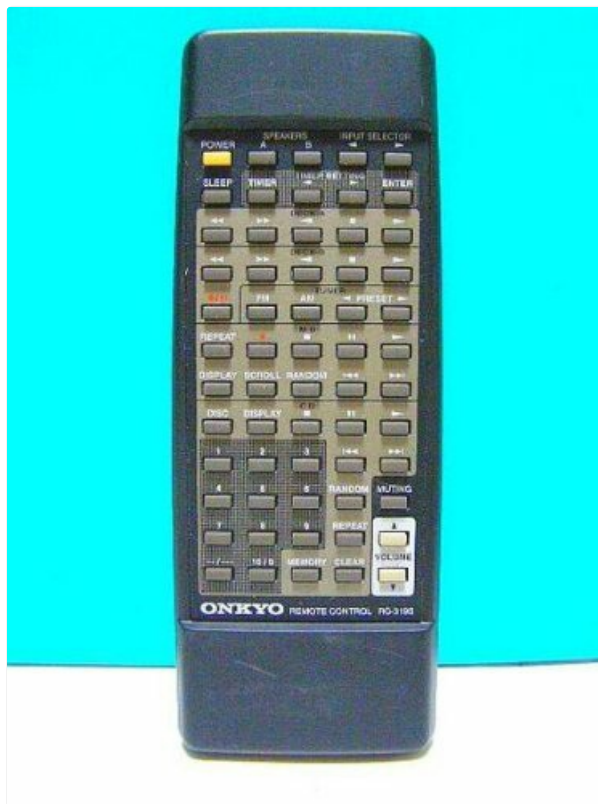


Figure 1: Front view of the Onkyo RC-319S Audio Remote Control. This image shows the general layout of the remote control, including various function buttons and the brand logo.

SETUP

Battery Installation

The Onkyo RC-319S remote control requires alkaline batteries for operation. Ensure you use new batteries of the correct type and polarity.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or press the latch to open the battery compartment cover.
3. Insert the new alkaline batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Note: Always replace all batteries at the same time. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

The RC-319S remote control is designed for intuitive operation of your Onkyo audio system. Below are common functions:

- **Power Button:** Press the **POWER** button to turn your Onkyo audio component on or off.
- **Input Selector Buttons:** Use buttons like **CD**, **TUNER**, **DVD**, or **AUX** to select the desired audio input source.
- **Volume Control:** Press **VOLUME +** to increase the volume and **VOLUME -** to decrease it.
- **Mute Button:** Press the **MUTE** button to temporarily silence the audio output. Press again to restore sound.
- **Playback Controls:** For compatible devices, use buttons such as **PLAY**, **PAUSE**, **STOP**, **SKIP** (*forward/backward*) to control media playback.

Refer to your Onkyo audio component's specific manual for detailed functions and compatibility with the RC-319S remote.

MAINTENANCE

Cleaning the Remote Control

To maintain the appearance and functionality of your remote control:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the finish or internal components.

Battery Care and Replacement

- If the remote control becomes unresponsive or its range decreases, it may be time to replace the batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage and damage.

- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

If you experience issues with your Onkyo RC-319S remote control, try the following solutions:

Problem	Possible Cause	Solution
Remote control does not work.	• Batteries are depleted or incorrectly installed. • Obstruction between remote and audio component. • Remote control is out of range.	• Replace batteries with new alkaline batteries, ensuring correct polarity. • Remove any objects blocking the line of sight between the remote and the audio component's sensor. • Move closer to the audio component.
Buttons are unresponsive or sticky.	• Dirt or debris under the buttons. • Internal malfunction.	• Clean the remote control as described in the Maintenance section. • If cleaning does not resolve the issue, contact Onkyo customer support.

SPECIFICATIONS

Model: RC-319S

Brand: Onkyo

Battery Type: Alkaline

ASIN: B00JGS5GHY

Compatibility: Designed for specific Onkyo audio components (refer to your audio component's manual for exact compatibility).

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your original Onkyo audio component or contact your retailer. For technical support or service inquiries, please visit the official Onkyo website or contact their customer service department.

You can find more information and support resources on the [Onkyo Brand Store](#).