

Timex T235WY

Timex T235WY AM/FM Dual Alarm Clock Radio

User Manual

Model: T235WY | Brand: Timex

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Timex T235WY AM/FM Dual Alarm Clock Radio. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.

The Timex T235WY is designed to provide reliable timekeeping, dual alarm capabilities, and AM/FM radio reception with a large, easy-to-read LED display. It also features an auxiliary input for connecting external audio devices.



Figure 1: Front view of the Timex T235WY AM/FM Dual Alarm Clock Radio, highlighting its large red LED display.

SETUP

1. Power Connection

Connect the AC power adapter to the DC input jack located on the back of the unit. Plug the adapter into a standard wall outlet. The unit will power on and the display will illuminate.

2. Battery Backup Installation

For continuous timekeeping during power outages, install 2 AAA batteries (not included) into the battery compartment on the bottom of the unit. Ensure correct polarity (+/-) as indicated inside the compartment. The battery backup maintains time and alarm settings but does not power the display or audio functions.

3. Setting the Time

1. Press and hold the **TIME SET** button until the hour digits begin to flash.
2. Press the **HOUR** button repeatedly to adjust the hour. Observe the PM indicator light for correct AM/PM setting.
3. Press the **MINUTE** button repeatedly to adjust the minute.
4. Press the **TIME SET** button again to confirm and exit time setting mode.

OPERATING INSTRUCTIONS

1. Radio Operation

- **Turning On/Off:** Press the **RADIO ON/OFF** button to turn the radio on or off.
- **Tuning:** Press the **TUNE +** or **TUNE -** buttons to manually tune to a desired frequency. Press and hold for automatic scanning to the next clear station.
- **Band Selection:** Press the **AM/FM** button to switch between AM and FM bands.
- **Volume Control:** Use the **VOLUME +** or **VOLUME -** buttons to adjust the listening volume.
- **Setting Presets:**
 - a. Tune to the desired station.
 - b. Press the **PRESET** button. The preset number will flash.
 - c. Use the **PRESET +** or **PRESET -** buttons to select the desired preset number (1-10 for AM, 1-10 for FM).
 - d. Press the **PRESET** button again to save the station.
- **Recalling Presets:** Press the **PRESET +** or **PRESET -** buttons to cycle through saved stations.

2. Alarm Functions

The Timex T235WY features dual independent alarms (Alarm 1 and Alarm 2).

- **Setting an Alarm:**
 - a. Press and hold the **ALARM 1** or **ALARM 2** button until the alarm time flashes.
 - b. Press the **HOUR** button to adjust the alarm hour.
 - c. Press the **MINUTE** button to adjust the alarm minute.
 - d. Press the **ALARM 1** or **ALARM 2** button again to select the wake source (Buzzer or Radio). The corresponding indicator will light up.
 - e. Press the **ALARM 1** or **ALARM 2** button one more time to confirm and activate the alarm. The alarm indicator (AL1 or AL2) will appear on the display.
- **Disabling an Alarm:** Press the active **ALARM 1** or **ALARM 2** button until the alarm indicator disappears from the

display.

- **Snooze Function:** When an alarm sounds, press the large **SNOOZE** bar to temporarily silence the alarm for approximately 9 minutes. The alarm will sound again after the snooze period.
- **Stopping an Alarm:** To stop an alarm completely, press the corresponding **ALARM 1** or **ALARM 2** button. The alarm will reset for the next day.

3. Sleep Timer

The sleep timer allows you to fall asleep to the radio, which will automatically turn off after a set period.

- While the radio is playing, press the **SLEEP** button repeatedly to cycle through available sleep times (e.g., 90, 60, 30, 15 minutes, OFF).
- The radio will play for the selected duration and then automatically turn off.

4. Auxiliary Input

Connect an external audio device (e.g., smartphone, MP3 player) to the **AUX IN** jack on the back of the unit using a 3.5mm audio cable (not included). The audio from the connected device will play through the clock radio's speaker.



Figure 2: The Timex T235WY with an external device connected to its auxiliary input, demonstrating media playback capability.

5. Display Dimmer

Press the **DIMMER** button to adjust the brightness of the LED display to your preference (High, Low, Off).

MAINTENANCE

Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents as they may damage the finish. Ensure the unit is unplugged before cleaning.

Battery Replacement

If the clock loses time during a power outage, the backup batteries may need replacement. Replace with 2 new AAA batteries, observing polarity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Power adapter not connected or outlet is not active.	Ensure AC adapter is securely plugged into the unit and a working wall outlet.
Display is dim or off.	Dimmer setting is too low or off.	Press the DIMMER button to adjust brightness.
Alarm does not sound.	Alarm not set or disabled; volume too low (for radio alarm).	Verify alarm is set and active (AL1/AL2 indicator on). Increase radio volume if waking to radio.
Poor radio reception.	Antenna not extended or interference.	Extend the FM wire antenna fully. For AM, rotate the unit for best reception. Move unit away from other electronic devices.
Time is incorrect after power outage.	Backup batteries are dead or not installed.	Install or replace 2 AAA backup batteries.

If problems persist, please refer to the official user guide PDF or contact customer support.

SPECIFICATIONS

- Brand:** Timex
- Model Number:** T235WY
- Color:** White
- Display Type:** LED (1.8 Inch Red LED)
- Product Dimensions:** 6.90" W x 3.59" H x 3.51" D
- Power Source:** Electrical (AC Adapter) with Battery Powered Backup
- Backup Batteries:** 2 AAA batteries (required, not included)
- Special Features:** Dual Alarm, AM/FM Radio, Sleep Timer, Auxiliary Input, Jumbo Display, Dimmer
- Item Weight:** 1.63 pounds
- UPC:** 758859206608

WARRANTY AND SUPPORT

Warranty information for your Timex T235WY AM/FM Dual Alarm Clock Radio is typically included with your purchase

documentation. Please refer to the warranty card or contact the retailer for specific details regarding coverage and duration.


For additional support, frequently asked questions, or to download the official user guide, please visit the Timex official website or refer to the provided PDF user guide:

[Download Official User Guide \(PDF\)](#)

You may also contact Timex customer service for assistance with product operation or troubleshooting.

Documents - Timex – T235WY

[\[pdf\]](#) User Manual Instructions Guide

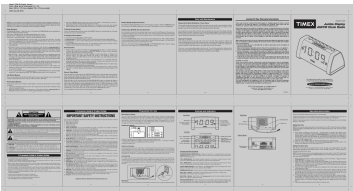

T235 IB Eng 082813 Timex T235WY AM FM Dual Alarm Clock Radio WhiteT235WY User Guide Sound Design Inc White B074Y5SGG2 B00JHKCIFY917FaVjxRLSm media amazon images I 917FaVjxRLS ||| Model: T235 IB English Version Color : Black text on white paper 1C 1C Size: 120 W x 170 H mm folded , 720 x 170 mm unfold Date: Aug. 28, 2013 NOTE: You must make the time and alarm time adjustments while the display is flashing. If no adjustments are made for approximately 8 seconds the di...
lang:en score:31 filesize: 857.9 K page_count: 1 document date: 2014-03-05