

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Philips Norelco](#) /
- › [Philips Norelco Shaver 4500 \(AT830/41\) Electric Shaver User Manual](#)

Philips Norelco AT830/41

Philips Norelco Shaver 4500 (AT830/41) User Manual

Model: AT830/41

[Introduction](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The Philips Norelco Shaver 4500 (Model AT830/41) is a rechargeable electric shaver designed for both wet and dry shaving. It features DualPrecision shaving heads, a Pivot, Flex, and Float System for contour following, and an integrated pop-up trimmer. This manual provides instructions for safe and effective use, maintenance, and troubleshooting.

Shave wet or dry



Shave dry or
with foam



Showerproof



Image 1.1: The Philips Norelco Shaver 4500, illustrating its design and components.

2. SETUP

2.1 Initial Charging

Before first use, fully charge the shaver. Connect the charging cord to the shaver and plug it into a power outlet. The battery indicator light will illuminate to show charging status. A full charge takes approximately 1 hour and provides up to 50 minutes of cordless shaving. A 3-minute quick charge can provide enough power for one shave.

SH50 replacement shaver head*

Fits Series 4000, 5000 Shavers

Remember to replace your shaving head every 12 months for optimal performance.



*SH50 replacement head not included,
sold separately

Image 2.1: The shaver connected to its power source, indicating charging status and battery life.

2.2 Assembly

The shaver comes pre-assembled. Ensure the shaving head is securely attached before use. No additional assembly is typically required.

3. OPERATING INSTRUCTIONS


3.1 Power On/Off

Press the power button to turn the shaver on or off.

3.2 Wet and Dry Shaving

The Philips Norelco Shaver 4500 is designed for versatile shaving. You can use it for a comfortable dry shave or a refreshing wet shave with shaving cream or gel. The shaver is showerproof.

DualPrecision blade system

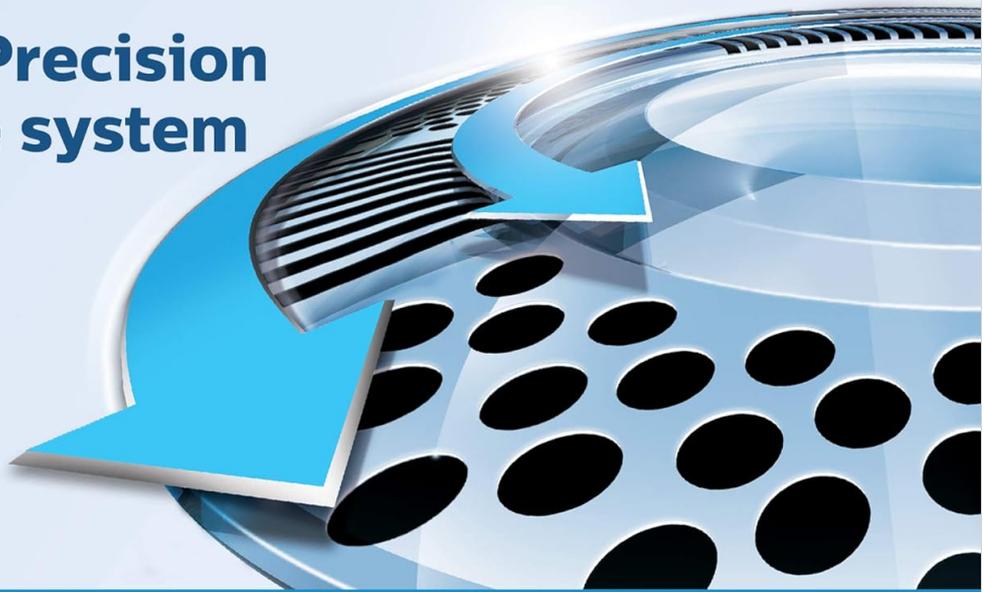

Skin protection system

Image 3.1: Visual representation of the shaver's wet and dry shaving capabilities, including its showerproof design.

3.3 Shaving Technique

For optimal results, move the shaver in small, circular motions over your skin. The DualPrecision shaving heads and Pivot, Flex, and Float System are designed to follow the contours of your face and neck, capturing both long and short hairs efficiently while minimizing skin irritation.

4-direction flex heads follow every contour



Image 3.2: Detail of the DualPrecision blade system and skin protection system.

Pop-up trimmer



Image 3.3: The shaver's flexible heads adapting to facial curves for a close shave.

3.4 Using the Pop-up Trimmer

The integrated pop-up trimmer is ideal for detailing sideburns, goatees, and mustaches. To activate, slide the trimmer switch upwards. After use, slide it back down to retract.

Rechargeable power

Li-Ion

Lithium-ion battery



50 minutes run time



Battery indicator



Image 3.4: The pop-up trimmer in its extended position for precision grooming.

4. MAINTENANCE

4.1 Cleaning

For easy cleaning, simply rinse the shaver head under a running faucet after each use. Ensure the shaver is unplugged before cleaning. For a more thorough cleaning, detach the shaving head and use the provided cleaning brush to remove any trapped hairs.

4.2 Replacing Shaving Heads

For optimal performance, replace the shaving heads every 12 months. The Philips Norelco Shaver 4500 uses HQ8 replacement heads (also referred to as SH50 in some packaging). Refer to the replacement head packaging for specific instructions on how to replace them.

5. TROUBLESHOOTING

- **Shaver not turning on:** Ensure the shaver is fully charged. If it's plugged in, check the power outlet. The shaver cannot be operated while charging.

- **Poor shaving performance:** Clean the shaving heads thoroughly. If performance does not improve, the shaving heads may need to be replaced. Replace heads every 12 months for best results.
- **Skin irritation:** Ensure you are using the correct shaving technique (small circular motions). Consider using a wet shave with foam or gel to reduce friction.
- **Trimmer not working:** Ensure the pop-up trimmer is fully extended. Clean any hair debris from the trimmer blades.

6. SPECIFICATIONS

Model: AT830/41

Shaving System: DualPrecision shaving heads, Pivot, Flex & Float System

Shaving Type: Wet & Dry

Battery Type: Lithium-ion

Run Time: Up to 50 minutes cordless

Charging Time: 1 hour for full charge, 3-minute quick charge for one shave

Power Source: Battery Powered

Included Components: Shaver, Cleaning Brush

Replacement Heads: HQ8 (SH50)

Dimensions: 2.2 x 2.2 x 5.75 inches

Weight: 0.6 pounds (9.6 ounces)



Image 6.1: Product dimensions for the Philips Norelco Shaver 4500.

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

Philips Electronics North America Corporation warrants each new Philips Norelco Product, Model

AT830/41 (except cutters and combs), against defects in materials or workmanship for a period of **two years** from the date of purchase. Philips agrees to repair or replace any defective product without charge. **Important:** This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product, loss of parts, or subjecting the product to any but the specified voltage. Use of unauthorized replacement parts will void this warranty. Philips Electronics North America Corporation will not pay for warranty service performed by a non-authorized repair service and will not reimburse the consumer for damage resulting from warranty service performed by a non-authorized repair service. No responsibility is assumed for any special, incidental, or consequential damages.

7.2 Obtaining Warranty Service

To obtain warranty service, visit www.philips.com/norelco or call **1-800-243-3050** for assistance. For your protection, it is suggested that you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.