

Debris Z DEBRISZB9

DebrisZ B9 Skimmer Basket Instruction Manual

Brand: Debris Z | Model: DEBRISZB9

INTRODUCTION

The DebrisZ B9 Skimmer Basket is designed to simplify inground pool maintenance. This innovative device features a patented handle and a quick-release mechanism for efficient debris removal. Its robust construction ensures durability and compatibility with various U3 style pool skimmers.

PRODUCT FEATURES

- **Patented Handle with Quick Release Push Button:** Allows for easy removal and emptying of the basket without direct contact with debris.
- **Advanced Suction System:** Effectively captures leaves, insects, and other debris, preventing them from re-entering the pool.
- **New Stronger Heavy Duty Design:** Features rust-resistant stainless steel screws and increased weight for stability and long-term performance.
- **Wide Skimmer Compatibility:** Designed to fit popular U3 style skimmers, including Hayward 1070, PacFab, Jacuzzi Deckmate, Swim Quip, Sta-Rite, Pentair, and American products skimmers.



QUICK RELEASE POOL SKIMMER BASKET

PATENTED  US 9,260,877  CA 2,846,017  AU 2014202272

NO MORE COLD WATER,
WET LEAVES, OR
CREEPY CRAWLIES



Figure 1: Overview of DebrisZ B9 Skimmer Basket features.

SETUP

The DebrisZ B9 Skimmer Basket requires no assembly. Simply place the basket into your pool's skimmer opening. Ensure it is seated correctly to allow for proper water flow and debris collection.



Figure 2: DebrisZ B9 Skimmer Basket in position within a pool skimmer.

OPERATING INSTRUCTIONS

Follow these steps to effectively use and empty your DebrisZ B9 Skimmer Basket:

1. **Removal:** With the pool pump running, carefully open the skimmer lid. Use the integrated handle to lift the DebrisZ B9 Skimmer Basket out of the water. Slowly dip it back into the skimmer to allow water flow to loosen any debris stuck to the basket walls.
2. **Emptying Debris:** Once removed from the skimmer, position the basket over a trash receptacle. Press the green quick-release button located on the handle. The bottom flap of the basket will open, allowing collected debris to fall out.
3. **Re-locking and Re-insertion:** After emptying, hold the quick-release button down and push the bottom flap back into its locked position. Ensure the flap is securely closed. Then, carefully place the clean skimmer basket back into the pool skimmer opening.



Figure 3: Emptying debris from the DebrisZ B9 Skimmer Basket.

Your browser does not support the video tag. Please update your browser to view this content.

Video 1: Demonstration of the DebrisZ B9 Skimmer Basket's quick-release emptying process.

MAINTENANCE

- **Regular Cleaning:** Periodically rinse the skimmer basket with fresh water to remove any fine debris or residue that may accumulate on the mesh.
- **Inspect for Wear:** Regularly check the quick-release mechanism and the bottom flap for any signs of wear or damage. Ensure the flap latches securely after emptying.
- **Storage:** When not in use for extended periods, store the skimmer basket in a cool, shaded area to prevent potential material deformation from prolonged exposure to extreme heat and direct sunlight.

TROUBLESHOOTING

- **Basket Gets Stuck or Pulled Down:** Ensure the basket is properly aligned and seated in the skimmer opening. Avoid forcing it into place. If the skimmer opening is slightly larger, the basket may shift; ensure it remains upright.
- **Accidental Debris Release:** The quick-release button is sensitive. When handling the basket, be mindful of where your hand is positioned on the handle to avoid inadvertently pressing the button before you are ready to empty the debris.
- **Bottom Flap Does Not Latch Securely:** Check for any small debris caught in the hinge or latch mechanism that might prevent it from closing properly. If the material appears misshapen due to prolonged exposure to high temperatures, the latching function may be compromised, and replacement might be necessary.

SPECIFICATIONS

Product Dimensions	8.5 x 8.5 x 13 inches
Item Weight	12 ounces
Model Number	DEBRISZB9
Compatibility	U3 style skimmers (e.g., Hayward 1070, PacFab, Jacuzzi Deckmate, Swim Quip, Sta-Rite, Pentair, American products)

WARRANTY AND SUPPORT

Debris Z stands behind the quality of its products. For any questions, concerns, or support needs regarding your DebrisZ B9 Skimmer Basket, please refer to the contact information provided with your purchase or visit the official Debris Z website for assistance. We are committed to ensuring customer satisfaction.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00JJ5GTWA>

More documents and user manuals: **<https://manuals.plus/>**