

Clint CL-L1DAB-B

Clint L1 Radiorekorder (MP3) Instruction Manual

Model: CL-L1DAB-B

1. INTRODUCTION

Thank you for purchasing the Clint L1 Radiorekorder (MP3). This device combines FM radio, Bluetooth connectivity, and MP3 playback capabilities in a compact and portable design. This manual provides essential information for setting up, operating, and maintaining your device to ensure optimal performance and longevity.

2. SAFETY INFORMATION

- **Power Source:** Use only the specified power adapter. Ensure the voltage matches the requirements of the device.
- **Water and Moisture:** Do not expose the device to water, rain, or excessive moisture. Avoid using it in damp environments.
- **Heat:** Keep the device away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Ventilation:** Ensure proper ventilation. Do not block any ventilation openings.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Clint L1 Radiorekorder (MP3) Unit
- Power Cable
- Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your Clint L1 Radiorekorder (MP3).



Figure 1: Front view of the Clint L1 Radiorekorder (MP3).

4.1 Controls and Display

- **ON/OFF Button:** Powers the device on or off.
- **Display Screen:** Shows current mode, time, station information, and menu options.
- **Volume Knob:** Adjusts the audio output level. Press to mute/unmute.
- **Select Knob:** Navigates through menus and confirms selections.
- **MENU Button:** Accesses the main menu for settings and options.
- **INFO Button:** Displays additional information about the current station or track.
- **MODE Button:** Switches between available modes (e.g., FM, Bluetooth, MP3).
- **PRESET Button:** Accesses or saves radio station presets.
- **BACK Button:** Returns to the previous menu or screen.
- **ALARM Button:** Sets or activates the alarm function.
- **SLEEP Button:** Activates the sleep timer function.
- **Playback Control Buttons** (◀◀, ▶▶, ▶■): Control track skipping (previous/next) and play/pause during MP3 or Bluetooth playback.

5. SETUP

5.1 Power Connection

1. Extend the telescopic antenna for optimal radio reception.

2. Connect the power cable to the DC input port on the back of the Clint L1.
3. Plug the other end of the power cable into a standard electrical outlet.
4. The device is now ready for use.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- To turn on the device, press the **ON/OFF** button.
- To turn off the device, press and hold the **ON/OFF** button until the display turns off.

6.2 Mode Selection

- Press the **MODE** button repeatedly to cycle through available modes: FM Radio, Bluetooth, and MP3 Playback.

6.3 Volume Adjustment

- Rotate the **Volume** knob clockwise to increase volume and counter-clockwise to decrease volume.
- Press the **Volume** knob briefly to mute or unmute the audio.

6.4 FM Radio Operation

1. Switch to FM mode using the **MODE** button.
2. To automatically scan for stations, press and hold the **Select** knob. The radio will scan and save available stations.
3. To manually tune, rotate the **Select** knob to adjust the frequency.
4. To recall a preset station, press the **PRESET** button, then use the **Select** knob to navigate and press to confirm.

6.5 Bluetooth Pairing

1. Switch to Bluetooth mode using the **MODE** button. The display will show 'Pairing' or 'Waiting for connection'.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select 'Clint L1' from the list of devices.
4. Once paired, the device will confirm the connection, and you can stream audio from your mobile device.

6.6 MP3 Playback

The Clint L1 supports MP3 playback. The method of playback (e.g., via USB, SD card, or Bluetooth-connected device) depends on the specific model's input capabilities. For Bluetooth-connected devices, playback is controlled via the connected device or the unit's playback buttons.

- Use the ◀◀ and ▶▶ buttons to skip tracks.
- Use the ▶■ button to play or pause the current track.

6.7 Alarm Function

1. Press the **ALARM** button to enter the alarm setup menu.
2. Use the **Select** knob to set the alarm time, source (e.g., buzzer, FM radio), and volume.
3. Press the **Select** knob to confirm each setting.

4. Ensure the alarm is enabled in the menu.

6.8 Sleep Timer

1. Press the **SLEEP** button repeatedly to cycle through available sleep timer durations (e.g., 15, 30, 60, 90 minutes, OFF).
2. The device will automatically turn off after the selected duration.

7. MAINTENANCE

- **Cleaning:** Wipe the exterior of the device with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** If not in use for an extended period, disconnect the power cable and store the device in a cool, dry place.
- **Antenna:** Handle the telescopic antenna carefully to avoid damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Power cable not connected properly.	Ensure the power cable is securely connected to the device and the electrical outlet.
No sound.	Volume is too low or muted.	Increase the volume using the Volume knob. Press the Volume knob to unmute.
Poor FM radio reception.	Antenna not extended or poor signal area.	Fully extend the telescopic antenna. Try repositioning the device or the antenna.
Bluetooth device cannot pair.	Device not in pairing mode or too far.	Ensure the Clint L1 is in Bluetooth mode and 'Pairing' is displayed. Move your Bluetooth device closer to the Clint L1.
MP3 playback issues.	File format not supported or source issue.	Ensure MP3 files are correctly formatted. If using Bluetooth, check the connection to the source device.

9. SPECIFICATIONS

- **Model Number:** CL-L1DAB-B
- **Connectivity:** Bluetooth
- **Special Features:** Bluetooth Playback, MP3 Playback
- **Supported Radio Bands:** FM (87.5-108 MHz)
- **Power Source:** Electric Cable
- **Color:** Black
- **Item Weight:** Approximately 2.65 Pounds (1.2 kg)
- **Compatible Devices:** MP3 Player (via Bluetooth)
- **International Article Code (EAN):** 05711088000909

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question