

[manuals.plus](#) /

› [Divoom](#) /

› [Divoom Voombox Travel User Manual](#)

Divoom Voombox Travel

Divoom Voombox Travel User Manual

Model: Voombox Travel

INTRODUCTION

The Divoom Voombox Travel is an ultra-portable, rugged wireless Bluetooth speaker designed for outdoor use. It features a splash-resistant design and a built-in microphone for hands-free calls, making it an ideal companion for travel and outdoor adventures. This manual provides detailed instructions for setting up, operating, and maintaining your Voombox Travel speaker.

PRODUCT OVERVIEW



Front view of the Divoom Voombox Travel speaker, showcasing its compact, rugged design and integrated carabiner for easy portability.



Side view illustrating the power button and call answer/end button, designed for easy access and tactile feedback.



Top view displaying the volume up (+) and volume down (-) buttons, which also serve as track navigation controls.

Key Features:

- Wirelessly stream audio from any Bluetooth-equipped device.
- Passive radiator for enhanced bass performance.
- Rugged, splash-resistant design suitable for outdoor environments.
- Built-in Li-ion battery providing up to 6 hours of playback time.
- Powerful built-in microphone for hands-free calling.

PACKAGE CONTENTS

Please check the package for the following items:

- Divoom Voombox Travel Speaker
- USB Charging Cable (often a combo USB / 3.5mm audio cable)
- User Manual (this document)

CONTROLS AND INDICATORS

Button/Indicator	Function
Power Button ()	Press and hold to power ON/OFF. Short press to check battery status (if applicable).
Call Button (☎)	Press to answer/end a call. Press and hold to reject a call. Double press to redial last number.
Volume Up (+)	Short press to increase volume. Press and hold for next track.
Volume Down (-)	Short press to decrease volume. Press and hold for previous track.
LED Indicator	Indicates power status, charging status, and Bluetooth pairing mode.

SETUP

1. Charging the Speaker

Before first use, fully charge your Voombox Travel speaker. Connect the supplied USB charging cable to the charging port on the speaker and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status (e.g., solid red while charging, off when fully charged). A full charge provides up to 6 hours of playback.

2. Bluetooth Pairing

1. Ensure the speaker is charged and powered off.
2. Press and hold the **Power Button** until you hear an audible prompt and the LED indicator begins to flash rapidly (indicating pairing mode).
3. On your Bluetooth-enabled device (smartphone, tablet, laptop), go to the Bluetooth settings.
4. Search for available devices. You should see "Voombox Travel" or a similar name in the list.
5. Select "Voombox Travel" to initiate pairing. Once successfully paired, the LED indicator will stop flashing and remain solid, and you will hear a confirmation tone.
6. The speaker is now ready to play audio from your device.

Note: The speaker will automatically attempt to reconnect to the last paired device when powered on. If unsuccessful, it will enter pairing mode.

OPERATING

Playing Audio

- Once paired, open your preferred music application on your device and begin playback.
- Adjust volume using the **Volume Up (+)** and **Volume Down (-)** buttons on the speaker, or directly from your connected device.
- To skip to the next track, press and hold the **Volume Up (+)** button.
- To go to the previous track, press and hold the **Volume Down (-)** button.

Hands-Free Calling

- When a call comes in, the speaker will ring. Press the **Call Button** once to answer the call.
- To end an ongoing call, press the **Call Button** once again.
- To reject an incoming call, press and hold the **Call Button** for approximately 2 seconds.
- To redial the last number, double-press the **Call Button**.

Water Resistance

The Divoom Voombox Travel is designed to be splash-resistant (Water Resistance Level: Water Resistant). This means it can withstand splashes of water, light rain, or accidental spills. It is not designed to be submerged in water. Ensure the charging port cover is securely closed to maintain water resistance.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the speaker's surface. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.
- **Port Protection:** Always ensure the rubber cover for the charging port is securely closed when not charging to protect against dust and water.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not turn on.	Ensure the battery is charged. Connect the speaker to a power source using the USB cable.
Cannot pair with Bluetooth device.	<ul style="list-style-type: none">• Ensure the speaker is in pairing mode (LED flashing).• Make sure Bluetooth is enabled on your device.• Move the speaker closer to your device (within 10 meters).• Forget "Voombox Travel" from your device's Bluetooth list and try pairing again.• Restart both the speaker and your device.
No sound or low volume.	<ul style="list-style-type: none">• Increase volume on both the speaker and your connected device.• Ensure the speaker is successfully paired.• Check if the audio source on your device is playing.
Sound distortion.	<ul style="list-style-type: none">• Reduce the volume on both the speaker and your device.• Ensure the speaker is not too far from the connected device.• Check for interference from other wireless devices.
Microphone not working during calls.	<ul style="list-style-type: none">• Ensure the speaker is connected and selected as the audio output for calls on your device.• Check if the microphone port is obstructed.

SPECIFICATIONS

Feature	Detail
Model Name	Voombox Travel

Feature	Detail
Speaker Type	Outdoor, Portable Bluetooth Speaker
Connectivity Technology	Bluetooth (Version 4.0 implied by description)
Wireless Range	Up to 10 meters (33 feet)
Speaker Output Power	4 Watts
Battery Life	Up to 6 hours
Water Resistance Level	Water Resistant (Splash-resistant)
Dimensions (L x W x H)	3.63 x 3.63 x 1.8 inches
Item Weight	11 ounces (0.31 Kilograms)
Power Source	Battery Powered (1 Lithium Polymer battery included)
Microphone	Built-in for hands-free calls


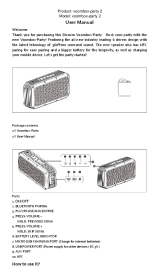
WARRANTY AND SUPPORT

The Divoom Voombox Travel speaker comes with a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official Divoom website. For technical support, troubleshooting assistance, or replacement parts, please contact Divoom customer service through their official channels.

Online Support: www.divoom.com

© 2024 Divoom. All rights reserved.

Related Documents - Voombox Travel

	<p>Divoom Voombox Travel Bluetooth Speaker User Manual</p> <p>User manual for the Divoom Voombox Travel portable Bluetooth speaker, covering important warnings, welcome information, contents, parts identification, usage instructions for Bluetooth and AUX connections, call handling, charging, features, specifications, environmental disposal, and warranty details.</p>
	<p>Divoom Voombox-Party 2 User Manual</p> <p>User manual for the Divoom Voombox-Party 2 Bluetooth speaker, detailing features, setup, connectivity, charging, and specifications.</p>

