

## **Melitta 1015 Aromaboy**

# **Melitta 1015 Aromaboy Filter Coffee Machine User Manual**

Model: 1015 Aromaboy

## **INTRODUCTION**

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Melitta 1015 Aromaboy Filter Coffee Machine. Please read this manual thoroughly before first use and keep it for future reference.

## **IMPORTANT SAFETY INSTRUCTIONS**

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- The glass carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a cold or wet surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your Melitta Aromaboy coffee machine:

- Water Tank with Level Markers
- Lid
- Filter Holder (removable)
- Glass Jug (Carafe)
- Heating Plate
- On/Off Switch with Auto-Off function



*Image: Side view of the Melitta Aromaboy showing the transparent water tank with 'max' and '2' cup level indicators.*

## SETUP

- 1. Unpack:** Carefully remove all packaging materials and components from the box.
- 2. Initial Cleaning:** Before first use, wash the glass jug and filter holder in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.
- 3. First Brew Cycle (without coffee):** Fill the water tank to the 'max' mark with fresh cold water. Place the empty filter holder and glass jug in position. Plug the machine into a suitable power outlet and switch it on. Allow the full cycle to complete. Discard the water. This cleans the internal components.
- 4. Placement:** Place the coffee machine on a flat, stable, heat-resistant surface, away from water sources and direct heat.

## OPERATING INSTRUCTIONS

- 1. Fill Water Tank:** Open the lid and fill the transparent water tank with fresh, cold water up to the desired level (e.g., '2' for two cups). The water level markers are visible on the side of the tank. Close the lid securely.



*Image: Top view of the Melitta Aromaboy with the lid open, illustrating access to the water tank.*

- 2. Insert Filter and Coffee:** Place a Melitta filter paper (size 100 or similar small cone filter) into the removable filter holder. Add the desired amount of ground coffee into the filter. A general guideline is

one level tablespoon of coffee per cup.



*Image: A hand adding ground coffee into a filter paper placed in the filter holder.*

3. **Position Jug:** Ensure the glass jug is correctly placed on the heating plate beneath the filter holder.
4. **Start Brewing:** Plug the machine into a power outlet. Press the "AUTO OFF" switch to the "ON" position. The indicator light will illuminate, and the brewing process will begin.



*Image: A finger activating the power switch, labeled 'AUTO OFF', on the front of the coffee machine.*

5. **Automatic Shut-Off:** The machine will automatically switch off approximately 40 minutes after the brewing cycle is complete to save energy. You can also manually switch it off at any time.
6. **Serve:** Once brewing is complete, carefully remove the glass jug and pour your coffee.

## CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the lifespan of your coffee machine.

1. **Unplug and Cool:** Always unplug the machine from the power outlet and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The glass jug and removable filter holder are dishwasher safe. Alternatively, wash them by hand in warm, soapy water, then rinse and dry thoroughly.
3. **Clean Exterior:** Wipe the exterior surfaces of the coffee machine with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
4. **Descaling:** Depending on water hardness and frequency of use, descaling may be necessary every 3-6 months. Use a commercially available descaling agent suitable for coffee machines and follow the manufacturer's instructions. Run several cycles with clear water after descaling to rinse thoroughly.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power switch off; power outage.	Ensure plug is securely in outlet; press power switch to ON; check household circuit breaker.
Coffee does not brew or brews slowly.	Water tank empty; filter clogged; machine needs descaling.	Fill water tank; replace filter paper; descale the machine.
Coffee overflows from filter.	Too much coffee grounds; filter paper not correctly placed; fine grind coffee.	Reduce coffee amount; ensure filter paper is seated properly; use a medium grind.
Coffee tastes weak.	Not enough coffee grounds; water tank overfilled.	Increase coffee amount; ensure water level matches desired cups.
Automatic shut-off not working (in some regions).	Voltage differences in certain regions (e.g., USA vs. Europe) can affect the auto-shutoff mechanism.	This is a known characteristic for some units in specific regions. Manually switch off the machine after brewing.

## SPECIFICATIONS

<b>Brand</b>	Melitta
<b>Model Name</b>	AromaBoy (Model 1015)
<b>Type</b>	Drip Coffee Machine
<b>Color</b>	Black
<b>Capacity</b>	0.31 Liters (approx. 2 cups)
<b>Product Dimensions (D x W x H)</b>	1.94" x 2.63" x 3.1"
<b>Item Weight</b>	1.74 pounds
<b>Special Features</b>	Reusable filter, Automatic switch-off (40 minutes)
<b>Dishwasher Safe Parts</b>	Glass jug, Filter holder
<b>Voltage</b>	110V (Note: Performance may vary with regional voltage differences)

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Melitta website. Keep your proof of purchase for any warranty claims.

**Melitta Official Website:** [www.melitta.com](http://www.melitta.com)

