

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [eKids](#) /
- › [eKids Frozen Sing Along Microphone \(Model FR-070\) Instruction Manual](#)

eKids FR-070

# eKids Frozen Sing Along Microphone (Model FR-070) Instruction Manual

Model: FR-070 | Brand: eKids

## INTRODUCTION

This manual provides essential instructions for the safe and effective use of your eKids Frozen Sing Along Microphone, Model FR-070. This microphone is designed for children to enjoy singing along to built-in music and amplifying their voice, featuring flashing lights for an engaging experience.





*Image: The eKids Frozen Sing Along Microphone, featuring a light blue body with a clear, faceted top that illuminates, and a graphic of Anna and Elsa on the handle.*

## SAFETY INFORMATION

- **CHOKING HAZARD - Small Parts.** Not for children under 3 years. This product is suitable for ages 3 and up.
- Always supervise children during use.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Insert batteries with correct polarity (+/-) as indicated.
- Do not attempt to recharge non-rechargeable batteries.
- Remove exhausted batteries from the unit.
- Remove batteries if the unit is not to be used for an extended period, such as a month or longer.

- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery acid comes in contact with skin, wash with soap and water. If battery acid gets into eyes, flush immediately with clean water for at least 15 minutes and seek medical attention.
- Follow applicable state and local regulations for disposal of batteries.

## PACKAGE CONTENTS

- eKids Frozen Sing Along Microphone (Model FR-070)
- 2 x AAA (R03) batteries (included for initial use)

## SETUP: BATTERY INSTALLATION

The microphone requires 2 AAA batteries for operation. Batteries are included for initial use, but may need replacement. Always ensure adult supervision for battery installation.

1. Use a Phillips screwdriver to open the battery compartment door located on the back of the unit.
2. Install 2 'AAA' (R03) batteries, ensuring the correct polarity (+ and - terminals) as indicated inside the compartment.
3. Replace the compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten the screw.



©Disney  
www.disney.com/frozen



Distributed by eKids, LLC • 1299 Main Street  
Rahway, NJ 07065 • www.eKids.com

**CONSUMER INFORMATION** • **PRODUCT:** Sing-Along Microphone. • **WARRANTY:** One year limited warranty. Visit [www.eKids.com/support](http://www.eKids.com/support) for details. Valid only in U.S.A. • **CONTENTS:** Microphone. • **AGE GRADE:** Ages 3 and over. • **REQUIRES:** 2 "AAA" (R03) batteries (included). The batteries included in this box are for demonstration purposes only. Do not mix old and new batteries, and do not mix alkaline, carbon-zinc, or rechargeable nickel-cadmium batteries. Insert batteries with correct polarity (+/-) as indicated. Do not attempt to recharge non-rechargeable batteries. To prevent battery leakage or damage, remove batteries from product if it will not be used for a month or longer. Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eyes gently with flowing, lukewarm water for at least 30 minutes. If skin contact occurs, wash skin with clean water for at least 15 minutes. Seek medical attention if any symptoms occur. Follow applicable laws and local regulations for the disposal and transportation of batteries. DO NOT DISPOSE OF BATTERIES IN A FIRE; BATTERIES MAY EXPLODE OR LEAK. Product specifications and colors may vary from photo. Packaging should be kept as it contains important information. MANUFACTURED IN CHINA

04L1F9

"Let it Go" (Demi Lovato)  
Words and Music by Robert Lopez and  
Kristen Anderson-Lopez  
© 2013 Wonderland Music Company, Inc. (BMI)  
All Rights Reserved.  
Performed by Demi Lovato  
Courtesy of Walt Disney Records




"In Summer"  
Words and Music by Robert Lopez and  
Kristen Anderson-Lopez  
© 2013 Wonderland Music Company, Inc. (BMI)  
All Rights Reserved.  
Performed by Olaf  
Courtesy of Walt Disney Records

#### BATTERY INSTALLATION

Note: Batteries should always be installed by an adult.

1. Use a Phillips screwdriver to open the battery compartment door located on the back of the unit.
2. Install 2 "AAA" (R03) batteries with + and - terminals as indicated in the compartment.
3. Replace the compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten the screw.

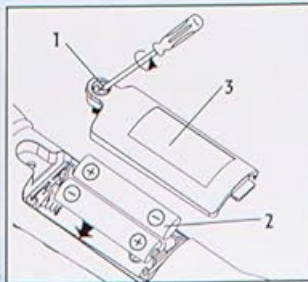

FR-070.EMV22



Image: Diagram illustrating the battery compartment location and proper battery insertion on the back of the product packaging.

## OPERATING INSTRUCTIONS

Your eKids Frozen Sing Along Microphone features built-in music and a real working microphone with flashing lights.



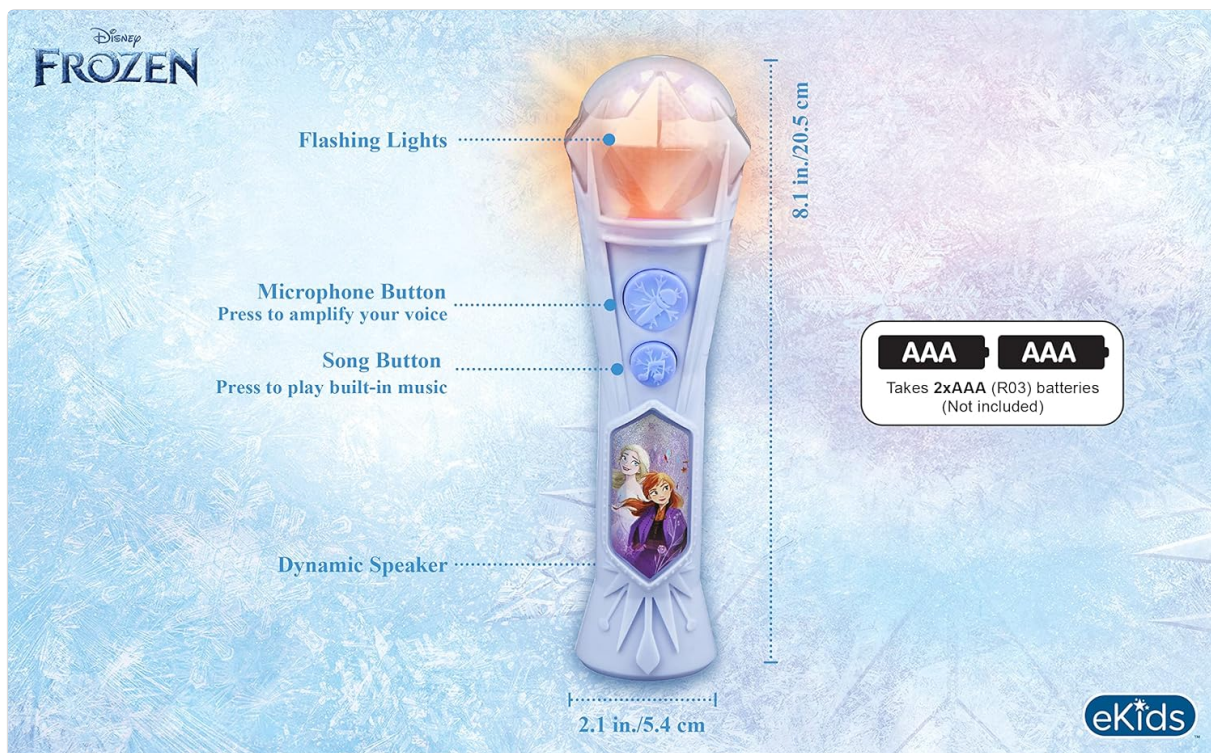


Image: The eKids Frozen Sing Along Microphone with labels pointing to the Microphone Button, Song Button, Flashing Lights, and Dynamic Speaker.

- **Power On/Off:** There is no dedicated power button. The unit activates when a button is pressed and enters standby after a period of inactivity.
- **Song Button:** Press the button labeled with a musical note (located below the microphone button) to play the built-in music. The microphone includes clips of "Let it Go" and "In Summer."
- **Microphone Button:** Press and hold the button labeled with a snowflake (located above the song button) to amplify your voice while singing along.
- **Flashing Lights:** The top portion of the microphone will flash during operation, enhancing the performance experience.
- **External Music Playback:** The microphone can be connected to an external audio device (e.g., smartphone, MP3 player) via a 3.5 mm audio jack (cable not included) to sing along to your own music. Connect the cable to the microphone's input jack and your device's output.

## MAINTENANCE

- Clean the microphone with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Do not immerse the unit in water or expose it to excessive moisture.
- Store the microphone in a cool, dry place away from direct sunlight when not in use.

## TROUBLESHOOTING

Problem	Solution
Microphone does not turn on or lights do not flash.	<ul style="list-style-type: none"> <li>◦ Check if batteries are inserted correctly with the proper polarity.</li> <li>◦ Replace with fresh AAA batteries.</li> </ul>

Problem	Solution
Built-in songs are only short clips (Demo Mode).	A plastic tab may be present in the battery compartment to keep the unit in demo mode. Remove this tab to enable full song playback. This typically requires opening the battery compartment.
Voice amplification is weak or unclear.	<ul style="list-style-type: none"><li>◦ Ensure you are holding the Microphone Button down firmly while speaking or singing.</li><li>◦ Speak directly into the microphone grille.</li><li>◦ Check battery levels and replace if low.</li></ul>
No sound from external device.	<ul style="list-style-type: none"><li>◦ Ensure the 3.5 mm audio cable is securely connected to both the microphone and your external device.</li><li>◦ Check the volume level on your external device.</li></ul>

## SPECIFICATIONS

Feature	Detail
Model Number	FR-070
Brand	eKids
Microphone Form Factor	Handheld
Dimensions (L x W x H)	2.25 x 2.25 x 8.25 inches (5.7 x 5.7 x 21 cm)
Item Weight	4.7 ounces (133 grams)
Power Source	Battery Powered
Batteries Required	2 x AAA (R03) batteries
Material	Plastic
Built-in Music	"Let it Go", "In Summer"
Special Feature	Flashing Lights
Connectivity Technology	Wired (for external audio input)
Connector Type	3.5 mm Jack

## WARRANTY AND SUPPORT

This eKids product comes with a **One Year Limited Warranty** from the date of purchase. For warranty claims or technical support, please refer to the contact information provided on the product packaging or visit the official eKids website.







For further assistance, you may visit the eKids Store:[eKids Official Store](#)

## LEGAL DISCLAIMER

This product is manufactured by KIDdesigns, Inc. All rights reserved. Disney elements are ©Disney. The

songs "Let it Go" and "In Summer" are used with permission. Product appearance and specifications are subject to change without notice.

## Related Documents - FR-070

	<p><a href="#">Shopkins Sing-Along Boombox SN-115 User Manual and Instructions</a></p> <p>Official user manual and instructions for the eKids Shopkins Sing-Along Boombox (Model SN-115), covering setup, operation, troubleshooting, and warranty information.</p>
	<p><a href="#">eKids DG-556 TR-556 Bluetooth MP3 Karaoke with Microphone User Manual</a></p> <p>Comprehensive user manual for the eKids DG-556 TR-556 Bluetooth MP3 Karaoke machine. Includes setup, operation for USB, MP3, and Bluetooth modes, voice control, troubleshooting, FCC/IC compliance, and warranty information.</p>
	<p><a href="#">eKids 554 Series Bluetooth Karaoke with EZ Link User Manual</a></p> <p>This manual provides instructions for the eKids 554 Series Bluetooth Karaoke with EZ Link, covering setup, operation, maintenance, and troubleshooting. Learn how to connect via Bluetooth, use USB mode, record audio, and utilize the EZ Link app for music playlists.</p>
	<p><a href="#">eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M) - User Guide</a></p> <p>User guide for the eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M). Learn about setup, charging, Bluetooth connection, EZ Link app usage, controls, warranty, and troubleshooting.</p>
	<p><a href="#">eKids DG-556 Bluetooth MP3 Karaoke with Microphone User Manual</a></p> <p>Official user manual for the eKids DG-556 Bluetooth MP3 Karaoke system with microphone. Learn how to set up, charge, use USB, MP3, and Bluetooth modes, voice control, troubleshooting, and warranty information.</p>
	<p><a href="#">eKids DE-072 MP3 Microphone User Manual and Instructions</a></p> <p>User manual for the eKids DE-072 MP3 Microphone by Disney, detailing battery installation, maintenance, FCC compliance, and how to use the Song and MP3 playback modes.</p>