

UPBRIGHT SZ360

UpBright AC/DC Adapter User Manual

For Black & Decker SZ360 Series Cordless Rechargeable Power Scissors

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your UpBright AC/DC Adapter. This adapter is designed to provide power and charge compatible Black & Decker SZ360 series 3.6V DC cordless rechargeable power scissors. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent injury or damage to the product:

- **Compatibility:** Ensure the adapter's voltage and connector type match your device's requirements. This adapter features a barrel round plug tip and is **not** compatible with 2-prong connectors.
- **Power Source:** Use only with a compatible power outlet (100-240VAC, 50/60Hz).
- **Protection Features:** The adapter includes Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP) to safeguard your device.
- **Environment:** Do not expose the adapter to water, moisture, or extreme temperatures. Use in a well-ventilated area.
- **Damage:** Do not use the adapter if the cord or plug is damaged. Do not attempt to open or repair the adapter.

3. PRODUCT OVERVIEW

The UpBright AC/DC Adapter is a compact power supply designed for specific Black & Decker cordless tools. It converts AC wall power to the DC voltage required by your device.

UpBright AC Adapter Power Supply Compatible with:



Figure 3.1: UpBright AC/DC Adapter. This image shows the compact black adapter unit with its attached power cable, coiled for storage.

UpBright AC Adapter Power Supply Compatible with:



Figure 3.2: Close-up view of the barrel round plug tip. This is the connector that plugs into your Black & Decker power scissors.

4. SETUP AND COMPATIBILITY

Before connecting the adapter, verify that your Black & Decker power scissors model is compatible and requires a barrel round plug tip.

1. **Identify Your Device:** Confirm your device is a Black & Decker SZ360 series (e.g., SZ360RD, SZ360B, SZ360T, SZ360OR, SZ360S) and requires a 5.3V-5.6V DC input with a barrel round connector.
2. **Check Connector Type:** This adapter features a barrel round plug. It is **not** compatible with devices requiring a 2-prong connector. Refer to Figure 4.1 for visual confirmation.

UpBright AC Adapter Power Supply Compatible with:

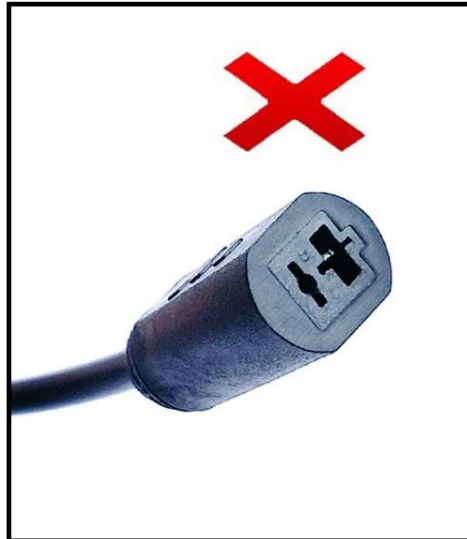


Figure 4.1: Connector Compatibility. The image illustrates the correct barrel round plug (left, with a green checkmark) and an incompatible 2-prong connector (right, with a red 'X').

3. **Connect to Power:** Plug the adapter into a standard wall outlet.
4. **Connect to Device:** Insert the barrel round plug tip into the charging port of your Black & Decker SZ360 power scissors.

5. OPERATING INSTRUCTIONS

Once connected, the adapter will begin charging your device. The charging indicator on your Black & Decker power scissors (if present) will show the charging status.

- **Charging Time:** Refer to your Black & Decker power scissors manual for typical charging times.
- **Battery Voltage Note:** The 3.6V DC rating refers to the battery voltage of the power scissors, not the charger's output voltage. This adapter provides the correct charging voltage (5.3V-5.6V DC) for these 3.6V battery systems.
- **Disconnecting:** Once charging is complete, disconnect the adapter from the power scissors first, then from the

wall outlet.

6. MAINTENANCE

Proper care ensures the longevity of your adapter:

- **Cleaning:** Disconnect from power before cleaning. Wipe the adapter with a dry, soft cloth. Do not use liquid cleaners.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and moisture when not in use. Avoid tightly coiling the cable to prevent damage.
- **Cable Care:** Do not pull the cable forcefully or bend it sharply, as this can damage internal wires.

7. TROUBLESHOOTING

If your device is not charging, consider the following:

- **No Power:** Ensure the wall outlet is functional by testing it with another device.
- **Incorrect Connection:** Verify the adapter is fully plugged into both the wall outlet and your power scissors.
- **Compatibility Issue:** Double-check that the adapter's specifications and connector type are correct for your specific Black & Decker SZ360 model. This adapter is specifically for models requiring a barrel round plug.
- **Device Battery:** Rechargeable batteries have a limited lifespan (typically 1 to 3 years). An old or faulty battery in your power scissors may no longer accept a charge, which is not an issue with the adapter.
- **Damaged Adapter:** If the adapter or cable appears damaged, discontinue use and contact support.

8. SPECIFICATIONS

Feature	Specification
Input Voltage	100-240VAC, 50/60Hz (World Wide Input)
Output Voltage	5.3V - 5.6V DC
Output Current	140mA - 150mA (0.14A - 0.15A)
Wattage	24 watts (Max)
Connector Type	Barrel Round Plug Tip
Compatible Devices	Black & Decker SZ360 series cordless rechargeable power scissors (e.g., SZ360RD, SZ360B, SZ360T, SZ360OR, SZ360S)
Protection Features	OVP, OCP, SCP (Over Voltage, Over Current, Short Circuit Protection)
Product Dimensions	4 x 3 x 2 inches
Item Weight	2.89 ounces

9. WARRANTY AND SUPPORT

UpBright stands behind its products with a commitment to quality.

- **Warranty:** This product comes with a 30-day refund policy and a 24-month exchange warranty from the date of purchase.
- **Customer Support:** For any questions, troubleshooting assistance, or warranty claims, please contact UpBright customer service through your retailer or the official UpBright website.

AU

EU

UK

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE

+ UPBRIGHT® LIMITED WARRANTY

Product Warranty and Return Policy

UpBright Limited Warranty Certificate

PRODUCT WARRANTY

Figure 9.1: International Plug Adapters and Warranty. This image displays different regional plug types (AU, EU, UK) that may be included for international orders, alongside a graphic representing the product warranty.

© 2024 UpBright. All rights reserved. Specifications are subject to change without notice.

Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00JOY3J7O>

More documents and user manuals: <https://manuals.plus/>