

[Manuals.plus](#) /

› [Zoomer](#) /

› Zoomer Dino Electronic Pet Instruction Manual - Model 20063696-6022355

Zoomer 20063696-6022355

Zoomer Dino Electronic Pet Instruction Manual

Model: 20063696-6022355

Brand: Zoomer

Manufacturer: Spinmaster

INTRODUCTION

This manual provides instructions for the safe and proper operation, setup, and maintenance of your Zoomer Dino electronic pet. Please read this manual thoroughly before use and retain it for future reference.



Image: Zoomer Dino electronic pet and remote control shown in original packaging.

IMPORTANT SAFETY INFORMATION

WARNING: Not for children under 5 years of age. Contains small parts which may pose a choking hazard.

Always supervise children during play. Keep the product away from water and extreme temperatures. Do not attempt to modify or disassemble the product. Use only the provided charging cable.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 Zoomer Dino Electronic Pet
- 1 Remote Control
- 1 USB Charging Cable (for Dino)
- 1 Instruction Guide (this manual)

SETUP

1. Remote Control Battery Installation

The remote control requires 3 AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

2. Zoomer Dino Charging

The Zoomer Dino contains a built-in Lithium Polymer battery. It must be charged before first use.

1. Connect the small end of the USB charging cable to the charging port on the Zoomer Dino.
2. Connect the large end of the USB charging cable to a powered USB port (e.g., computer, USB wall adapter).
3. The Dino's eyes will indicate charging status (e.g., red for charging, green for fully charged).
4. A full charge takes approximately 1 hour and provides about 20 minutes of play time.
5. Disconnect the charging cable once charging is complete.

3. Powering On

Locate the power switch on the Zoomer Dino and slide it to the "ON" position. The Dino will perform an initial startup sequence.

OPERATING YOUR ZOOMER DINO

Basic Movement and Interaction

Your Zoomer Dino can move autonomously and respond to your commands.

- **Autonomous Mode:** When left alone, the Dino will explore its surroundings, sniff, and move on its own.
- **Remote Control:** Use the remote control to guide the Dino's movements, make it chomp, or move its head and tail. Refer to the remote control diagram (if provided separately) for specific button functions.
- **Petting:** Petting the Dino's head can elicit different reactions.
- **Emotional Responses:** The Dino's eyes change color to indicate its mood or current mode (e.g., angry, happy, training).

Training Your Dino

The Zoomer Dino can be trained to perform various tricks using hand gestures and voice commands.

1. **Entering Training Mode:** Consult the detailed instructions in the included quick start guide or download the official app for comprehensive training tutorials.
2. **Voice Commands:** The Dino understands English, Spanish, and French. Speak clearly and directly to the Dino.
3. **Gesture Responses:** The Dino can learn gestures for tricks like spinning, sitting, and roaring.
4. **Rewards:** Reward your Dino with positive interaction when it performs a trick correctly.

For advanced training and a full list of tricks, refer to the official Zoomer Dino app available for iOS and Android devices.

MAINTENANCE

Cleaning

To clean your Zoomer Dino, wipe it gently with a clean, damp cloth. Do not immerse the product in water or use harsh chemicals.

Storage

When not in use, store the Zoomer Dino in a cool, dry place, away from direct sunlight. If storing for an extended period, remove batteries from the remote control.

TROUBLESHOOTING

- **Dino is unresponsive:** Ensure the Dino is fully charged and the power switch is in the "ON" position. Check the remote control batteries and ensure they are correctly installed.
- **Short play time:** Ensure the Dino is charged for the full 1 hour. Battery performance may decrease over time with repeated use.
- **Dino does not respond to commands/gestures:** Ensure you are in the correct training mode. Speak clearly and ensure there is no excessive background noise. Refer to the app for precise gesture instructions.
- **Dino falls over frequently:** Ensure the play surface is flat and clear of obstacles. The Dino's balancing mechanism is designed for smooth surfaces.

If issues persist, contact customer support.

SPECIFICATIONS

- **Model Number:** 20063696-6022355
- **Product Dimensions:** 14 x 9.2 x 8 inches
- **Item Weight:** 2.05 pounds
- **Power Source (Dino):** 1 Lithium Polymer battery (built-in, rechargeable)
- **Power Source (Remote):** 3 AAA batteries (not included)
- **Recommended Age:** 5 - 10 years
- **Manufacturer:** Spinmaster

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please visit the official Spinmaster website or contact their customer service department. Keep your proof of purchase for warranty claims.

Spinmaster Official Website: www.spinmaster.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question