



[Manuals.plus](#) /

> [Princess](#) /

> Princess Master Juicer 160W Citrus Juicer Instruction Manual

Princess 201851

Princess Master Juicer 160W Citrus Juicer Instruction Manual

Model: 201851

[Introduction](#) [Safety](#) [Instructions](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#) [Warranty](#) [Support](#)

1. INTRODUCTION

The Princess Master Juicer 160W is a semi-professional citrus juicer designed for efficient juice extraction. Its robust 160-watt motor and professional lever arm ensure maximum juice yield with minimal effort. This appliance features a universal cone suitable for various citrus sizes, an anti-drip system for clean operation, and dishwasher-safe removable parts for easy cleaning. Enjoy fresh, natural juices rich in vitamins and minerals with this reliable and user-friendly juicer.



Image 1.1: The Princess Master Juicer 160W, fully assembled and ready for use. This image shows the sleek stainless steel design and the professional lever arm.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before

connecting.

- Do not immerse the motor unit, cord, or plug in water or any other liquid.
- Keep hands and utensils away from moving parts during operation to prevent injury.
- Always unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use the appliance only for its intended household purpose.
- Do not use outdoors.
- Place the appliance on a stable, flat, and dry surface.

3. SETUP AND ASSEMBLY

Before first use, unpack all components and wash the removable parts thoroughly. Ensure the appliance is placed on a stable, flat, and dry surface.

1. **Unpack Components:** Carefully remove the juicer and all its accessories from the packaging.
2. **Wash Removable Parts:** Wash the universal cone, pulp filter, and juice collector in warm soapy water or in a dishwasher. Rinse thoroughly and dry.
3. **Assemble the Juicer:**
 - Place the juice collector onto the motor unit.
 - Insert the pulp filter into the juice collector.
 - Place the universal cone onto the rotating shaft in the center of the pulp filter.
 - Ensure the anti-drip spout is in the closed position (pointing upwards) if you wish to collect juice before dispensing.
4. **Connect to Power:** Plug the power cord into a grounded electrical outlet. The juicer is now ready for use.





Image 3.1: Disassembled components of the Princess Master Juicer, showing the motor unit, juice collector, pulp filter, and universal cone. These parts are easily separated for cleaning.

4. OPERATING INSTRUCTIONS

Follow these steps to extract juice efficiently from citrus fruits.

1. **Prepare Fruit:** Cut citrus fruits (oranges, lemons, grapefruits, limes) in half.
2. **Place Fruit:** Place one half of the citrus fruit onto the universal cone.
3. **Lower Lever Arm:** Gently lower the lever arm with the pressing dome onto the fruit. The motor will activate automatically when pressure is applied.
4. **Extract Juice:** Apply steady, even pressure to extract the juice. The powerful 160W motor ensures

maximum juice extraction. The edges of the upper cone help keep the fruit half in place.

5. Dispense Juice:

- If the anti-drip spout is closed, juice will collect in the reservoir.
- To dispense, push the anti-drip spout downwards to allow juice to flow directly into a glass or container.

6. Repeat: Lift the lever arm, remove the squeezed fruit half, and repeat the process with the next fruit.



Image 4.1: The Princess Master Juicer in operation, showing a citrus fruit being pressed by the lever arm to extract juice.



Image 4.2: The lever arm of the Princess Master Juicer demonstrating its range of motion for pressing citrus fruits.



Image 4.3: Demonstration of the anti-drip function. The spout can be lifted to stop juice flow or lowered to dispense directly into a glass.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your juicer. Always unplug the appliance before cleaning.

1. **Disassemble:** Lift the lever arm, remove the universal cone, pulp filter, and juice collector from the motor unit.
2. **Wash Removable Parts:** The universal cone, pulp filter, and juice collector are dishwasher safe. Alternatively, wash them by hand in warm soapy water using a soft brush to remove pulp residue. Rinse thoroughly.
3. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
4. **Dry and Reassemble:** Ensure all parts are completely dry before reassembling or storing the juicer.
5. **Storage:** Store the juicer in a clean, dry place.



Image 5.1: The removable parts of the juicer, including the cone, filter, and juice collector, separated for easy cleaning.

These parts are dishwasher safe.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; power outage; appliance not assembled correctly.	Check power cord connection; verify power supply; ensure all parts are correctly assembled.
Motor stops during operation or slows down.	Excessive pressure applied; prolonged continuous use (overheating protection).	Reduce pressure on the lever arm. If the motor stops due to overheating, unplug the unit and allow it to cool down for at least 5-10 minutes before resuming use.
Juice leaks from the spout.	Anti-drip spout is not fully closed.	Ensure the anti-drip spout is pushed fully upwards to the closed position.
Pulp remains in the juice.	Pulp filter is clogged or not properly seated.	Clean the pulp filter thoroughly. Ensure it is correctly placed in the juice collector.

7. PRODUCT SPECIFICATIONS

- **Brand:** Princess
- **Model Name:** 201851 Master Juicer
- **Power:** 160 Watts
- **Voltage:** 220 - 240 Volts
- **Material:** Stainless Steel (exterior, blade), Plastic (some components)
- **Color:** Stainless Steel
- **Dimensions (DxWxH):** 32 cm x 21.4 cm x 31.5 cm (approximately 12.6 x 8.4 x 12.4 inches)
- **Item Weight:** 2.72 Kilograms (approximately 6 lbs)
- **Special Features:** Lever arm, Anti-drip function, Easy to clean, Dishwasher-safe parts, Non-slip base, Powerful motor, Quiet operation.
- **Recommended Use:** Fruits (Citrus)

8. WARRANTY INFORMATION

The Princess Master Juicer 160W comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage resulting from misuse, neglect, accident, alteration, or unauthorized repair.

9. CUSTOMER SUPPORT

For further assistance, product information, or to purchase spare parts, please visit the official Princess website or contact their customer service department. You can also refer to the [User Manual \(PDF\)](#) for additional details.

- **Brand Website:** [Princess Official Store on Amazon](#)
- **Model Number:** 201851
- **ASIN:** B00JRC3CP2