Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- VTech /
- Vtech DS6151 Base with 3 Additional DS6101 Cordless Handsets Bundle User Manual

VTech DS6151 / DS6101

VTech DS6151 Base with 3 Additional DS6101 Cordless Handsets Bundle

USER MANUAL

Model: DS6151 / DS6101

Product Overview

The VTech DS6151 + (3) DS6101 Bundle Telephone System provides a comprehensive communication solution for your home or office. This system includes a cordless base unit (DS6151) and three additional cordless handsets (DS6101), offering multi-location convenience and advanced features.



Image: VTech DS6151 base unit with one cordless handset docked, and three additional DS6101 cordless handsets in their charging cradles. The base unit has a large display and keypad, and the handsets are black with silver keypads.

Key features of this system include:

- DECT 6.0 Technology: Ensures clear sound quality and extended range, minimizing interference.
- Two-Line Operation: Allows for simultaneous handling of calls on two different phone lines.

- **Digital Answering System:** Integrated answering machine with a dedicated mailbox for each line, ensuring no missed messages.
- Expandable System: Supports expansion up to 12 handsets, providing flexibility for larger spaces.
- Caller ID/Call Waiting: Displays caller information and manages incoming calls efficiently.
- Phonebook Directory: Stores up to 50 names and numbers for quick dialing.
- Dual Speakerphone: Both the base and handsets feature speakerphones for hands-free communication.

Setup Guide

1. Package Contents

Verify that your package contains the following items:

- 1 x DS6151 Cordless Handset and Base Unit
- 3 x DS6101 Cordless Handsets
- 4 x Handset Chargers
- 4 x Battery Packs (1 AA battery included per handset)
- 1 x Telephone Line Cord
- 1 x Power Adapter for Base Unit
- 3 x Power Adapters for Handset Chargers

2. Battery Installation

- 1. Open the battery compartment cover on the back of each handset.
- 2. Connect the battery pack plug securely into the jack inside the compartment.
- 3. Place the battery pack into the compartment with the label facing up.
- 4. Close the battery compartment cover.
- 5. Place each handset in its respective charger to charge for at least 16 hours before initial use. A fully charged battery provides optimal performance.

3. Connecting the Base Unit

- 1. Plug one end of the telephone line cord into the TEL LINE jack on the back of the DS6151 base unit.
- 2. Plug the other end of the telephone line cord into a telephone wall jack.
- 3. Plug the large end of the base unit's power adapter into an electrical outlet not controlled by a wall switch.
- 4. Plug the small end of the power adapter into the POWER jack on the back of the DS6151 base unit.
- 5. Ensure all cables are securely connected.

4. Handset Registration

The handsets included in this bundle are pre-registered to the base unit. If a handset becomes unregistered or you purchase additional DS6101 handsets, follow these steps to register them:

- 1. Place the handset you wish to register into the base unit's cradle.
- 2. On the base unit, press and hold the **FIND HANDSET** button for approximately 4 seconds until the IN USE light on the base unit turns on.
- 3. On the handset, the screen will display "Registering..." followed by "Handset Registered" and a beep when successful.
- 4. If registration fails, remove the handset from the base, wait a few moments, and repeat the process.

Operating Instructions

Making and Receiving Calls

- To Make a Call: Pick up a handset or pressTALK/FLASH or SPEAKER. Dial the phone number.
- To Answer a Call: When the phone rings, pressTALK/FLASH or SPEAKER on any handset or the base unit.
- To End a Call: Place the handset back in its cradle or pressOFF.
- Redial: Press REDIAL to call the last dialed number.

Using the Digital Answering System

The DS6151 base unit features a built-in digital answering system with separate mailboxes for each line.

- Setting Up: Follow the voice prompts to record your outgoing message and set the number of rings.
- Playing Messages: Press PLAY/STOP on the base unit or access the answering system menu from any handset.
- **Deleting Messages:** During message playback, press **DELETE** on the base unit or follow handset prompts.

Phonebook and Caller ID

- **Storing Contacts:** You can store up to 50 names and numbers in the phonebook. Access the phonebook menu on the handset to add, edit, or delete entries.
- Caller ID Log: The system stores up to 50 caller ID entries. PressCID on the handset to review the log. You can call back numbers directly from the log.

Two-Line Operation

This system supports two separate telephone lines. The base unit and handsets have dedicated buttons or indicators for Line 1 and Line 2.

- Switching Lines: During a call, you can switch between lines or place a call on the other line if available. Refer to the handset display for line status.
- **Conference Calls:** The system may support 3-way conferencing between two external lines and one internal handset. Consult the full manual for detailed instructions.

Maintenance

Cleaning Your Phone

Clean the phone with a soft, slightly damp cloth. Do not use cleaning agents or abrasive powders. Avoid spraying liquids directly onto the phone.

Battery Care

- Always charge the battery for at least 16 hours before first use.
- For optimal battery life, return the handset to the charger when not in use.
- If the battery performance degrades significantly, it may need replacement. Use only VTech approved replacement batteries.

Troubleshooting

If you experience issues with your VTech DS6151/DS6101 system, try the following common troubleshooting steps:

Problem	Solution

Problem	Solution
No dial tone.	Ensure the base unit's power adapter is securely plugged into a working electrical outlet. Check that the telephone line cord is firmly connected to the base unit and the wall jack. Test the wall jack with another phone to confirm it is active.
Handset displays "No Link to Base" or similar.	Move the handset closer to the base unit. Ensure the base unit is powered on. Re-register the handset to the base unit (refer to "Handset Registration" in the Setup Guide).
Poor sound quality, static, or echo.	Move the handset closer to the base unit. Avoid placing the base unit near other electronic devices (e.g., microwaves, Wi-Fi routers, computers) that may cause interference. Ensure the telephone line cord is not tangled or damaged.
Answering system not recording messages.	Check if the answering system is turned on. Ensure there is sufficient recording time available. Delete old messages if necessary. Verify that the number of rings is set correctly.
Handset buttons unresponsive or difficult to use for prompts.	Ensure the handset battery is fully charged. Clean the keypad and screen gently with a soft, dry cloth. If the issue persists, a system reset (unplugging the base unit for a few minutes) might resolve it.

Technical Specifications

Feature	Detail
Product Dimensions	9.1 x 9.1 x 9.1 inches
Item Weight	5.09 pounds
ASIN	B00JRE6YMS
Batteries	1 AA batteries required (included) per handset
Technology	DECT 6.0
Telephone Type	Cordless
Answering System Type	Digital
Material	Acrylonitrile Butadiene Styrene (ABS)
Power Source	Battery Powered (Handsets), AC Adapter (Base)

Manufacturer	Vtech
First Available Date	April 17, 2014
Compatible Devices	VTech DS6101 Handsets

Detail

Warranty and Support

Feature

For detailed warranty information and technical support, please refer to the official VTech website or contact VTech customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

You can often find additional support resources, FAQs, and contact information on the VTech Official Website.

© 2024 VTech. All rights reserved. This manual is for informational purposes only.

Related Documents - DS6151 / DS6101



VTech DS6101 Accessory Handset User Manual

This user manual provides instructions for setting up, registering, and using the VTech DS6101 accessory handset with the DS6151/DS6151-11 telephone base. It covers battery installation and charging, belt clip and headset usage, handset registration and replacement, and important safety information.



VTech DS6151 Cordless Phone Quick Start Guide

A quick start guide for the VTech DS6151 series cordless phone, covering installation, battery charging, making/answering calls, and using the answering system.



VTech DS6151 Quick Start Guide

Concise guide to installing, setting up, and using the VTech DS6151 cordless phone system, including battery installation, making/answering calls, and managing the answering system.



VTech Cordless Phone Manual Deregistration Codes and Procedures

A guide to deregistering VTech cordless phone models, including specific codes and step-by-step instructions for various models and scenarios like 'Out of Range' or 'No Power'.



VTech CD1113 Cordless Phone User Manual

Comprehensive user manual for the VTech CD1113 cordless phone, detailing installation, operation, features such as Caller ID and speed dial, troubleshooting tips, safety instructions, and warranty information.



VTech CS2050 Cordless Analogue Phone User Guide and Manual

Comprehensive user guide for the VTech CS2050 Cordless Analogue Phone, covering setup, safety, features, warranty, and technical specifications.


Documents - VTech - DS6151 / DS6101



VTech Cordless Phone Manual Deregistration Codes and Procedures

A guide to deregistering VTech cordless phone models, including specific codes and step-by-step instructions for various models and scenarios like 'Out of Range' or 'No Power'.

lang:en score:37 filesize: 101.39 K page_count: 3 document date: 2014-05-05

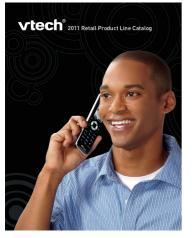

[pdf] Catalog

VTech 2011 RetailProductLineCatalog 4 8 11 vt vtp media catalog

2011 Retail Product Line Catalog The VTech 2011 full product line Welcome to VTech s 2011 lineup. This year s product line is the result of our continuing effort to bring consumers the most advanced designs in telephony products while delivering excellent quality and performance. We have divided o...

lang:en score:26 filesize: 8.57 M page_count: 12 document date: 2011-04-08



[pdf] Accessories Catalog

2011 Full Product Line Catalog With the touch of a button handset speakerphone makes hands free conversations easy Accessory Handset with Caller ID and Speakerphone DS6401 VTech FullProductLineCatalog 4 8 11 vt vtp media catalog |||

2011 Full Product Line Catalog The VTech 2011 full product line Welcome to VTech s 2011 lineup. This year s product line is the result of our continuing effort to bring consumers the most advanced designs in telephony products while delivering excellent quality and performance. We have divided our...

 
lang:en score:24 filesize: 9 M page count: 12 document date: 2011-04-08

ious to Inetall and charge the IMah hatten

generic.

Do please choose the right replacement battery according to the part number of your original oid battery or the detail mode of your cordiese phone. Because different ohone mode uses

Install the bettern on already below



- If the handset will not be used for a long time, disconnect and remove the battery to
- For test performance, keep the handset in the phone base or charger when not in use.

 The battery is fully charged after 12-16 hours of continuous charging.
- If you have any problem on the traffery itself, please feel free to contact our iMah customer support with your order ID and ask your iVah servicetwamanty.

Email: Imandirect@hotmail.com

[pdf] Guide

iMah BT183342 BT283342 BT166342 BT266342 BT162342 BT262342 2SN AAA40H S X2 AAA65H Cordless Phone Battery for VTech CS6114 CS6124 CS6419 CS6429 AT T EL52300 EL52100 4 Pack 600mAh Ryme B1 User Guide IMah iMahDirect B09QYY9ZZB B00QCLY32C B00QCLSQ8O B00QCLK63M B0104MZM6 A11opTR5gHL m media amazon images I BT18433 BT28433 2 4V 750mAh Ni MH Compatible with CS6219 CS6229 DS6301 DS6151 DS6101 BT184342 BT284342 BT 1011 1018 1022 1031 6 |||

...

lang:en score:18 filesize: 1.74 M page_count: 1 document date: 2019-08-26