

LiftMaster 41D621

LiftMaster 41D621 Replacement Keyless Keypad Cover Instruction Manual

1. INTRODUCTION

This manual provides instructions for the installation and maintenance of the LiftMaster 41D621 Replacement Keyless Keypad Cover. This product is designed to replace a damaged or worn-out cover on compatible LiftMaster keyless entry keypads, ensuring continued protection and functionality of your garage door opener system.

2. PRODUCT OVERVIEW

The LiftMaster 41D621 is a durable replacement cover specifically manufactured for various LiftMaster keyless entry keypads. It is designed to protect the keypad's buttons and internal components from environmental elements such as rain, dust, and UV exposure, which can cause wear and tear over time.



Image 1: LiftMaster 41D621 Replacement Keyless Keypad Cover. This image shows the beige replacement cover in an open position, revealing the keypad underneath.

2.1 Compatibility

This replacement cover is compatible with the following LiftMaster keyless entry keypad models:

- LiftMaster 877MAX
- LiftMaster 877LM
- LiftMaster 977LM
- LiftMaster 377LM

Please verify your existing keypad model number to ensure proper fitment before installation.

3. INSTALLATION

Follow these steps to replace your existing keypad cover with the new LiftMaster 41D621 cover.

3.1 Tools Required

- Small flathead screwdriver (optional, for prying if needed)

3.2 Replacement Procedure

1. **Open the Existing Cover:** Gently lift the existing keypad cover to its fully open position.
2. **Identify Hinge Pins:** Observe the hinge mechanism where the cover attaches to the keypad base. There are typically small pins or tabs that hold the cover in place.
3. **Remove Old Cover:** Carefully disengage the old cover from the hinge pins. This may involve gently prying the cover away from the base at the hinge points. Apply minimal force to avoid damaging the keypad base.
4. **Align New Cover:** Take the new LiftMaster 41D621 replacement cover. Align its hinge points with the corresponding slots or pins on the keypad base.
5. **Attach New Cover:** Press the new cover firmly onto the hinge pins until it snaps securely into place. Ensure both sides of the hinge are properly seated.
6. **Test Functionality:** Open and close the new cover several times to ensure it moves smoothly and closes completely, providing adequate protection to the keypad.

4. OPERATION

Once installed, the replacement cover operates identically to the original. Simply lift the cover to access the keypad buttons for entering your code. Close the cover when not in use to protect the keypad from weather and debris.

- **Opening:** Gently lift the bottom edge of the cover upwards until it rests in the open position.
- **Closing:** Push the cover downwards until it clicks securely into its closed position over the keypad.

5. MAINTENANCE

Regular maintenance will extend the life of your replacement keypad cover.

- **Cleaning:** Clean the cover periodically with a soft, damp cloth and mild soap. Avoid abrasive cleaners or solvents, as these can damage the plastic finish.
- **Inspection:** Routinely inspect the cover for any signs of damage, cracks, or wear. Ensure the hinge mechanism is still functioning smoothly.

6. TROUBLESHOOTING

6.1 Cover Does Not Close Properly

- **Check Hinge Alignment:** Ensure the cover's hinge pins are fully seated in the keypad base.
- **Obstructions:** Verify there are no foreign objects or debris preventing the cover from closing completely.

6.2 Cover Feels Loose

- **Re-seat Hinges:** Press firmly on the hinge points to ensure the cover is securely snapped onto the keypad base.
- **Inspect for Damage:** Check if the hinge pins on the cover or the slots on the keypad base are damaged. If damaged, replacement of the cover or keypad may be necessary.

7. SPECIFICATIONS

Feature	Specification
Model Number	41D621
Brand	LiftMaster
Material	Plastic, Stainless Steel
Color	Beige
Item Weight	0.03 Kilograms
Compatible Keypads	877MAX, 877LM, 977LM, 377LM

8. WARRANTY AND SUPPORT

For specific warranty information regarding your LiftMaster 41D621 Replacement Keyless Keypad Cover, please refer to the documentation provided with your original keypad or contact LiftMaster customer support directly. Keep your purchase receipt for warranty claims.

For technical assistance or further inquiries, please visit the official LiftMaster website or contact their customer service department.