

[Manuals.plus](#) /

> [NutriBullet](#) /

> NutriBullet Cup & Blade Replacement Set User Manual

NutriBullet NBM-0501

NutriBullet Cup & Blade Replacement Set User Manual

Model: NBM-0501

Brand: NutriBullet

PRODUCT OVERVIEW

This replacement set ensures you always have clean NutriBullet cups and a sharp blade for preparing your favorite smoothies and blends. It includes an extractor blade, a 24-ounce tall cup, an 18-ounce short cup, a handled lip ring, and a regular lip ring. All components are BPA-free and designed for easy cleaning.



Image: The NutriBullet Cup & Blade Replacement Set, showcasing a filled cup with a smoothie and another cup with fresh ingredients, along with a lip ring.

COMPONENTS INCLUDED

- **Extractor Blade:** Designed for efficient blending and extraction.
- **24-Ounce Tall Cup:** A larger capacity cup for bigger servings.
- **18-Ounce Short Cup:** A smaller cup for individual portions.
- **Handled Lip Ring:** Provides a comfortable grip and smooth drinking surface for the cups.
- **Regular Lip Ring:** Offers a smooth drinking surface without a handle.



Image: A clear view of the NutriBullet replacement cups (tall and short), the extractor blade, and a lip ring, laid out on a surface.

SETUP AND INSTALLATION

This replacement set is designed to be compatible with most NutriBullet models. Ensure your existing NutriBullet base is clean and free of debris before installing new components.

1. **Attach Blade to Cup:** Place your desired ingredients into either the 24-ounce tall cup or the 18-ounce short cup. Align the extractor blade onto the open end of the cup and twist clockwise until it is securely fastened.
2. **Place Cup on Base:** Invert the assembled cup and blade, and place it onto your NutriBullet power base. Press down firmly and twist the cup clockwise to activate the blending mechanism.
3. **Remove After Blending:** Once blending is complete, twist the cup counter-clockwise to release it from the power base. Carefully remove the blade by twisting it counter-clockwise from the cup.
4. **Attach Lip Ring:** For comfortable drinking, attach either the handled lip ring or the regular lip ring to the rim of the cup by twisting it on.



The Original NutriBullet

Image: A NutriBullet blender base with a cup attached, indicating 100% compatibility with replacement parts.

OPERATING INSTRUCTIONS

These replacement cups and blade function identically to the original components. Always ensure the blade is securely attached to the cup before placing it on the power base to prevent leaks.

- Fill the cup with your desired ingredients, ensuring not to exceed the MAX line.
- Securely attach the extractor blade to the cup.
- Place the cup onto the NutriBullet power base and twist to activate.
- Blend until desired consistency is achieved.

- Remove from the base, detach the blade, and attach a lip ring for drinking.



Image: A detailed close-up of the NutriBullet extractor blade, showing its four-pronged design.

MAINTENANCE AND CLEANING

Proper maintenance extends the life of your NutriBullet replacement parts.

- **Dishwasher Safe:** All cups and lip rings are dishwasher safe for convenient cleaning. Place them on the top rack.
- **Hand Washing:** For best results and to prolong the life of the blade, hand wash the extractor blade with warm, soapy water immediately after use. Use a brush to clean around the blades.

- **Drying:** Ensure all components are thoroughly dry before storing to prevent residue buildup.
- **Gasket Care:** Periodically check the gasket within the blade assembly for wear or damage. A worn gasket can lead to leaks. The replacement set includes a new gasket.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender leaks during operation.	Blade not securely tightened; worn or missing gasket.	Ensure the extractor blade is twisted on tightly. Check the gasket for proper seating and replace if damaged.
Blade does not spin or blend effectively.	Blade is dull or worn; incorrect blade type for model; motor base issue.	Replace the blade with a new one from the set. Verify compatibility with your NutriBullet model (e.g., some blades may not fit Pro 900 series). If the issue persists, consult your NutriBullet base manual.
Cups appear cracked or damaged.	Normal wear and tear; impact damage.	Replace the damaged cup with a new one from the set.

SPECIFICATIONS

Brand: NutriBullet

Model Number: NBM-0501

Included Components: Extractor blade, 24 oz tall cup, 18 oz short cup, handled lip ring, regular lip ring

Material: BPA-free plastic (cups), Stainless Steel (blade)

Capacity: 680 Grams (approx. 24 oz)

Product Dimensions: 4.33"D x 8.27"W x 7.28"H

Dishwasher Safe: Yes (cups and lip rings)

WARRANTY AND SUPPORT

This NutriBullet product comes with a **Limited Warranty**. For specific warranty details, claims, or further support, please refer to the official NutriBullet documentation or visit the [NutriBullet Store on Amazon](#). You can also access the official User Manual (PDF) [here](#) for additional information regarding your NutriBullet system.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00JUED8V0>

More documents and user manuals: <https://manuals.plus/>