

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [One Touch](#) /

› [One Touch Lid Opener KC12 Instruction Manual](#)

## One Touch KC12

# One Touch Lid Opener KC12 Instruction Manual

Model: KC12 | Brand: One Touch

## INTRODUCTION

The One Touch Lid Opener KC12 is an automatic device designed to assist in opening jars and vessels with screw-on lids. It operates independently, requiring minimal effort from the user. This manual provides essential information for the safe and effective use, setup, maintenance, and troubleshooting of your One Touch Lid Opener KC12.

## IMPORTANT SAFETY INFORMATION

- Read all instructions before using the appliance.
- Keep the device away from water or other liquids. Do not immerse.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Ensure batteries are inserted correctly according to polarity markings.
- Remove batteries if the device will not be used for an extended period.
- Do not attempt to open cans or containers not specified for this device (e.g., cans with pull-tabs, non-screw lids).
- Keep fingers clear of moving parts during operation.

## SETUP

### Battery Installation

The One Touch Lid Opener KC12 requires 2 AA Mignon batteries (not included) for operation.

1. Locate the battery compartment cover on the underside of the device.
2. Slide or unclip the cover to open the compartment.
3. Insert 2 AA Mignon batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

## OPERATING INSTRUCTIONS

---

The One Touch Lid Opener KC12 is designed to open screw-on lids with a diameter between 30 mm and 101 mm.

1. Place the jar or vessel on a flat, stable surface.
2. Position the One Touch Lid Opener KC12 on top of the jar lid, ensuring the gripping arms are centered around the lid.
3. Press the Power button (typically a prominent button on the top of the device). The opener will automatically grip the lid and begin rotating it.
4. Allow the device to complete its cycle. It will automatically stop once the lid is loosened or removed.
5. Once the operation is complete, carefully lift the opener from the lid. The lid should now be loose or fully removed.



**Image Description:** An automatic lid opener, white with a green power button, is shown positioned on top of a glass jar filled with pumpkin pieces. A hand is pressing the green power button, indicating the start of the opening process. The opener's grey gripping arms are visible around the jar's lid.

## MAINTENANCE AND CLEANING

---

- Wipe the exterior of the device with a soft, damp cloth.
- Do not use abrasive cleaners or immerse the device in water.
- Ensure the gripping mechanisms are free from food debris or other obstructions.
- Store the lid opener in a dry place when not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Batteries are dead or incorrectly inserted.	Check battery polarity or replace with new batteries.
Lid is not opening.	Lid is too tight, outside diameter range, or device not properly positioned.	Ensure the device is centered and gripping the lid securely. Verify lid diameter is within 30-101 mm. Try again with fresh batteries.
Device stops mid-operation.	Low battery power.	Replace batteries.

## SPECIFICATIONS

<b>Brand</b>	One Touch
<b>Model Number</b>	922903
<b>Product Dimensions</b>	24 x 11 x 8 cm
<b>Weight</b>	410 g
<b>Material</b>	Plastic
<b>Operation Mode</b>	Automatic
<b>Lid Diameter Range</b>	30 - 101 mm
<b>Batteries Required</b>	2 x AA Mignon (not included)

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

