

Norpro 930

Norpro Silicone Microwave Omelet Maker (Model 930)

Instruction Manual

INTRODUCTION

The Norpro Silicone Microwave Omelet Maker, Model 930, is designed for quick and convenient preparation of omelets. Crafted from durable, food-grade silicone, this tool allows for fluffy omelets directly in your microwave, eliminating the need for traditional pans or stovetops. Its non-stick properties ensure easy food release and simplified cleanup. The vibrant red color adds a functional element to your kitchen. This omelet maker is ideal for preparing healthy, homemade breakfasts efficiently.

PRODUCT FEATURES

- **Capacity:** Designed for approximately 2 large eggs.
- **Material:** Durable, food-grade silicone.
- **Non-stick:** Ensures easy food release.
- **Versatile:** Microwave, dishwasher, and freezer safe.
- **Dimensions:** Approximately 10" x 1.75" x 4.75" (25.4 cm x 4.45 cm x 12.07 cm).

SETUP

1. **Unpacking:** Carefully remove the omelet maker from its packaging.
2. **Initial Cleaning:** Before first use, wash the omelet maker thoroughly with warm, soapy water. Rinse well and dry completely.
3. **Inspection:** Ensure the silicone is free from any damage or defects.

OPERATING INSTRUCTIONS

Preparing an Omelet

1. **Prepare Ingredients:** Crack 2 large eggs into a bowl. Add a splash of milk (optional, for fluffier omelets), salt, pepper, and any desired fillings such as chopped vegetables, cheese, or cooked meats. Whisk thoroughly until well

combined.

2. **Grease the Maker:** Lightly spray or brush the interior of the silicone omelet maker with cooking oil or butter to prevent sticking, even though it is non-stick.
3. **Pour Mixture:** Carefully pour the egg mixture into the open omelet maker, distributing it evenly into both halves. Do not overfill; leave a small gap at the top to allow for expansion during cooking.
4. **Microwave:** Close the omelet maker. Place it in the microwave. Cooking times may vary based on microwave wattage and desired egg consistency. A general guideline for 2 large eggs is 1-2 minutes at 800W-1000W. Start with 1 minute, then check and add 30-second intervals until cooked to your preference.
5. **Check Doneness:** The omelet is cooked when the eggs are set and firm.
6. **Serve:** Carefully remove the omelet maker from the microwave (use oven mitts if hot). Open the maker and gently slide the omelet onto a plate.



Image: Pouring whisked eggs and vegetables into the red silicone omelet maker.



Image: Adding shredded cheese to the egg mixture in the red silicone omelet maker.



Image: A person placing the closed red silicone omelet maker into a microwave.



Image: A cooked omelet with bacon and tomatoes on a white plate, prepared using the omelet maker.

- **Hand Washing:** Wash the omelet maker with warm, soapy water after each use. Use a soft sponge or cloth to avoid scratching the silicone.
- **Dishwasher Safe:** The Norpro Silicone Omelet Maker is dishwasher safe for convenient cleaning.
- **Drying:** Ensure the omelet maker is completely dry before storing.
- **Storage:** Store in a clean, dry place away from direct sunlight or extreme temperatures.

TROUBLESHOOTING

- **Omelet Sticking:** Ensure the interior of the omelet maker is lightly greased before adding the egg mixture.
- **Uneven Cooking:** Microwave wattages vary. Adjust cooking time and power level as needed. Ensure the egg mixture is evenly distributed.
- **Overflow:** Avoid overfilling the omelet maker. Leave a small space at the top for the eggs to expand during cooking.
- **Rubbery Texture:** Overcooking can lead to a rubbery texture. Reduce cooking time or power level for a softer omelet.

SPECIFICATIONS

Brand:	Norpro
Model Name:	930
Material:	Silicone
Color:	Red
Capacity:	Approximately 2 large eggs
Product Dimensions:	10 x 1.75 x 4.75 inches
Item Weight:	7.4 ounces
Special Feature:	Non Stick
Dishwasher Safe:	Yes
Freezer Safe:	Yes

WARRANTY & SUPPORT

For warranty information or product support, please refer to the packaging or contact Norpro customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question