



[Manuals.plus](#) /

› [KitchenAid](#) /

› KitchenAid KFP0722CU 7-Cup Food Processor Instruction Manual

KitchenAid KFP0722CU

KitchenAid KFP0722CU 7-Cup Food Processor Instruction Manual

Model: KFP0722CU

INTRODUCTION

Thank you for choosing the KitchenAid KFP0722CU 7-Cup Food Processor with Exact Slice System. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The KitchenAid KFP0722CU 7-Cup Food Processor in Contour Silver, fully assembled.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not immerse the motor base in water or other liquid.
- Avoid contact with moving parts. Keep hands and utensils away from cutting blades during operation to prevent

severe personal injury and/or damage to the food processor.

- Always unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

PARTS AND FEATURES

Familiarize yourself with the components of your KitchenAid Food Processor:

- **Motor Base:** Houses the motor and control panel (Off, Low, High, Pulse buttons).
- **Work Bowl:** 7-cup capacity, clear polycarbonate bowl for processing ingredients.
- **Work Bowl Lid:** Clear lid with a 2-in-1 feed tube and Ultra Tight Seal to prevent spills.
- **2-in-1 Wide Mouth Feed Tube:** Allows for processing various sizes of ingredients.
- **Food Pusher:** Used to guide ingredients through the feed tube.
- **Multipurpose Blade:** For chopping, mincing, mixing, and pureeing.
- **Adjustable Stainless Steel Slicing Disc:** Features the Exact Slice System for precise slicing thickness.
- **Reversible Shredding Disc:** For fine or coarse shredding.



Image: The KitchenAid KFP0722CU Food Processor showing the work bowl, lid, and feed tube.



Image: A close-up view of the adjustable slicing lever on the food processor, with perfectly sliced zucchini in the work bowl, demonstrating the Exact Slice System.

SETUP AND ASSEMBLY

Before assembling, ensure all parts are clean. Refer to the 'Care and Cleaning' section for initial cleaning instructions.

1. **Place Work Bowl:** Position the work bowl onto the motor base. Align the raised locking element on the work bowl with the indentation on the base. Turn the work bowl counter-clockwise until it locks securely into place.
2. **Install Accessory:** Select the desired blade or disc (e.g., Multipurpose Blade, Slicing Disc). Carefully place it onto the drive adapter in the center of the work bowl. For the Multipurpose Blade, press down on the top of the blade to ensure it locks into place.
3. **Attach Lid:** Place the work bowl lid onto the work bowl. Ensure the 2-in-1 feed tube is positioned to the left of the handle. Turn the lid clockwise until it locks securely into place.
4. **Insert Food Pusher:** Fit the food pusher into the feed tube opening on the lid.

Important: The food processor will not operate unless the work bowl and lid are correctly locked into position.

Assembly Video Guide

Your browser does not support the video tag.

Video: A detailed guide on how to assemble your KitchenAid Food Processor, demonstrating the correct placement of the work bowl, blades, lid, and food pusher for models KFP0711, KFP0722, and KFP1466.

OPERATING INSTRUCTIONS

Once assembled, your food processor is ready for use. Ensure the appliance is plugged into a grounded outlet.

- **Adding Ingredients:** Place ingredients into the work bowl or feed them through the 2-in-1 wide mouth feed tube while the processor is running. Use the food pusher to guide ingredients.
- **Control Panel:** The control panel features 'Off', 'Low', 'High', and 'Pulse' buttons.
 - **Low/High:** Press 'Low' or 'High' for continuous operation at the selected speed.
 - **Pulse:** Press and hold 'Pulse' for short bursts of power. Release to stop. This is ideal for chopping and controlling texture.
 - **Off:** Press 'Off' to stop the appliance.
- **Exact Slice System:** For models with the Exact Slice System, adjust the external lever to select your desired slicing thickness before processing.

CARE AND CLEANING

Proper cleaning ensures the longevity and performance of your food processor. Always unplug the appliance before cleaning.

- **Dishwasher Safe Parts:** The work bowl, lid, food pusher, and all blades/discs are top-rack dishwasher safe.
- **Hand Washing:** For best results and to prolong the life of plastic components, hand washing with warm, soapy water is recommended. Use caution when handling sharp blades.
- **Motor Base:** Wipe the motor base clean with a damp cloth. Do not immerse the motor base in water or other liquids.



Image: A top-down view of the disassembled KitchenAid Food Processor components, including the motor base, work bowl, lid, and various blades/discs, ready for cleaning.

TROUBLESHOOTING

If your food processor encounters issues, refer to the common troubleshooting tips below.

Food Processor Won't Start

- **Check Assembly:** Ensure the work bowl is correctly placed and twisted counter-clockwise until it locks into the motor base.
- **Verify Lid Lock:** Confirm that the work bowl lid is securely placed and twisted clockwise until it locks into the work bowl. The food processor has safety interlocks that prevent operation if components are not properly aligned and locked.
- **Power Connection:** Make sure the appliance is securely plugged into a functional electrical outlet.

Troubleshooting Video Guide

Your browser does not support the video tag.

Video: This video demonstrates common troubleshooting steps if your KitchenAid Food Processor does not start, focusing on ensuring the work bowl and lid are correctly locked.

SPECIFICATIONS

Brand	KitchenAid
Model Number	KFP0722CU
Capacity	7 Cups
Color	Contour Silver
Wattage	360 watts
Voltage	110 Volts
Material	Polycarbonate (Work Bowl), Stainless Steel (Blades)
Item Weight	8.1 Pounds
Special Feature	Safety Lock, Exact Slice System

WARRANTY AND SUPPORT

Your KitchenAid KFP0722CU Food Processor is backed by a comprehensive warranty.

Warranty Information

This product comes with a **1 Year Hassle Free Replacement Warranty**. For detailed terms and conditions, please refer to the warranty card included with your product or visit the official KitchenAid website.



Image: A badge indicating the KitchenAid 1 Year Limited Warranty.

Customer Support

Should you require assistance, have questions about your product, or need to claim warranty service, please contact KitchenAid Customer Service. Contact information can typically be found on the KitchenAid website or in your product packaging.