

[Manuals.plus](#) /

› [Beetel](#) /

› Beetel X63 Cordless Phone User Manual

Beetel X63

Beetel X63 Cordless Phone User Manual

Model: X63

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Beetel X63 2.4GHz Digital Cordless Phone. Please read this manual carefully to ensure proper use and to maximize the features of your new phone. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The Beetel X63 is a 2.4GHz digital cordless phone designed for reliable communication. It features a phonebook, Caller ID, and a speakerphone function.

2.1 Key Features

- 2.4GHz Digital Technology for clear communication.
- Caller ID (CLI) with memory for 20 incoming calls.
- Phonebook memory for up to 50 entries.
- Two-way Speakerphone for hands-free conversations.
- Outgoing call memory for 10 numbers.
- 10 selectable ringtones.
- Backlight LCD Display for easy viewing.

2.2 Components

The Beetel X63 system consists of a cordless handset and a base unit.



Figure 1: The Beetel X63 cordless phone handset docked in its base unit. The handset features a black casing, a blue backlit LCD screen displaying "BEETEL 1", and a numeric keypad with function buttons like MENU, OK, MUTE/INT, BACK/C, CID/V+, RD/V-, TALK, and END/IO. The base unit is also black with the "beetel" logo printed on it.

The **handset** includes the display, keypad, microphone, and speaker. The **base unit** connects to the telephone line and power supply, and serves as the charging cradle for the handset.

3. SETUP

3.1 Battery Installation

1. Open the battery compartment cover on the back of the handset.

2. Insert two AAA rechargeable batteries (not included, but required for operation) according to the polarity markings (+ and -).
3. Close the battery compartment cover securely.

3.2 Connecting the Base Unit

1. Connect one end of the telephone line cord to the TEL LINE jack on the base unit.
2. Connect the other end of the telephone line cord to your telephone wall jack.
3. Connect the small plug of the AC power adapter to the DC IN jack on the base unit.
4. Plug the AC power adapter into a standard electrical outlet.

3.3 Initial Charging

Place the handset on the base unit. The handset should display a charging indicator. For optimal battery performance, charge the handset continuously for at least 15 hours before its first use, even if the display indicates a full charge sooner.

4. OPERATING INSTRUCTIONS

4.1 Making and Receiving Calls

- **To Make a Call:**
 - a. Press the **TALK** button.
 - b. Dial the desired phone number using the keypad.
 - c. To end the call, press the **END/IO** button or place the handset back on the base unit.
- **To Receive a Call:**
 - a. When the phone rings, press the **TALK** button.
 - b. To end the call, press the **END/IO** button or place the handset back on the base unit.

4.2 Using the Speakerphone

During a call, press the **TALK** button again to activate the speakerphone function. Press it again to switch back to the earpiece.

4.3 Phonebook Functions

The phonebook can store up to 50 entries.

- **To Store a Number:**
 - a. Press **MENU**.
 - b. Navigate to "PHONEBOOK" using the **CID/V+** or **RD/V-** buttons.
 - c. Press **OK**.
 - d. Select "ADD NEW" and press **OK**.
 - e. Enter the name and number, then press **OK** to save.
- **To Dial from Phonebook:**
 - a. Press **MENU**.
 - b. Navigate to "PHONEBOOK" and press **OK**.
 - c. Scroll through entries using **CID/V+** or **RD/V-**.
 - d. Press **TALK** to dial the selected entry.

4.4 Caller ID (CLI)

The phone stores the last 20 incoming call numbers. To review:

1. Press the **CID/V+** button to access the Caller ID list.
2. Use **CID/V+** or **RD/V-** to scroll through the entries.
3. To dial a number from the list, press **TALK**.

4.5 Outgoing Call Memory

The phone stores the last 10 outgoing call numbers. To review and redial:

1. Press the **RD/V-** button to access the outgoing call list.
2. Use **CID/V+** or **RD/V-** to scroll through the entries.
3. To dial a number from the list, press **TALK**.

4.6 Mute Function

During a call, press the **MUTE/INT** button to mute your microphone. The other party will not hear you. Press **MUTE/INT** again to unmute.

4.7 Ringer Volume and Ringtones

Settings for ringer volume and ringtone melodies can be adjusted through the **MENU** options. Refer to the on-screen prompts for navigation.

5. MAINTENANCE

- **Cleaning:** Wipe the phone and base unit with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** Use only rechargeable AAA batteries. If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- **Environment:** Keep the phone away from direct sunlight, heat sources, and moisture.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone / "Searching" displayed	◦ Base unit not connected to telephone line. ◦ Handset out of range or not registered. ◦ Batteries low or not properly installed.	◦ Ensure telephone line cord is securely connected. ◦ Move handset closer to the base unit. Re-register if necessary (refer to manufacturer's specific instructions for re-registration, usually found in a full manual). ◦ Check battery installation and charge the handset for at least 15 hours.
Poor sound quality / Static	◦ Interference from other electronic devices. ◦ Handset too far from base unit.	◦ Move the base unit or handset away from other electronic devices (e.g., Wi-Fi routers, microwaves). ◦ Move closer to the base unit.

Problem	Possible Cause	Solution
Handset not charging	◦ Handset not properly seated in cradle. ◦ Power adapter not connected or faulty. ◦ Batteries are old or defective.	◦ Ensure handset is correctly placed in the base unit. ◦ Check power connections. ◦ Replace old batteries with new rechargeable AAA batteries.
Battery drains quickly	◦ Old or worn-out batteries. ◦ Frequent long calls or speakerphone use.	◦ Replace batteries with new rechargeable AAA batteries. ◦ Ensure handset is returned to the base unit for charging when not in use.

7. SPECIFICATIONS

Brand	Beetel
Model	X63
Telephone Type	Cordless
Frequency	2.4GHz Digital
Display Type	LCD (Backlight)
Phonebook Memory	50 entries
Caller ID Memory	20 numbers
Outgoing Call Memory	10 numbers
Power Source	Corded Electric (for base unit)
Batteries Required	2 x AAA rechargeable batteries
Product Dimensions (LxWxH)	16 x 14.9 x 6.8 cm
Item Weight	380 g

8. WARRANTY AND SUPPORT

The Beetel X63 Cordless Phone is covered by a manufacturer's warranty. For specific warranty terms, duration, and service procedures, please refer to the warranty card included with your product or contact Beetel customer support directly. Any claims or disputes are subject to the jurisdiction specified by the manufacturer.

For technical assistance or customer support, please visit the official Beetel website or refer to the contact information provided in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00JZL8OGM>

More documents and user manuals: <https://manuals.plus/>