

[Manuals.plus](#) /

› [Betty Crocker](#) /

› Betty Crocker 2-Slice Cool Wall Toaster Instruction Manual

Betty Crocker BC-2605CB

Betty Crocker 2-Slice Cool Wall Toaster Instruction Manual

Model: BC-2605CB

Brand: Betty Crocker

PRODUCT OVERVIEW

The Betty Crocker 2-Slice Cool Wall Toaster (Model BC-2605CB) is designed for efficient and safe toasting. Its cool-touch housing minimizes the risk of burns during operation. Featuring wide 30mm slots, this toaster accommodates various bread types, including thick slices, bagels, Belgian waffles, English muffins, and crumpets. Key functionalities include a toast cancel feature, an extra-lift mechanism for easy retrieval of smaller items, and an electronic variable toast shade dial for precise browning control. A convenient pull-down crumb tray simplifies cleaning.



Front view of the Betty Crocker 2-Slice Cool Wall Toaster in black.

SETUP

Before first use, ensure all packaging materials are removed from the toaster and its slots. Place the toaster on a stable, heat-resistant surface away from flammable materials. Ensure adequate ventilation around the appliance.



The Betty Crocker 2-Slice Toaster as it appears in its retail packaging.

Plug the power cord into a standard electrical outlet. For initial use, it is recommended to operate the toaster without bread on the highest setting a few times to burn off any manufacturing residues and eliminate new appliance odors. This is normal and will dissipate.




Close-up view of the toaster's power cord and plug.

OPERATING INSTRUCTIONS

This toaster is equipped with features designed for optimal toasting performance and user convenience.

Loading Bread

Insert up to two slices of bread, bagels, or other toastable items into the wide 30mm slots. The internal bread centering guides will automatically adjust to hold the bread in place for even toasting.

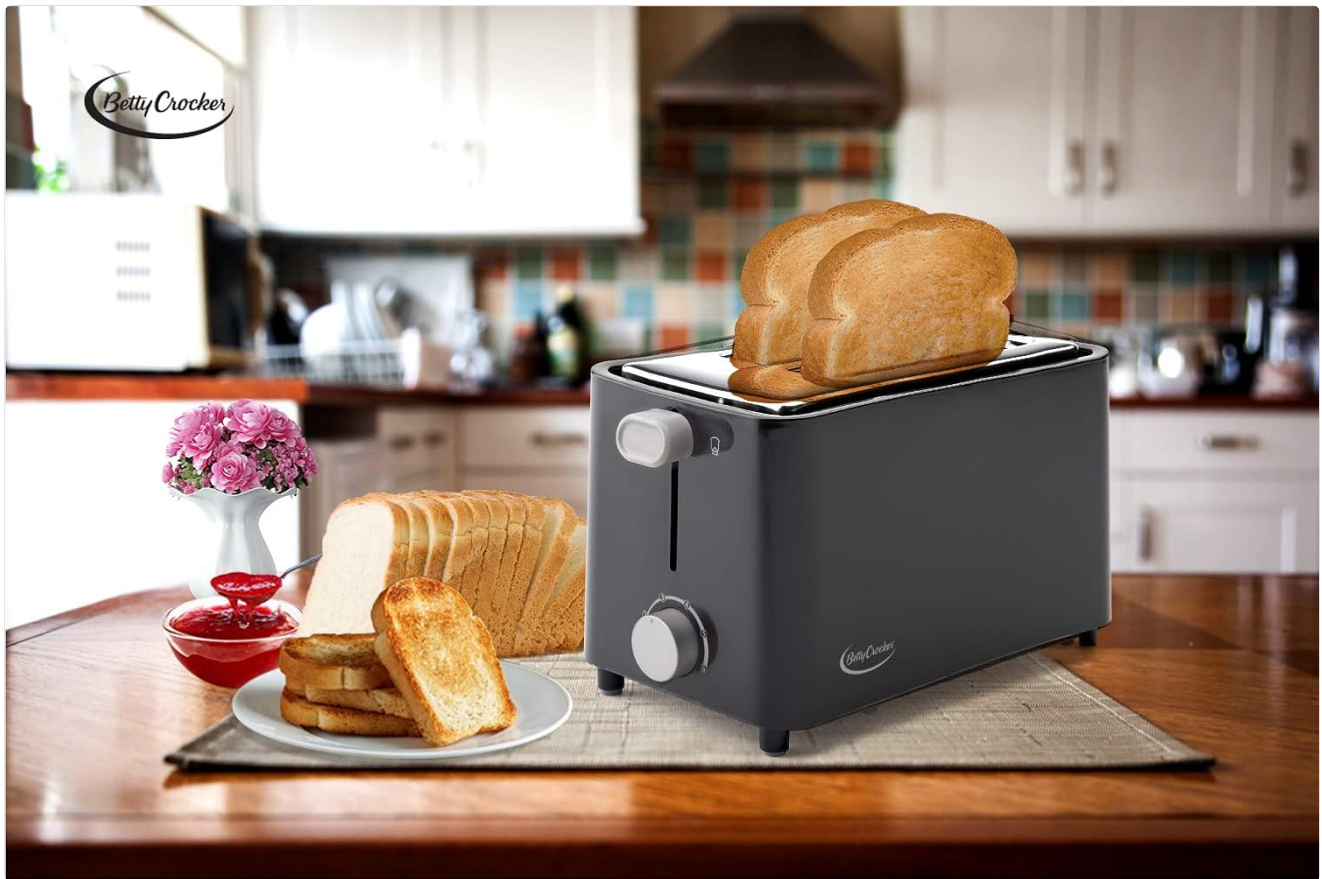

The toaster in use, with two slices of toast visible.

Shade Control

Use the electronic variable toast shade dial located on the front of the toaster to select your desired browning level. Settings typically range from 1 (lightest) to 6 (darkest).

Starting and Stopping Toasting

Press down the toast lever until it latches into place. The toaster will begin the toasting cycle. To stop the toasting cycle at any time, press the 'Cancel' button or lift the toast lever.

Extra Lift Feature

For smaller items that may be difficult to retrieve, the extra-lift feature allows you to raise the toast carriage higher than its resting position, making it easier and safer to remove your toasted items.

Official product video demonstrating the toaster's shade control, toast cancel, extra lift features, cool-wall housing, wide slots, and the pop-down crumb tray for easy cleaning.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster. Always unplug the toaster and allow it to cool completely before cleaning.

Crumb Tray

The toaster is equipped with a pull-down crumb tray located at the bottom. To clean, simply pull out the tray, discard accumulated crumbs, and wipe the tray clean with a damp cloth. Ensure the tray is completely dry before reinserting it into the toaster.

Exterior Cleaning

Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish. Never immerse the toaster in water or any other liquid.

TROUBLESHOOTING

Toaster Not Operating

- Ensure the toaster is securely plugged into a working electrical outlet.
- Check if the circuit breaker has tripped.
- Make sure the toast lever is fully depressed and latched.

Toast Too Light or Too Dark

- Adjust the electronic variable toast shade dial to a higher setting for darker toast or a lower setting for lighter toast.
- Different types of bread may require different shade settings.

Bread Stuck in Toaster

- Unplug the toaster immediately.
- Carefully use the extra-lift feature to raise the bread. If still stuck, gently remove the bread with non-metallic tongs. Never use metal utensils.

Burning Smell During First Use

- A slight burning smell during the first few uses is normal due to manufacturing residues. This will dissipate with continued use. Ensure adequate ventilation.

PRODUCT SPECIFICATIONS

Brand	Betty Crocker
Model Number	BC-2605CB
Color	Black
Material	Stainless Steel
Product Dimensions	7.05"D x 11.14"W x 6.06"H
Wattage	800 watts
Number of Slices	2
Number of Settings	6
Item Weight	1.6 ounces



Dimensional overview of the Betty Crocker 2-Slice Toaster.

WARRANTY INFORMATION

Betty Crocker appliances include a 1-year limited warranty. For specific terms and conditions, please refer to the warranty documentation included with your product or contact customer support.

CUSTOMER SUPPORT

For further assistance, product inquiries, or troubleshooting not covered in this manual, please contact Betty Crocker customer support.

Visit the official [Betty Crocker Store on Amazon](#).

For a downloadable PDF version of the User Manual, please refer to the product's documentation section on the retailer's website or click [here](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question