

Fluke 362

Fluke 362 200A AC/DC Clamp Meter Instruction Manual

Model: 362 | Brand: Fluke

1. INTRODUCTION

This manual provides essential instructions for the safe and effective operation, maintenance, and troubleshooting of your Fluke 362 200A AC/DC Clamp Meter. Please read this manual thoroughly before using the device to ensure proper functionality and safety.

The Fluke 362 is a compact and versatile clamp meter designed for measuring AC and DC current up to 200A, AC and DC voltage up to 600V, resistance up to 3000 Ω , and continuity. Its ergonomic design and robust construction make it suitable for various electrical measurement tasks.

2. SAFETY INFORMATION

WARNING: To prevent possible electrical shock, fire, or personal injury, read all safety information before you use the product.

- Always adhere to local and national safety codes.
- Do not use the meter if it is damaged or operating abnormally.
- Ensure the function switch is in the correct position for the measurement being performed.
- Do not apply more than the rated voltage, as marked on the meter, between the terminals or between any terminal and earth ground.
- The Fluke 362 is rated for CAT III 600 V. This rating indicates suitability for measurements in distribution boards, circuit breakers, wiring, including cables, bus-bars, junction boxes, switches, and socket outlets in the fixed installation, and industrial use equipment.
- Use caution when working with voltages above 30 V AC RMS, 42 V peak, or 60 V DC. These voltages pose a shock hazard.
- Remove test leads from the circuit before opening the battery cover.
- Replace batteries when the low battery indicator appears to ensure accurate readings.

3. PRODUCT OVERVIEW

The Fluke 362 clamp meter features a robust design for reliable performance in various environments. Familiarize yourself with its components:

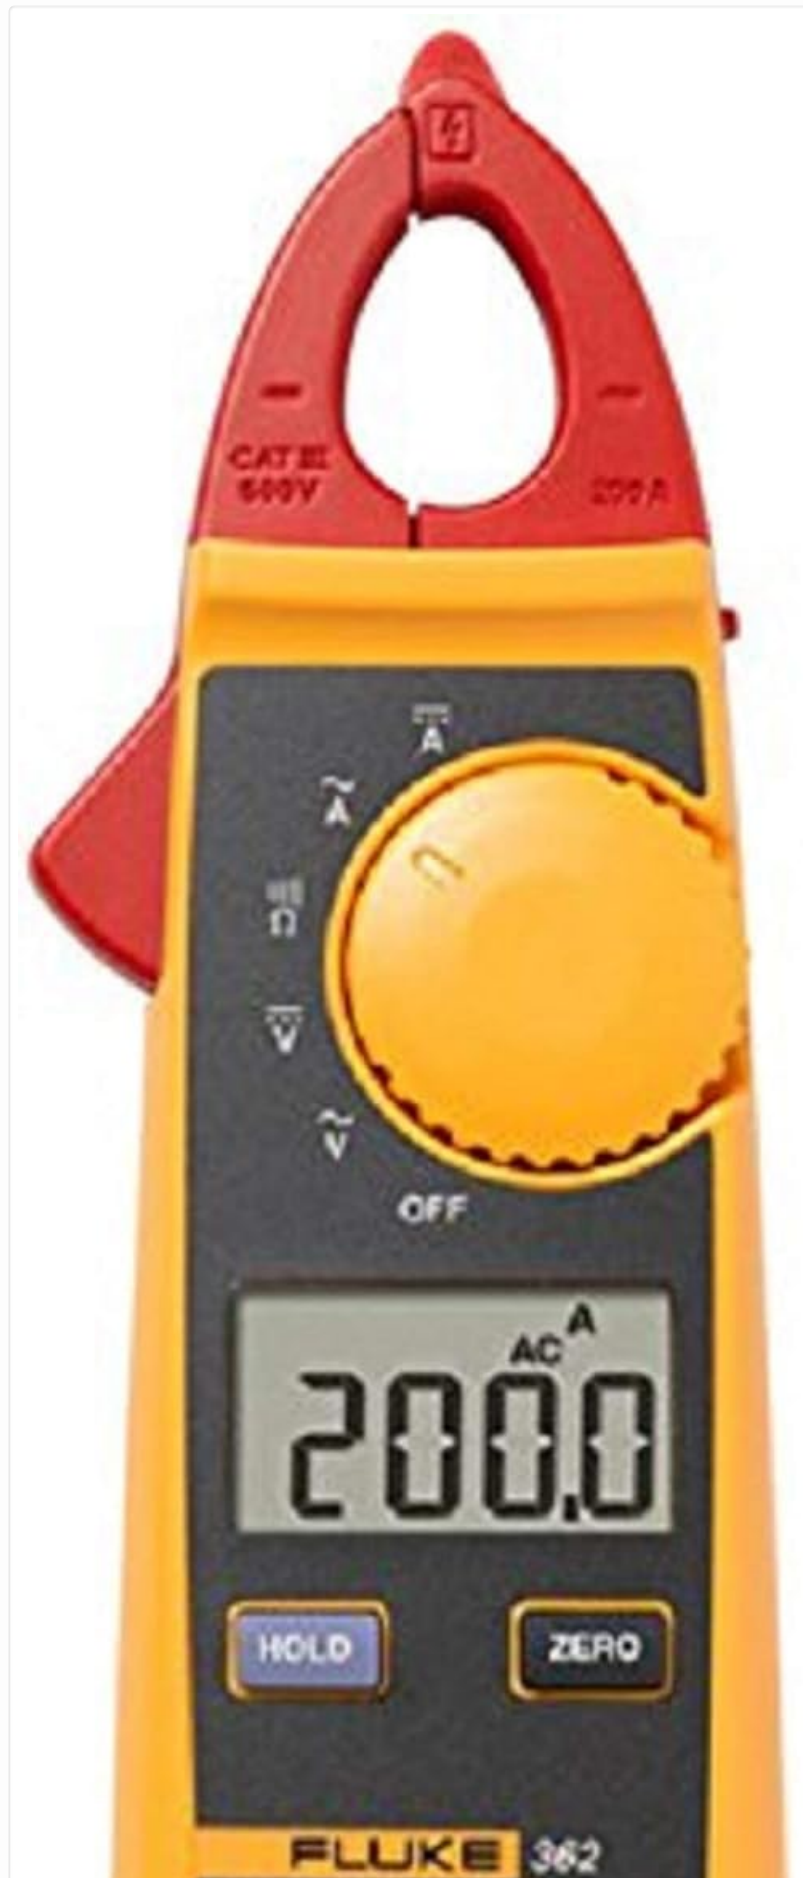 




Figure 1: Front view of the Fluke 362 Clamp Meter, showing the display, function dial, jaw, and buttons.



Figure 2: The Fluke 362 Clamp Meter held in a gloved hand, illustrating its compact size and ergonomic design for single-hand operation.

Key Components:

- **Current Clamp Jaw:** For non-contact AC/DC current measurements. Features an 18 mm triangular jaw for access in tight spaces.

- **Function Dial:** Rotary switch to select measurement functions (AC/DC current, AC/DC voltage, resistance, continuity).
- **LCD Display:** Large, easy-to-read digital display for measurement results.
- **HOLD Button:** Freezes the current reading on the display.
- **ZERO Button:** Used to clear the display for DC current measurements, compensating for any offset.
- **Input Terminals:** For connecting test leads for voltage, resistance, and continuity measurements.

Key Features:

- 200 A AC/DC current measurement capability.
- 600 V AC/DC voltage measurement capability.
- 3000 Ω resistance range.
- Continuity detection with audible indicator.
- Zero function for accurate DC measurements.
- Data hold function to capture readings.
- Large, clear display for easy viewing.
- Compact and lightweight design for one-hand operation.
- CAT III 600 V safety rating.

4. SETUP

4.1 Battery Installation

The Fluke 362 is battery-powered. Although batteries are not included with all packages, they are required for operation. To install or replace batteries:

1. Ensure the meter is turned OFF and no test leads are connected.
2. Locate the battery compartment cover on the back of the meter.
3. Use a screwdriver to loosen the screw(s) securing the cover.
4. Remove the cover and insert the required batteries, observing correct polarity (+/-).
5. Replace the battery cover and tighten the screw(s).

4.2 Test Lead Connection

For voltage, resistance, and continuity measurements, connect the test leads to the input terminals:

- Insert the black test lead into the “COM” (common) terminal.
- Insert the red test lead into the “V Ω ” (voltage/resistance) terminal.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Rotate the function dial from the “OFF” position to any desired measurement function to power on the meter. To power off, rotate the dial back to the “OFF” position.

5.2 Function Selection

Use the rotary function dial to select the desired measurement mode (e.g., A~ for AC current, A— for DC current, V~ for AC voltage, V— for DC voltage, Ω for resistance, or continuity).

5.3 AC/DC Current Measurement (Clamp)

To measure current using the clamp jaw:

1. Rotate the function dial to A~ (AC current) or A— (DC current).
2. For DC current measurements, press the “ZERO” button to clear any offset before clamping.
3. Open the clamp jaw by pressing the trigger.
4. Enclose only one conductor within the jaw. Ensure the jaw is fully closed.
5. Read the current value on the display.

5.4 AC/DC Voltage Measurement

To measure voltage:

1. Connect the test leads as described in Section 4.2.
2. Rotate the function dial to V~ (AC voltage) or V— (DC voltage).
3. Connect the test probes in parallel to the circuit or component you wish to measure.
4. Read the voltage value on the display.

5.5 Resistance Measurement

To measure resistance:

1. Ensure the circuit or component is de-energized before measuring resistance.
2. Connect the test leads as described in Section 4.2.
3. Rotate the function dial to Ω (resistance).
4. Connect the test probes across the component.
5. Read the resistance value on the display.

5.6 Continuity Test

To perform a continuity test:

1. Ensure the circuit or component is de-energized.
2. Connect the test leads as described in Section 4.2.
3. Rotate the function dial to the continuity position (often shared with resistance, indicated by a speaker icon).
4. Connect the test probes across the component or wire.
5. The meter will emit an audible tone if continuity is detected (resistance below a certain threshold).

5.7 Zero Function (DC Measurements)

The “ZERO” button is primarily used for DC current measurements. Before taking a DC current reading, with the clamp jaw open and no conductor inside, press the “ZERO” button to eliminate any residual offset and ensure accurate readings.

5.8 Data Hold Function

Press the “HOLD” button to freeze the current reading on the display. This is useful for taking readings in hard-to-see locations. Press “HOLD” again to release the reading and return to live measurement.

6. MAINTENANCE

6.1 Cleaning

To clean the meter, wipe it with a damp cloth and a mild detergent. Do not use abrasives or solvents. Ensure the meter is completely dry before use.

6.2 Battery Replacement

When the low battery indicator appears on the display, replace the batteries promptly to maintain measurement accuracy. Refer to Section 4.1 for battery installation instructions.

6.3 Storage

If the meter is not used for an extended period, remove the batteries to prevent leakage and damage. Store the meter in a dry, cool environment, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your Fluke 362, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Meter does not power on or display is blank.	Dead or incorrectly installed batteries.	Check battery polarity or replace batteries.
Inaccurate readings.	Low battery, incorrect function selected, external interference, or un-zeroed DC current.	Replace batteries, select correct function, move away from strong electromagnetic fields, or use the ZERO function for DC current.
Continuity tone is too low or inaudible.	Noisy work environment.	Relocate to a quieter area or rely on the visual display for continuity indication.
“OL” (Overload) displayed.	Measurement exceeds the meter’s range.	Ensure the measurement is within the specified range for the selected function.

If the problem persists after attempting these solutions, contact Fluke customer support.

8. SPECIFICATIONS

Parameter	Specification
Brand	Fluke
Model	362
AC Current Range	200 A
DC Current Range	200 A
AC Voltage Range	600 V
DC Voltage Range	600 V
Resistance Range	3000 Ω
Safety Rating	CAT III 600 V
Jaw Opening	18 mm
Power Source	Battery Powered
Dimensions (L x W x H)	7.87 x 1.57 x 3.94 inches
Item Weight	14.1 ounces (400 Grams)
UPC	095969672191
Model Number	4345498

9. WARRANTY AND SUPPORT

Fluke products are designed for reliability and performance. For specific warranty details, please refer to the warranty card included with your product or visit the official Fluke website. Keep your purchase receipt as proof of purchase.

For technical support, service, or calibration, please contact Fluke customer service through their official website or the contact information provided in your product packaging. When contacting support, please have your model number (Fluke 362) and serial number (if applicable) ready.

© 2023 Fluke Corporation. All rights reserved.

This manual is for informational purposes only.

 Fluke 373 True-RMS AC Clamp Meter	Fluke 373 True-RMS AC Clamp Meter - Technical Specifications and Overview Detailed technical data, key features, product overview, specifications, and ordering information for the Fluke 373 True-RMS AC Clamp Meter, designed for AC-only current measurements up to 600 A.
 381 Remote Display True-rms Clamp Meter	Fluke 381 Remote Display True-rms Clamp Meter User Manual Comprehensive user manual for the Fluke 381 Remote Display True-rms Clamp Meter. Covers product features, measurement procedures for AC/DC current, voltage, resistance, frequency, inrush current, maintenance, specifications, and safety information. Includes detailed descriptions of diagrams and tables.
 User Manual of Product 1: Fluke 375 FC True-RMS AC/DC Clamp Meter, Wireless AC/DC Current 10/600 A and AC/DC Voltage 75/1000 V, CAT II 1000 V, CAT IV 600 V Safety Rating, Includes Batteries and Self-Carrying Case	Fluke 370 FC Series True-RMS Wireless AC/DC Clamp Meters User Manual & Specifications Comprehensive user manual and technical specifications for the Fluke 370 FC Series True-RMS Wireless AC/DC Clamp Meters, including models 374 FC, 375 FC, and 376 FC. Features, capabilities, comparison charts, and ordering information.
 323/324/325 Clamp Meter	Fluke 323/324/325 Clamp Meter User Manual - Specifications & Safety Comprehensive user manual for the Fluke 323, 324, and 325 Clamp Meters. Includes safety information, electrical and mechanical specifications, and operating instructions.
 305 Clamp Meter	Fluke 305 Clamp Meter User Manual User manual for the Fluke 305 Clamp Meter, providing detailed safety information, product specifications, and operational guidance for accurate electrical measurements.
 2024 TEST TOOLS CATALOG	Fluke 2024 Test Tools Catalog: Comprehensive Guide to Electrical and Industrial Measurement Equipment Explore the Fluke 2024 Test Tools Catalog, featuring a comprehensive range of electrical testers, industrial imaging solutions, power quality analyzers, digital multimeters, and specialized tools for solar PV, EV charging, and industrial maintenance. Discover Fluke's latest innovations and trusted measurement solutions.




[\[pdf\]](#) User Manual Specifications Warranty

320 Series True rms Clamp Meters Fluke 36 Meter Manual Pdf Instruction Sheet P Industrial Calibration
4333185 6135 ENG A W dam assets fluke cn s3fs public |||

Fluke **362** Clamp Meter Ready to go wherever your work takes you. The new Fluke **362** Clamp Meter is designed to fit easily in your pocket. The small 18 mm triangular jaw allows access into tight places where other clamp meters can't reach, while providing the accuracy you can trust from a Fluke tool. T...

 lang:en **score:34** filesize: 733.44 K page_count: 2 document date: 2013-04-09

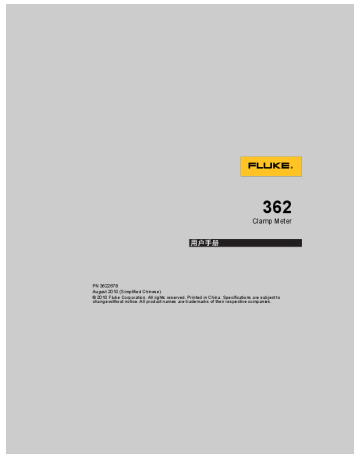


[\[pdf\]](#) Specifications

untitled 362 umchi0000 assets fluke manuals |||

362 Clamp Meter PN **3622678** August 2010 Simplified Chinese 2010 Fluke Corporation. All rights reserved. Printed in China. Specifications are subject to change without notice. All product names are trademarks of their respective companies. Fluke Fluke Fluke Fluke FLUKE Fluke Corpor...

 lang:no **score:32** filesize: 1.04 M page_count: 20 document date: 2010-07-26

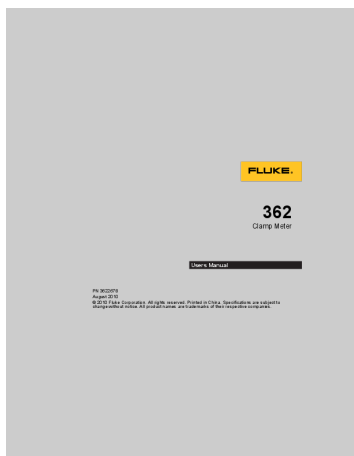


[\[pdf\]](#) User Manual Specifications Warranty

untitled 362 umeng0000 assets fluke 80 manuals

362 Clamp Meter Users Manual PN **3622678** August 2010 2010 Fluke Corporation. All rights reserved. Printed in China. Specifications are subject to change without notice. All product names are trademarks of their respective companies. LIMITED WARRANTY AND LIMITATION OF LIABILITY This Fluke product ...

 lang:en **score:32** filesize: 924.08 K page_count: 20 document date: 2010-07-26

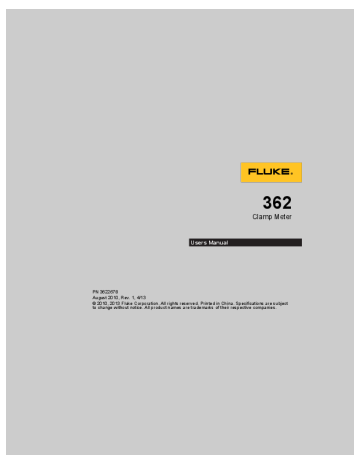


[\[pdf\]](#) User Manual Specifications Warranty

untitled 362 umeng0100 assets fluke 80 manuals


Users Manual **362** Clamp Meter PN **3622678** August 2010, Rev. 1, 4/13 2010, 2013 Fluke Corporation. All rights reserved. Printed in China. Specifications are subject to change without notice. All product names are trademarks of their respective companies. LIMITED WARRANTY AND LIMITATION OF LIABILITY...

 lang:en **score:32** filesize: 938.57 K page_count: 24 document date: 2013-04-17

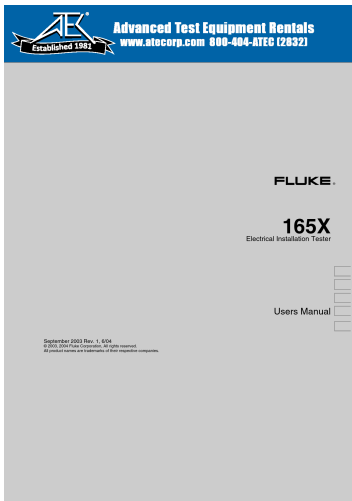


[\[pdf\]](#) User Manual Specifications Datasheet Warranty

Manual Fluke 1650 Power Quality Analyzers Rentals ATEC fluke manual atecorp media s data sheets ||| Established 1981 Advanced Test Equipment Rentals www.atecorp.com 800-404-ATEC 2832 September 20 ... Installation Tester Specifications Loop Re Maximum Display Value 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 53 165X Users Manual RCD Tests Limit Value 20 30 40 50 60 70 80 90 10...
lang:en score:24 filesize: 1.71 M page_count: 80 document date: 2015-05-01

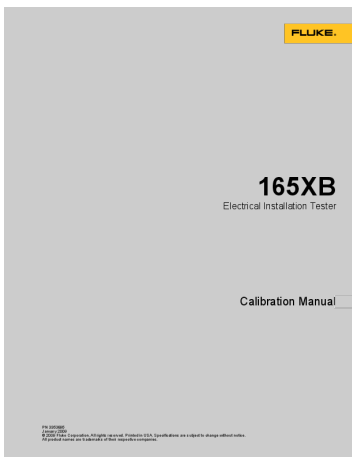 


[\[pdf\]](#) User Manual Specifications Warranty

untitled 165XB Calibration manual Fluke Manuals Discontinued Legacy and Current Product 165xb cmeng0000 dam assets fluke s3fs public ||| 165XB Electrical Installation Tester Calibration Manual PN 3353895 January 2009 2009 Fluke Corporat ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 6 Electrical Installation Tester Specifications RCD/FI Tests T, IN ...
lang:en score:24 filesize: 1.74 M page_count: 40 document date: 2009-02-23

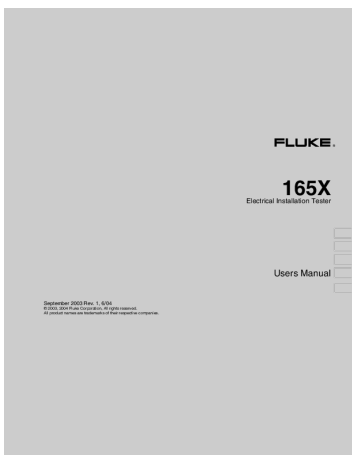 

[\[pdf\]](#) User Manual Specifications Warranty

165X Users manual Fluke Manuals Discontinued Legacy and Current Product 165x umeng0100 dam assets fluke s3fs public ||| September 2003 Rev. 1, 6/04 2003, 2004 Fluke Corporation, All rights reserved. All product names ar ... Installation Tester Specifications Loop Re Maximum Display Value 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 53 165X Users Manual RCD Tests Limit Value 20 30 40 50 60 70 80 90 10...
lang:en score:24 filesize: 1.74 M page_count: 80 document date: 2004-05-27

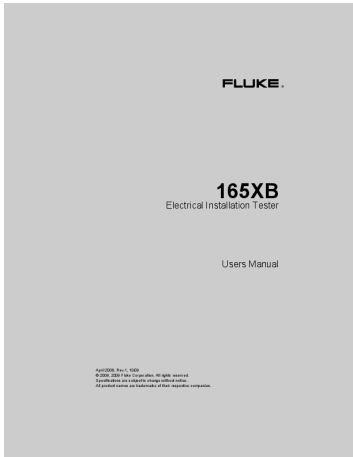 


[\[pdf\]](#) User Manual Specifications Warranty

untitled 165XB Users manual Fluke Manuals Discontinued Legacy and Current Product 165xb
umeng0100 dam assets fluke s3fs public |||

165XB Electrical Installation Tester Users Manual April 2008, Rev.1, 10/09 2008,
2009 Fluke Corpor ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2
45.2 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** Electrical Installation Tester
Specifications - - - - - ...

 lang:en **score:24** filesize: 2.41 M page_count: 58 document date: 2009-09-04

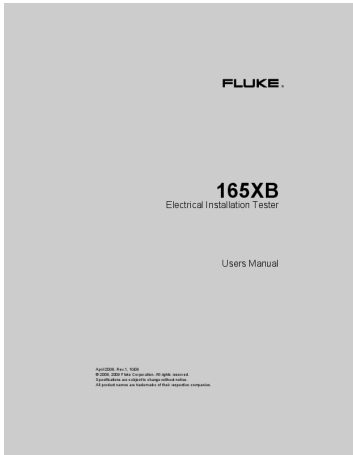


[\[pdf\]](#) User Manual Specifications Warranty

untitled Electrical Installation Tester Users Manual FlukeThe Fluke Model 1651B 1652B and 1653B are
battery powered electrical installation testers This manual applies to all three models All 165xb
umeng0100assets fluke manuals 165xb umeng0100 |||

165XB Electrical Installation Tester Users Manual April 2008, Rev.1, 10/09 2008,
2009 Fluke Corpor ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2
45.2 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** Electrical Installation Tester
Specifications - - - - - ...

 lang:en **score:23** filesize: 2.41 M page_count: 58 document date: 2009-09-04

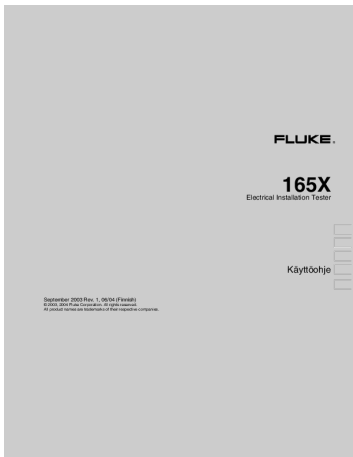


[\[pdf\]](#)

165x umfin0100 assets fluke manuals

September 2003 Rev. 1, 06/04 Finnish 2003, 2004 Fluke Corporation. All rights
reserved. All produ ... lectrical Installation Tester Erittelyt Loop Re Maksimi nyttarvo
54,2 63,2 72,2 81,2 90,2 180,2 272 **362** 452 542 632 722 812 902 53 165X Kyttohje
RCD-testit Rajaarvo 20 30 40 50 60 70 80 90 100 200 3...

 lang:fi **score:23** filesize: 1.77 M page_count: 80 document date: 2004-05-27

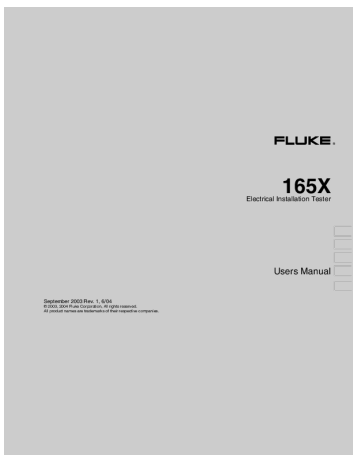


[\[pdf\]](#) User Manual Specifications Warranty

1654B Multifunction Tester Hire Fluke 1653 Manual Pdf Users Instrotech manFLU1653 instrotech pub
media manuals |||

September 2003 Rev. 1, 6/04 2003, 2004 Fluke Corporation, All rights reserved. All
product names ar ... Installation Tester Specifications Loop Re Maximum Display
Value 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 53 165X
Users Manual RCD Tests Limit Value 20 30 40 50 60 70 80 90 10...

 
lang:en **score:23** filesize: 1.67 M page_count: 80 document date: 2013-06-13

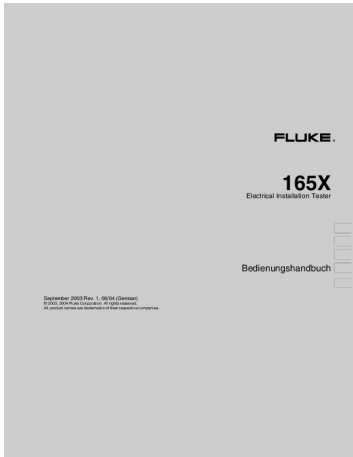

[pdf]

165x umger0100 assets fluke 80 manuals

 
September 2003 Rev. 1, 06/04 German 2003, 2004 Fluke Corporation. All rights reserved. All produc ... llation Tester Spezifikationen Schleife Re Maximaler Anzeigewert 54,2 63,2 72,2 81,2 90,2 180,2 272 **362** 452 542 632 722 812 902 53 165X Bedienungshandbuch FI-Tests Grenzwert 20 30 40 50 60 70 80 90... lang:de **score:23** filesize: 1.73 M page_count: 80 document date: 2004-05-27

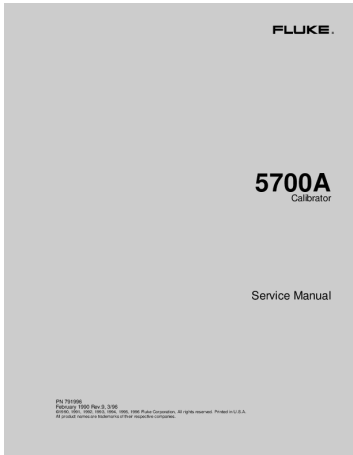

[pdf] User Manual Specifications Declaration of Conformity

Microsoft Word 0master doc elwood Fluke 5700A calibrator service manual Index of manuals fluke chrisgrossman |||

 
5700A Calibrator Service Manual PN 791996 February 1990 Rev.9, 3/96 1990, 1991, 1992, 1993, 1994, 1 ... 00 3.07 .982 3.07 .982 3.13 .984 3.58 .993 Reduced Spec Note 4 179 588 144 369 1299 79 79 79 130 **362** 79 2513 2513 2584 4618 8237 16132 17760 2513 2533 2635 402 402 653 1327 1913 3072 4770 402 496 8... lang:en **score:23** filesize: 29.21 M page_count: 632 document date: 2019-11-01

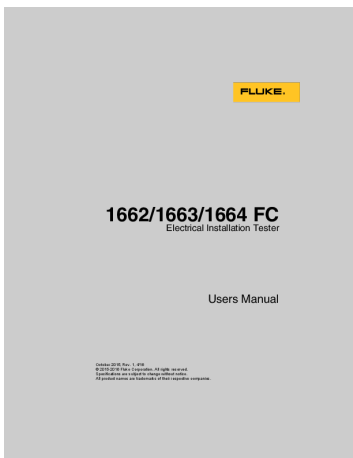

[pdf] User Manual Specifications Declaration of Conformity Warranty

Microsoft Word 0master doc elwood Fluke 1664 FC User Manual Multifunction Installation Tester Instrumentation2000 fluke 1662 1663 1664fc manual conscious task2bill media |||

 1662/1663/1664 FC Electrical Installation Tester Users Manual October 2015, Rev. 1, 4/16 2015-2016 ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 77 1662/1663/1664 FC Users Manual RCD/FI Tests T, IN RCD/FI Time ... lang:en **score:23** filesize: 2.32 M page_count: 98 document date: 2023-02-20

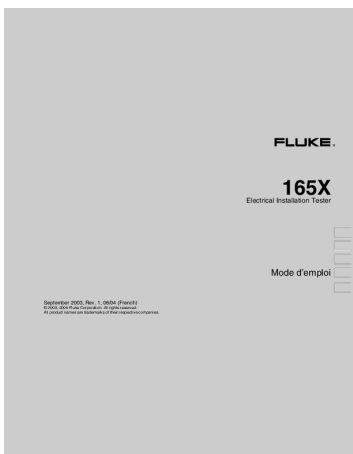

[pdf]

165x umfre0100 assets fluke 80 manuals

September 2003, Rev. 1, 06/04 French 2003, 2004 Fluke Corporation. All rights reserved. All produ ... 0 500 600 700 800 900 1000 Boucle Re Valeur d affichage maximum 54,2 63,2 72,2 81,2 90,2 180,2 272 **362** 452 542 632 722 812 902 53 165X Mode d emploi Tests de disjoncteurs diffrentiels Temps de d... lang:fr **score:23** filesize: 1.76 M page_count: 80 document date: 2004-05-27



[\[pdf\]](#) Specifications

untitled 165xb umger0000 assets fluke 80 manuals |||

 
165XB Electrical Installation Tester Bedienungshandbuch April 2008 German 2008
Fluke Corporation ... 2 427 512 597 682 767 852 80 90 100 200 300 400 500 600 700
800 900 1000 72,2 81,2 90,2 180,2 272 **362** 452 542 632 722 812 902 RCD/FI-
Messungen T, IN RCD/FI-Auslsezeit RCD/FI-Auslsestrom Grenzwe...
lang:de **score:22** filesize: 2.61 M page_count: 62 document date: 2008-04-10



[\[pdf\]](#) Specifications Declaration of Conformity

Microsoft Word 0master doc elwood 166x umrus0100 assets fluke 80 manuals

1662/1663/1664 FC Electrical Installation Tester October 2015, Rev. 1, 4/16 Russian
2015-2016 F ... 00 2,72 3,62 4,52 5,42 6,32 7,22 8,12 9,02 18,02 27,2 36,2 45,2 54,2
63,2 72,2 81,2 90,2 180,2 272 **362** 452 542 632 722 812 902 77 1662/1663/1664 FC /
T, IN / 20 18,1 30 27,1 4...
lang:nl **score:22** filesize: 8.29 M page_count: 98 document date: 2016-04-19

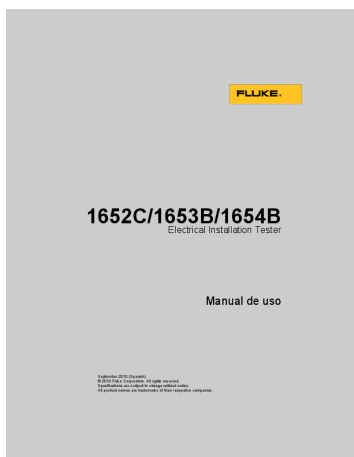

[\[pdf\]](#) User Manual Specifications

untitled 1654b umspa0000 assets fluke manuals

 
1652C/1653B/1654B Electrical Installation Tester Manual de uso September 2010
Spanish 2010 Fluke ... 70 63,2 67,8 80 72,2 76,3 90 81,2 84,8 100 90,2 169,8 200
180,2 253 300 272 338 400 **362** 423 500 452 508 600 542 593 700 632 678 800 722
763 900 812 848 1000 902 48 Elect...
lang:es **score:22** filesize: 2.43 M page_count: 66 document date: 2010-08-17



[\[pdf\]](#) User Manual Warranty Accessories

mps450 omeng0000 assets fluke 80 manuals

MPS450 Multiparameter Simulator Operators Manual PN 2243350 January 2006
2006 Fluke Corporation, AI ... 80 mmHg BP4 100 mmHg Numeric Code 342 343 344
345 346 347 348 351 352 353 354 355 356 357 360 361 **362** 363 364 365 366 369
370 371 372 373 374 375 6-5 MPS450 Operators Manual RUNNING A DYNAMIC
WA...
lang:en **score:22** filesize: 1.84 M page_count: 126 document date: 2006-03-08

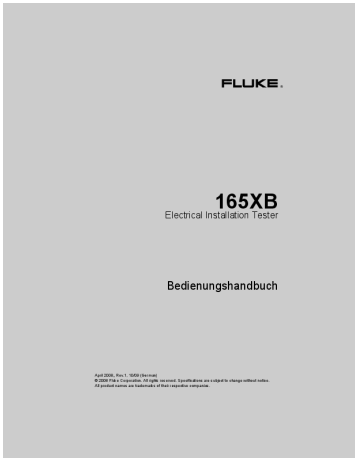

[pdf] Specifications

untitled 165xb umger0100 assets fluke 80 manuals

 
165XB Electrical Installation Tester Bedienungshandbuch April 2008, Rev.1, 10/09

German 2008 Flu ... 40 36,2 50 45,2 60 54,2 70 63,2 80 72,2 90 81,2 100 90,2 200

180,2 300 272 400 **362** Electrical Installation Tester Spezifikationen - - - - -

- ...

lang:de **score:22** filesize: 2.44 M page_count: 58 document date: 2009-09-04

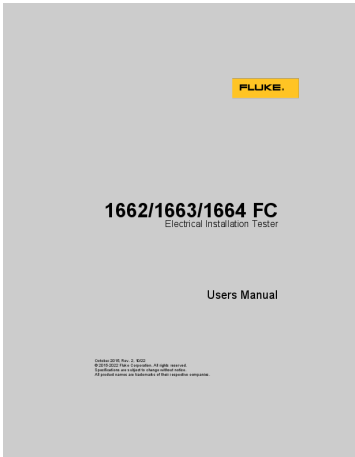

[pdf] User Manual Specifications Declaration of Conformity Warranty

Microsoft Word 0master doc Rocknrol 1663 Fluke Multifunction Installation Tester Hire 1662 1664 user

manual instrotech pub media manuals |||

 
1662/1663/1664 FC Electrical Installation Tester Users Manual October 2015, Rev. 2,

10/22 2015-2022 ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2

54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 78 Electrical

Installation Tester Specifications RCD/FI Tests T, IN...

lang:en **score:22** filesize: 2.82 M page_count: 94 document date: 2022-11-17

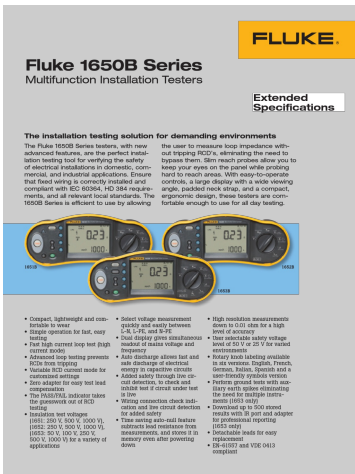

[pdf] User Manual Specifications Datasheet

Fluke 1653B User Manual Pdf 1652C 1654B cdn reichelt de 301740 farnell datasheets |||

 
Fluke 1650B Series Multifunction Installation Testers Extended Specifications The

installation tes ... 40 36.2 50 45.2 60 54.2 70 63.2 80 72.2 90 81.2 100 90.2 200 180.2

300 272 400 **362** 500 452 600 542 700 632 800 722 900 812 1000 902 4 Fluke

Corporation Fluke 1650B Se...

lang:en **score:22** filesize: 4.72 M page_count: 10 document date: 2008-12-19

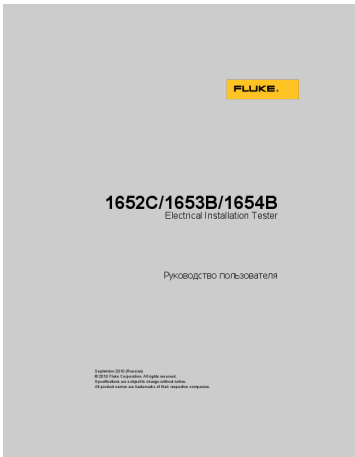

[pdf] Specifications Datasheet

untitled fluke1652c 54b rus man 1654b umrus0000 attachments content4us 80 datasheets assets fluke

manuals

 
1652C/1653B/1654B Electrical Installation Tester September 2010 Russian 2010

Fluke Corporation. ... 00 2,72 3,62 4,52 5,42 6,32 7,22 8,12 9,02 18,02 27,2 36,2

45,2 54,2 63,2 72,2 81,2 90,2 180,2 272 **362** 452 542 632 722 812 902 48 Electrical

Installation Tester / T, IN / / ...

lang:nl **score:22** filesize: 2.6 M page_count: 66 document date: 2010-08-17

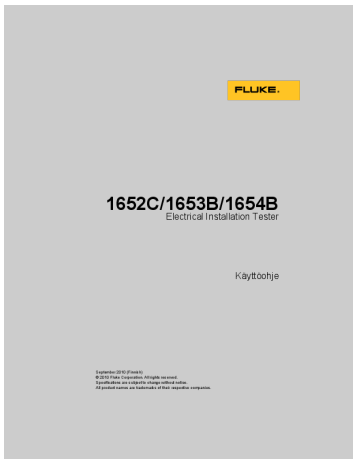


[\[pdf\]](#) Specifications

untitled 1652C 1653B 1654B 1654b umfin0000 assets fluke manuals |||

1652C/1653B/1654B Electrical Installation Tester Käyttöohje September 2010 Finnish
2010 Fluke Corpo ... 00 2,72 3,62 4,52 5,42 6,32 7,22 8,12 9,02 18,02 27,2 36,2 45,2
54,2 63,2 72,2 81,2 90,2 180,2 272 **362** 452 542 632 722 812 902 48 Electrical
Installation Tester Tekniset tiedot RCD/FI-testit T, ...

 lang:fi **score:21** filesize: 2.43 M page_count: 66 document date: 2010-08-17

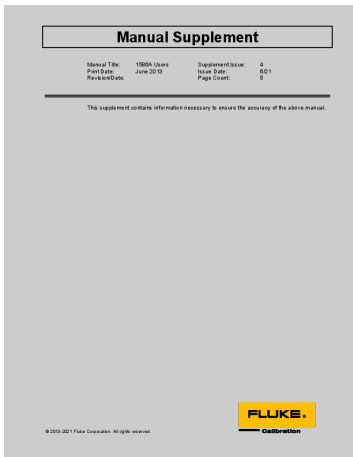


[\[pdf\]](#) User Manual Specifications

* DanaherTM Fluke Corporation 1586A Users manual supplementFluke Super DAQ Precision

Temperature Scanner Fluke0967ab90 e9c8 4039 9af9 b2e200c28da5 original filemedia fluke 0967ab90
file |||

Manual Supplement Manual Title: Print Date: Revision/Date: 1586A Users June 2013
Supplement Issue ... e 0.125A, 250V slow blow 2 1 To: 4394437 Fuse 0.160 mA,
250V slow blow 2 1 Change #2, **362** On page 1-9, add the following to the Symbols
table: Conforms to relevant South Korean EMC S...

 lang:en **score:21** filesize: 245.68 K page_count: 6 document date: 2021-06-22

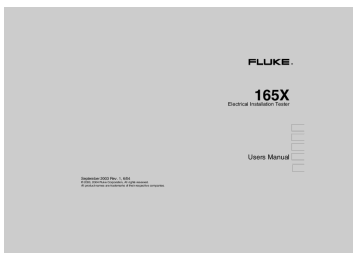


[\[pdf\]](#) User Manual Specifications Warranty

165x umeng0100 arc electronic Fluke 1650 Series Users Manual EN 1653B tester pentru depanatorii
profesioniști ARC Brasov 1653 1654B USERS MANUAL ro userfiles docs FLUKE Files 4 Testere
electrosecuritate instalatii electrice |||

September 2003 Rev. 1, 6/04 2003, 2004 Fluke Corporation, All rights reserved. All
product names ar ... Installation Tester Specifications Loop Re Maximum Display
Value 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 53 165X
Users Manual RCD Tests Limit Value 20 30 40 50 60 70 80 90 10...

 lang:en **score:21** filesize: 1.58 M page_count: 80 document date: 2006-09-06

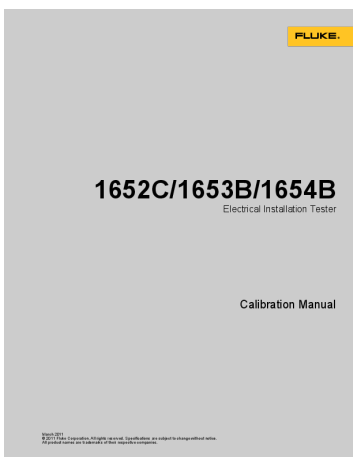


[\[pdf\]](#) User Manual Specifications Warranty

untitled 1652C 1653B 1654B Calibration Manual 2 Precautions and Safety Information If this product is
used in a manner not specified by the manufacturer protection provided Tester may be impaired Read
page before servicing In manual Warning identifies conditions actions that pose hazard s to user FLUKE
02 cmeng0000 cdn reichelt de documents datenblatt D100 assets fluke 80 manuals


1652C/1653B/1654B Electrical Installation Tester Calibration Manual March 2011
2011 Fluke Corporati ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2
45.2 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 6 RCD/FI
Tests T, IN RCD/FI Time RCD/FI Current Limit Value Maxim...

 lang:en **score:21** filesize: 1.82 M page_count: 42 document date: 2011-03-02

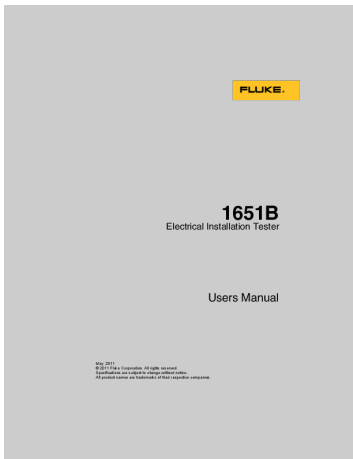


[\[pdf\]](#) User Manual Specifications Warranty

untitled 1651b umeng0000 assets fluke 80 manuals Loop Impedance Line to Protective Earth L PE Resistance Testing by Method View Electrical Installation Tester 1651B Users Manual 2 Safety See Table 1 for a list of symbols used on the product and in this manual A Warning identifies hazardous conditions actions that could cause bodily harm or death Caution damage Imager permanent loss data Fluke Ts52 Pro Manuals Discontinued Legacy Current Product dam s3fs public ||| 1651B Electrical Installation Tester Users Manual May 2011 2011 Fluke Corporation. All rights reser ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 38 RCD/FI Tests T 20 30 40 50 60 70 80 90 100 200 300 400 500 600 ... lang:en **score:21** filesize: 1.88 M page_count: 54 document date: 2011-05-18

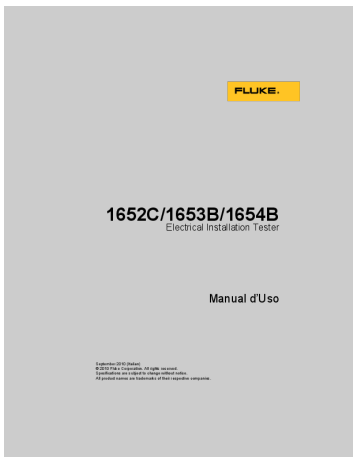 

[\[pdf\]](#) User Manual Specifications SAR Rating

Fluke 1652C Manual Pdf 1653B 1654B 6645182 cdn manomano files ||| 1652C/1653B/1654B Electrical Installation Tester Manual d'Uso September 2010 Italian 2010 Fluke C ... 70 63,2 67,8 80 72,2 76,3 90 81,2 84,8 100 90,2 169,8 200 180,2 253 300 272 338 400 **362** 423 500 452 508 600 542 593 700 632 678 800 722 763 900 812 848 1000 902 48 Elect... lang:it **score:21** filesize: 1.74 M page_count: 66 document date: 2015-04-20

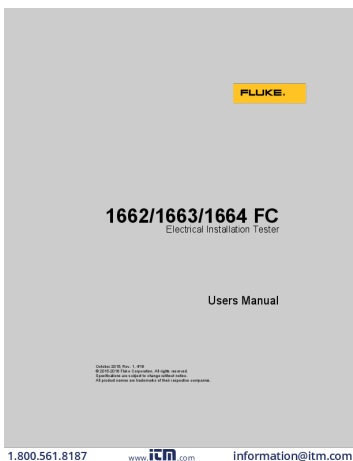 

[\[pdf\]](#) User Manual Specifications Warranty

manual Fluke 1662 US Installation Tester with MEM us itm s cache ||| 1662/1663/1664 FC Electrical Installation Tester Users Manual October 2015, Rev. 1, 4/16 2015-2016 ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 77 1.800.561.8187 www. .com information itm.com 1662/1663/1664 FC... lang:en **score:21** filesize: 5.86 M page_count: 95 document date: 0000-00-00




[pdf] User Manual Specifications Warranty

manual Fluke 1662 US Installation Tester with MEM us globaltestsupply s cache |||
1662/1663/1664 FC Electrical Installation Tester Users Manual October 2015, Rev. 1,
4/16 2015-2016 ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2
54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 77 Find Quality
Products Online at: www.GlobalTestSupply.com sales Gl...
lang:en score:21 filesize: 5.82 M page_count: 95 document date: 0000-00-00



[pdf] User Manual Specifications

untitled Fluke 1652C Manual Pdf 1653B 1654B 0900766b812800d7 docs rs online 3074 |||
1652C/1653B/1654B Electrical Installation Tester Manual de uso September 2010
Spanish 2010 Fluke ... 70 63,2 67,8 80 72,2 76,3 90 81,2 84,8 100 90,2 169,8 200
180,2 253 300 272 338 400 **362** 423 500 452 508 600 542 593 700 632 678 800 722
763 900 812 848 1000 902 48 Elect...
lang:es score:20 filesize: 2.43 M page_count: 66 document date: 2013-12-13

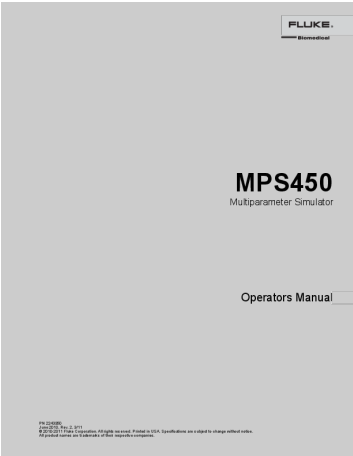 

[pdf] User Manual Specifications Warranty

untitled USER MANUAL Fluke MPS450 Multiparameter Simulator FOR SALE SimulatorUserManual
acmervival 2021 06 |||
MPS450 Multiparameter Simulator Operators Manual PN 2243350 June 2010, Rev.
2, 3/11 2010-2011 Fluke ... 150 mmHg 355 BP2 200 mmHg 356 BP2 240 mmHg 357
BP3 -5 mmHg 360 BP3 Zero 361 BP3 20 mmHg **362** BP3 40 mmHg 363 BP3 60
mmHg 364 BP3 80 mmHg 365 BP3 100 mmHg 366 BP4 -5 mmHg 369 BP4 ...
lang:en score:20 filesize: 1.87 M page_count: 126 document date: 2011-05-10

Manual Supplement			
Manual Title:	1586A Users	Supplement Issue:	5
Print Date:	June 2013	Issue Date:	5/03
Revision Date:		Page Count:	5

This supplement contains information necessary to ensure the accuracy of the above manual.

[pdf] User Manual Specifications

1586A UM MS5 Suplemento del Manual usuarioEscáner de temperatura precisión Super DAQ
Fluke8b621dc3 b741 49d0 90e7 b10800c10272 original filemedia fluke 8b621dc3 file |||
Manual Supplement Manual Title: Print Date: Revision/Date: 1586A Users June 2013
Supplement Issue ... current, and frequency. On page 6-5 Table 6-3, delete: 3980562
TL71 Test Lead Set 1 Change #2, **362** On page 1-9, add the following to the Symbols
table: Conforms to relevant South Korean EM...
lang:en score:20 filesize: 133.23 K page_count: 6 document date: 2023-09-05




[pdf] Specifications Warranty

Untitled 1 L Saraswathi 362 fluke 80 Fluke images email 2014 India retail |||

Fluke **362** 200A AC / DC Clamp Meter Ready to go wherever your work takes you.

The new Fluke **362** Clamp Meter is designed to t easily in your pocket. The small 18 mm triangular jaw allows access into tight places where other clamp meters can t reach, while providing the accuracy you can trust from a Fl...

 lang:en score:20 filesize: 1022.8 K page_count: 2 document date: 2013-05-22

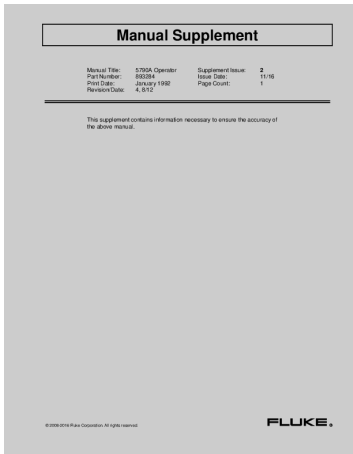

[pdf] User Manual Specifications

5790A OM R4 MS2 otto Operators manual supplement5790A AC Measurement Standard Fluke09555b25

7265 4188 8f97 b10800c2032d original filemedia fluke 09555b25 file |||

Manual Supplement Manual Title: Part Number: Print Date: Revision/Date: 5790A

Operator 893284 Janu ... C to 70 C To: Storage.....-40 C to 70 C Add,

Confidence Level.....99 Change #2, **362** On page 6-33, under Response, remove: 4 = Measurement is unsettled U annunciator is lit O...

lang:en score:20 filesize: 34.3 K page_count: 2 document date: 2023-03-09



[pdf] User Manual Specifications Warranty

manualFluke FLK 1664FC SCH Multifunction Installation Tester with Fluke connect compatibility and EU

Schuko power cord1664fc sch manualfluke direct s cache fluke 1664fc manual |||

 
1662/1663/1664 FC Electrical Installation Tester Users Manual October 2015, Rev. 1,

4/16 2015-201 ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2

54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 77 info Fluke-

Direct.com Fluke-Direct.com 1.888.610.7664 1662/1663/16...

lang:en score:20 filesize: 3.99 M page_count: 97 document date: 2020-03-05

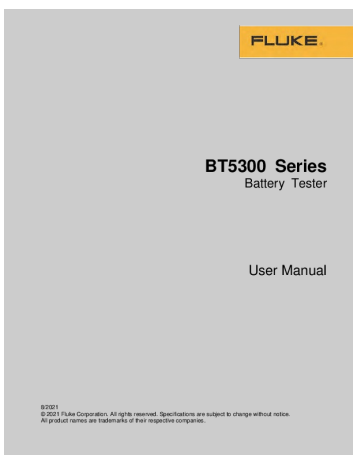

[pdf] User Manual Specifications Warranty

untitled BT5300 Users manual Fluke Series Battery Tester umeng0000 uPfbnhNloao 09JFy7geoX0K

etAsaWq dam assets fluke s3fs public |||

BT5300 Series Battery Tester User Manual 8/2021 2021 Fluke Corporation. All rights

reserved. Specif ... on failed -350 Queue overflow -360 Communication error -361

Parity error in program message -**362** Framing error in program message -363 Input

buffer overrun -365 Time out error -400 Query...

lang:en score:20 filesize: 6.65 M page_count: 168 document date: 2022-04-28



[pdf] Specifications

untitled 362 umrus0100 dev dam assets fluke s3 amazonaws s3fs public |||

362 Clamp Meter PN 4345467 August 2010, Rev. 1, 4/13 Russian 2010, 2013 Fluke Corporation. All rights reserved. Printed in China. Specifications are subject to change without notice. All product names are trademarks of their respective companies. Fluke 2 . , ...

lang:en score:20 filesize: 985.33 K page_count: 24 document date: 2013-04-17




[pdf] Specifications Declaration of Conformity

Microsoft Word 0master doc elwood 1662 1663 1664 FC 166x umfre0100 assets fluke manuals |||

1662/1663/1664 FC Electrical Installation Tester Mode d'emploi October 2015, Rev. 1, 4/16 French ... 0 1,56 200 169,8 200 180,2 2,00 1,76 2,00 1,64 300 253 300 272 - - 400 338 400 **362** - - - - 500 423 500 452 - - - - 600 508 600 542 - - - - 700 593 700 632 - ...

 lang:fr score:20 filesize: 7.27 M page_count: 98 document date: 2016-04-19

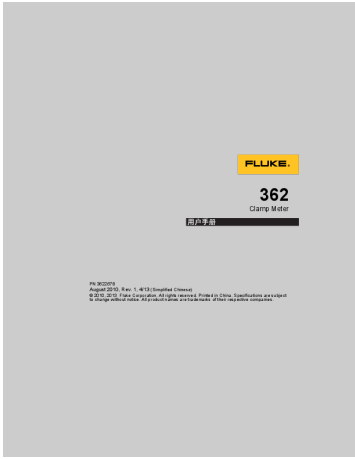


[pdf] Specifications

untitled 362 umchi0100 0 dev dam assets fluke s3 amazonaws s3fs public |||

362 Clamp Meter PN **3622678** August 2010, Rev. 1, 4/13 Simplified Chinese 2010, 2013 Fluke Corporation. All rights reserved. Printed in China. Specifications are subject to change without notice. All product names are trademarks of their respective companies. Fluke Fluke Fluke Fluke FLU...

 lang:no score:20 filesize: 1.11 M page_count: 24 document date: 2013-04-17

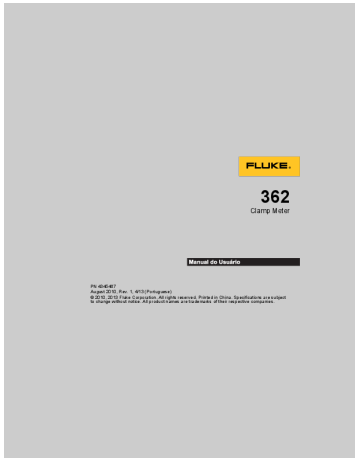

[\[pdf\]](#) User Manual Specifications

untitled 362 umpor0100 dev dam assets fluke s3 amazonaws s3fs public |||

362 Clamp Meter PN 4345467 August 2010, Rev. 1, 4/13 Portuguese 2010, 2013
Fluke Corporation. All rights reserved. Printed in China. Specifications are subject to
change without notice. All product names are trademarks of their respective
companies. GARANTIA LIMITADA E LIMITAO DE RESPONSABILIDA...
lang:pt **score:20** filesize: 912.57 K page_count: 24 document date: 2013-04-17




[\[pdf\]](#) User Manual Specifications Declaration of Conformity

Microsoft Word 0master doc elwood 1662 1663 1664 FC TME euLa serie Fluke 166X tester o prodotto è
composta da d isolamento per impianti elettrici alimentati a batteria Il presente manuale descrive tutti

i Fluke 1660 Series Manual ITtme eu Document ba03bb94459c1bf2fad8c1cef3d7bcd9 IT |||
1662/1663/1664 FC Electrical Installation Tester Manual d Uso October 2015, Rev. 1,
4/16 Italian ... lay 2,72 3,62 4,52 5,42 6,32 7,22 8,12 9,02 18,02 27,2 36,2 45,2 54,2
63,2 72,2 81,2 90,2 180,2 272 **362** 452 542 632 722 812 902 77 1662/1663/1664 FC
Manuale d Uso Test RCD/FI T, I N Tempo RC...

 lang:it **score:20** filesize: 7.22 M page_count: 98 document date: 2016-04-19

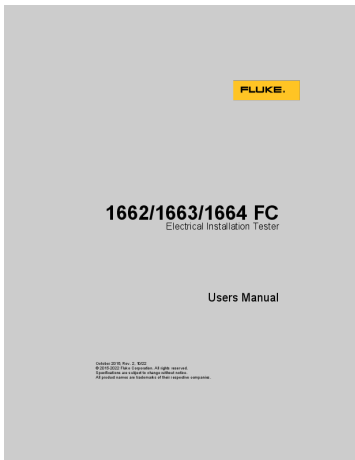


[\[pdf\]](#) User Manual Specifications Declaration of Conformity Warranty

Microsoft Word 0master doc Rocknrol 1662 1663 1664 FC Users manual Multifunction Testers Fluke
Tester 166x umeng0200 zxAuwsFMx6dxubaErFg17makyX86KU9n dam assets fluke s3fs public |||

1662/1663/1664 FC Electrical Installation Tester Users Manual October 2015, Rev. 2,
10/22 2015-2022 ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2
54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 78 Electrical
Installation Tester Specifications RCD/FI Tests T, IN...

 lang:en **score:20** filesize: 2.8 M page_count: 94 document date: 2022-11-17

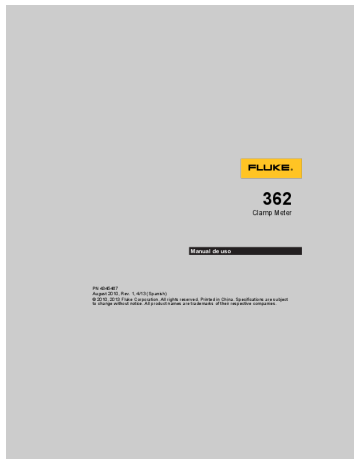


[\[pdf\]](#) User Manual Specifications

untitled 362 umspa0100 0 dev dam assets fluke s3 amazonaws s3fs public |||

362 Clamp Meter Manual de uso PN 4345467 August 2010, Rev. 1, 4/13 Spanish 2010, 2013 Fluke Corporation. All rights reserved. Printed in China. Specifications are subject to change without notice. All product names are trademarks of their respective companies. GARANTA LIMITADA Y LIMITACION DE RE...

 lang:es **score:19** filesize: 905.82 K page_count: 24 document date: 2013-04-17

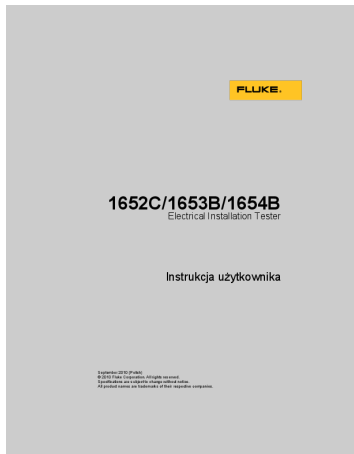


[\[pdf\]](#) Specifications

untitled 1652C 1653B 1654B FlukeUrządzenia Fluke model oraz to zasilane bateryjnie urządzenia do testowania instalacji elektrycznych Instrukcja niniejsza dotyczy1654b umpol0000assets fluke manuals 1654b umpol0000 |||

1652C/1653B/1654B Electrical Installation Tester Instrukcja uytkownika September 2010 Polish 2010 ... 00 2,72 3,62 4,52 5,42 6,32 7,22 8,12 9,02 18,02 27,2 36,2 45,2 54,2 63,2 72,2 81,2 90,2 180,2 272 **362** 452 542 632 722 812 902 48 Electrical Installation Tester Dane techniczne Testy RCD/FI T, I...

 lang:pl **score:19** filesize: 2.67 M page_count: 67 document date: 2010-08-17

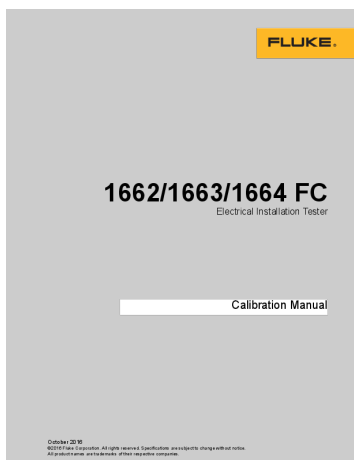


[\[pdf\]](#) User Manual Specifications Warranty

166x book mdemarti Calibration Manual Sparks Direct 1662 1663 1664 FC manual applies to all and models All figures show the Model Warning To prevent electric shock or personal injury do not perform calibration verification tests procedures described in this unless you are qualified so The information provided is for Oct 1 2016 — product names trademarks of their respective companies Electrical Installation Tester Fluke Series Product battery powered electrical installation testers This cmeng0000 sparksdirect co uk assets fluke 80 manuals dam s3fs public

1662/1663/1664 FC Electrical Installation Tester Calibration Manual October 2016 2016 Fluke Corporat ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2 54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 6 Installation Tester Specifications RCD/FI Tests T, IN Limit Val...

 lang:en **score:19** filesize: 4.65 M page_count: 40 document date: 2016-10-06

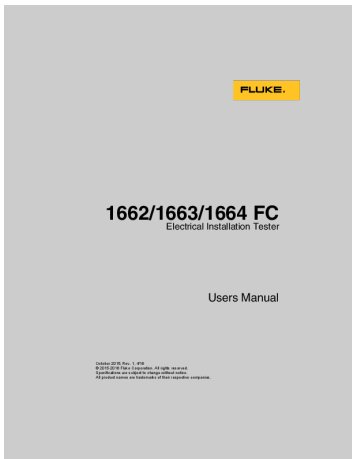


[\[pdf\]](#) User Manual Specifications Declaration of Conformity Warranty

Microsoft Word 0master doc elwood fluke 1662 1663 and 1664 fc electrical installation tester user manual
emin vn media

1662/1663/1664 FC Electrical Installation Tester Users Manual October 2015, Rev. 1,
4/16 2015-2016 ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2
54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 77

1662/1663/1664 FC Users Manual RCD/FI Tests T, IN RCD/FI Time ...

 lang:en score:19 filesize: 7.21 M page_count: 98 document date: 2016-07-20

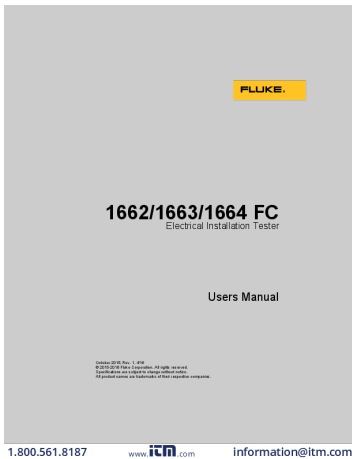


[\[pdf\]](#) User Manual Specifications Warranty

manual Fluke FLK 1663 SCH Multifunction Installation Tester with EU Schuko power cord and memory
interface sch itm s cache |||

1662/1663/1664 FC Electrical Installation Tester Users Manual October 2015, Rev. 1,
4/16 2015-2016 ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2
54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 77 1.800.561.8187

www. .com information itm.com 1662/1663/1664 FC...

 lang:en score:19 filesize: 4.01 M page_count: 97 document date: 0000-00-00

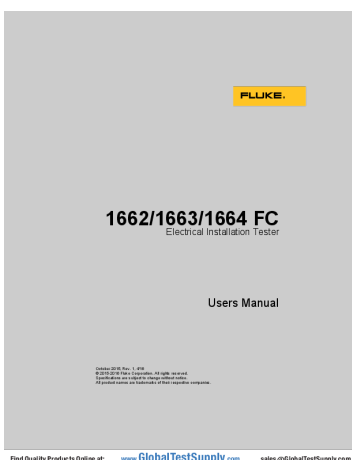

[\[pdf\]](#) User Manual Specifications Warranty

manual Fluke FLK 1663 SCH Multifunction Installation Tester with EU Schuko power cord and memory
interface sch globaltestsupply s cache |||

1662/1663/1664 FC Electrical Installation Tester Users Manual October 2015, Rev. 1,
4/16 2015-2016 ... lue 2.72 3.62 4.52 5.42 6.32 7.22 8.12 9.02 18.02 27.2 36.2 45.2
54.2 63.2 72.2 81.2 90.2 180.2 272 **362** 452 542 632 722 812 902 77 Find Quality

Products Online at: www.GlobalTestSupply.com sales Gl...

lang:en score:19 filesize: 3.97 M page_count: 97 document date: 0000-00-00