

CraftySticks WAVY-NATURAL-200

CraftySticks 8-Inch Wavy Wood Fan Handle Craft Sticks User Manual

Model: WAVY-NATURAL-200

Brand: CraftySticks

1. PRODUCT OVERVIEW

The CraftySticks 8-inch wavy wood sticks are versatile craft supplies made from natural Birch wood. This 200-pack is designed for various creative projects, including fan handles, general crafts, and decorative items. The wavy design provides an ergonomic grip and adds a unique aesthetic to your creations.

Key Features:

- **Quantity:** 200 natural wavy wood sticks.
- **Dimensions:** 8 inches in length, 1 inch in width, and approximately 1/16 inch (2mm) in thickness.
- **Material:** Made from FSC 100% Certified natural Birch wood, ensuring responsible forestry practices.
- **Durability:** Birch wood is known for its strength and resistance to splitting, making it suitable for various applications.
- **Smooth Finish:** Features smooth edges for safe handling and easy integration into projects.
- **Versatile Use:** Ideal for wedding program fans, auction paddles, handheld masks, big head cutouts on a stick, and general crafting.



Image 1.1: CraftySticks 8-inch Wavy Wood Sticks (200-pack).

2. SPECIFICATIONS

Specification	Detail
Material	Birch Wood
Brand	CraftySticks
Shape	Wavy
Item Length	8 Inches
Item Width	1 Inch
Item Thickness	1/16 Inch (2 Millimeters)
Number of Pieces	200
Item Weight	2.25 Pounds

Specification	Detail
Model Number	WAVY-NATURAL-200
UPC	700254536149
ASIN	B00K23Z62M

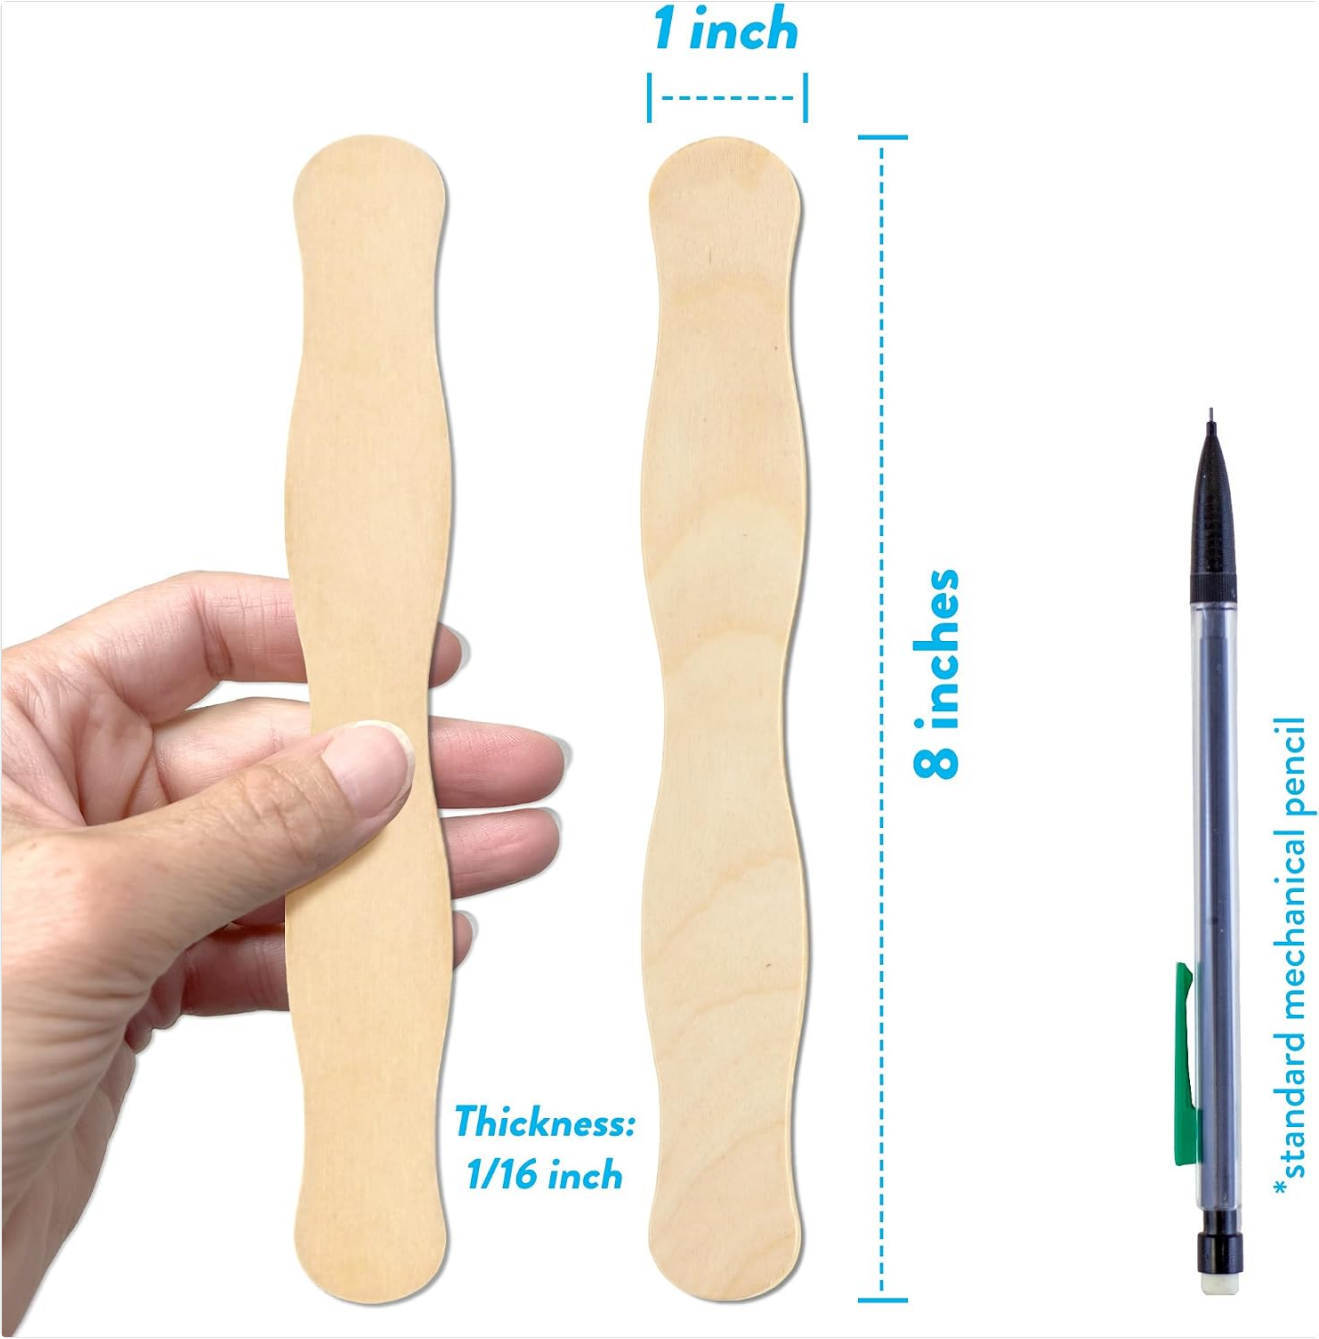


Image 2.1: Dimensions of the CraftySticks Wavy Wood Sticks.



Image 2.2: Close-up view of the smooth edge and thickness.

3. SETUP

The CraftySticks wavy wood sticks are ready for immediate use upon unpacking. They are typically banded in packs of 50 for convenience.

Unpacking and Preparation:

1. Carefully remove the rubber bands securing the packs of sticks.
2. Inspect the sticks for any damage or imperfections. While rare, natural wood products may have slight variations.
3. Separate the sticks as needed for your project.

Your browser does not support the video tag.

Video 3.1: This video demonstrates the packaging of the wavy wood sticks and highlights their smooth, sturdy nature. It also shows examples of their use as fan handles and bookmarks.

4. OPERATING INSTRUCTIONS (USAGE)

These wavy wood sticks are designed to be a versatile component for a wide range of craft and event applications. Their smooth surface and durable birch wood construction make them easy to work with using various adhesives, paints, and decorative elements.

Common Applications:

- **Fan Handles:** Attach paper, cardstock, or fabric fan designs to the wider end of the stick using strong adhesive. The wavy shape provides a comfortable grip.
- **Craft Projects:** Integrate into school projects, home decor, or DIY gifts. They can be painted, stained, or decorated with markers, glitter, pipe cleaners, googly eyes, and stickers.
- **Event Props:** Create custom signs, photo booth props, or decorative elements for weddings, parties, and other events.
- **Bookmarks:** The sticks can be decorated and used as unique bookmarks, especially when combined with ribbons or tassels.

Tips for Use:

- For strong adhesion, use wood glue or a hot glue gun. Ensure surfaces are clean and dry before applying adhesive.
- When painting or staining, apply thin, even coats to prevent warping and allow for thorough drying between coats.
- Consider sanding lightly with fine-grit sandpaper before painting for a smoother finish, though the sticks are already smooth-edged.



Image 4.1: Example of a wedding program fan using a CraftySticks handle.



Image 4.2: Another example of a custom fan created with a CraftySticks handle.



Image 4.3: The wavy stick can also serve as a unique bookmark.

5. MAINTENANCE

CraftySticks wavy wood sticks require minimal maintenance to ensure their longevity and usability for future projects.

Storage and Care:

- Store unused sticks in a cool, dry place away from direct sunlight or extreme humidity to prevent warping or cracking.
- Keep them in their original packaging or a sealed container to protect them from dust and moisture.
- Avoid prolonged exposure to water, which can cause the wood to swell or degrade.

6. TROUBLESHOOTING

While CraftySticks are designed for durability, occasional issues may arise. Here are some common concerns and solutions:

Common Issues:

- **Broken or Split Sticks:** Due to the natural properties of wood, a small percentage of sticks may occasionally break or split, especially under excessive force. Simply discard the damaged stick and use another from the pack.
- **Adhesive Not Holding:** Ensure both surfaces are clean, dry, and free of dust or oils before applying glue. Use an appropriate adhesive for wood and the material you are attaching. Allow sufficient curing time as per the adhesive manufacturer's instructions.
- **Paint/Stain Not Adhering Evenly:** Ensure the stick surface is clean. For best results, apply paint or stain in thin, even coats. If desired, a light sanding before application can improve adhesion.

7. WARRANTY INFORMATION

CraftySticks products are manufactured to high-quality standards. While these are craft supplies, we stand by the quality of our materials.

If you receive a product that is significantly damaged or does not meet your expectations, please refer to the retailer's return policy. For purchases made on Amazon, a 30-day refund or replacement policy is typically available from the date of purchase.

8. CUSTOMER SUPPORT

For further assistance, questions, or feedback regarding your CraftySticks wavy wood sticks, please contact CraftySticks directly through their official website or the retailer's customer service portal.

You can also visit the [CraftySticks Store on Amazon](#) for more information and product offerings.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question