

[manuals.plus](#) /

› [Retevis](#) /
› [Retevis RT30 Kids Owl Walkie Talkies Instruction Manual](#)

Retevis RT30

Retevis RT30 Kids Owl Walkie Talkies Instruction Manual

Model: RT30 | Brand: Retevis

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Retevis RT30 Kids Owl Walkie Talkies. Designed for young users, these walkie talkies offer simple communication with a fun, child-friendly design.



Image 1: Two Retevis RT30 Kids Owl Walkie Talkies.

2. PRODUCT OVERVIEW

The Retevis RT30 walkie talkies feature a unique owl design with LED eyes and are constructed from durable PC materials suitable for children's hands. They are designed for straightforward operation with minimal buttons.

Key Features:

- **Owl Appearance:** Cute design with LED eyes to engage children.
- **Simple Operation:** Single push-to-talk button and one channel for ease of use.

- **Call Tone:** Includes a call tone feature to alert the other party.
- **Automatic Power-Off:** Conserves battery life by automatically shutting down after 30 minutes of inactivity.
- **Compact and Durable:** Exquisite compact size and PC material construction for safety and durability.



Image 2: Labeled components of the Retevis RT30 Walkie Talkie.

3. SETUP

Battery Installation:

1. Locate the battery compartment on the back of the walkie talkie.
2. Use a small screwdriver to open the battery compartment cover.
3. Insert 3 AAA batteries into each walkie talkie, ensuring correct polarity (+/-). Batteries are not included.
4. Securely close the battery compartment cover with the screwdriver.



Image 3: Battery installation for the Retevis RT30 Walkie Talkie.

4. OPERATING INSTRUCTIONS

Turning On/Off:

- Press and hold the **Power/Call button** (located on the front, below the LED eye) for a few seconds until the device powers on or off.

Talking:

- Ensure both walkie talkies are on the same channel. The RT30 model operates on a single, fixed channel for simplicity.
- Press and hold the large **Talk button** (orange button on the owl's chest) to speak.
- Speak clearly into the microphone (located near the owl's mouth).
- Release the Talk button when finished speaking to allow the other party to respond.



Easy to Operate

Only one channel and, easy to talk with friends

Image 4: Easy operation with the Talk button.

Using the Call Tone:

- The RT30 features 1 call tone. Press the **Power/Call button** briefly to send a call tone to the other walkie talkie, alerting the recipient.



Call Tone



Let children not missing calls while playing with friends

Image 5: Call Tone feature in use.

Official Product Videos:

Your browser does not support the video tag.

Video 1: Retevis RT30 walkie talkies use tutorial. This video demonstrates the basic steps for using the walkie talkies, including powering on and using the talk function.

Your browser does not support the video tag.

Video 2: RT30 Owl Kids Walkie Talkies Function Overview. This video provides a comprehensive overview of the various functions and features of the RT30 walkie talkies.

Your browser does not support the video tag.

Video 3: Recommend you a cute and easy-to-use owl kid walkie talkie. This video highlights the user-friendly design and appeal of the owl-themed walkie talkies for children.

5. MAINTENANCE

Automatic Battery Saving:

The Retevis RT30 walkie talkies are equipped with an automatic power-off function. If the device is not used for 30 minutes, it will automatically turn off to conserve battery life. This feature helps extend the time between battery replacements.

Automatic Battery Save

Come with automatic shutdown function, the walkie talkie has a longer service life to play



Image 6: Automatic Battery Save feature.

Cleaning:

- Wipe the walkie talkie with a soft, dry cloth.
- Do not use harsh chemicals or abrasive cleaners.

6. TROUBLESHOOTING

No Power:

- Ensure batteries are correctly installed with proper polarity.
- Replace with fresh AAA batteries if current ones are depleted.

Poor Sound Quality or No Communication:

- Ensure both walkie talkies are powered on.
- Verify that both units are within the effective communication range (up to 1000 meters in open areas).
- Check for obstructions like buildings or dense foliage that may interfere with the signal.
- Ensure the Talk button is fully pressed when speaking and released when listening.

7. SPECIFICATIONS

Feature	Specification
Model Number	RT30
Product Dimensions	4.72 x 1.77 x 1.18 inches
Item Weight	1.76 ounces (50 Grams)
Batteries Required	3 AAA batteries per unit (not included)
Number of Channels	1
Frequency Range	467.5625 MHz
Talking Range Maximum	1000 Meter (in open areas)
Special Features	Owl design, simple use, LED eyes
Water Resistance Level	Not Water Resistant
Manufacturer	Retevis

Compact Design Walkie Talkie

Children use two way radio easily, Convenient to hold



Image 7: Compact design and dimensions of the walkie talkies.

8. SAFETY INFORMATION

The Retevis RT30 walkie talkies are FCC ID: 2AAR8RETEVISRT30 compliant and meet FCC part 95 rules. Always supervise young children during use. Avoid exposing the devices to water or extreme temperatures.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Retevis customer service directly. Keep your purchase receipt for any warranty claims.

