

Poulan 581506801

Poulan Wild Thing Toy Chainsaw Instruction Manual

Model: 581506801

1. INTRODUCTION

This manual provides essential information for the safe and proper use of your Poulan Wild Thing Toy Chainsaw. Designed to provide a realistic experience for young users, this toy chainsaw features noise and movement. Please read this manual thoroughly before initial use and retain it for future reference.

2. SAFETY INFORMATION

Important: This product is a toy and is not intended for cutting or real chainsaw operation. Adult supervision is recommended during play.

- Ensure all battery compartments are securely closed after battery installation.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the toy will not be used for an extended period to prevent leakage.
- Keep small parts, such as batteries, out of reach of very young children to prevent choking hazards.
- Do not immerse the toy in water or expose it to excessive moisture.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Poulan Wild Thing Toy Chainsaw
- 3 x AA Batteries (pre-installed or included separately)

4. SETUP

4.1 Battery Installation

The Poulan Wild Thing Toy Chainsaw requires 3 AA batteries for operation. These batteries are included with your purchase.

1. Locate the battery compartment on the toy chainsaw, typically on the underside or handle.

2. Using a small Phillips head screwdriver (not included), carefully open the battery compartment cover.
3. Insert the 3 AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.



Figure 1: Poulan Wild Thing Toy Chainsaw. The battery compartment is typically located on the underside of the toy.

5. OPERATING INSTRUCTIONS

Once batteries are correctly installed, your toy chainsaw is ready for use.

1. Locate the ON/OFF switch or trigger button on the toy chainsaw.
2. Press the button or activate the switch to turn the toy on.
3. The toy chainsaw will produce realistic chainsaw sounds and movements, simulating a real chainsaw.
4. To turn off the toy, release the button or switch it to the OFF position.

6. MAINTENANCE

6.1 Cleaning

To clean the toy chainsaw, wipe it with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the toy is completely dry before storing or using again.

6.2 Battery Replacement

When the sounds or movements become weak or stop, it is time to replace the batteries. Follow the steps in Section 4.1 for battery installation.

7. TROUBLESHOOTING

- **Toy does not make sound or move:**

- Check if the ON/OFF switch is in the 'ON' position.
- Verify that the batteries are installed correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure the battery compartment cover is securely closed.

- **Sounds are weak or distorted:**

- This usually indicates low battery power. Replace all batteries with new ones.

8. SPECIFICATIONS

Feature	Specification
Model Number	581506801
Product Dimensions	19.5 x 4 x 12 inches
Item Weight	1.5 pounds
Batteries Required	3 x AA (included)
Manufacturer	Husqvarna/Poulan/Weed Eater

9. WARRANTY AND SUPPORT

For information regarding warranty coverage or customer support, please refer to the product packaging or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question