



Manuals.plus /

- › **SpyX** /
- › SpyX Micro Voice Disguise & Recording Toy Instruction Manual

SpyX 10055

SpyX Micro Voice Disguise & Recording Toy Instruction Manual

Model: 10055

INTRODUCTION

The SpyX Micro Voice Disguise & Recording Toy is designed for junior agents to record and modify their voice. This device allows for recording short messages and playing them back with various voice effects, enhancing imaginative spy play.



Image: The SpyX Micro Voice Disguise & Recording Toy, shown both in its retail packaging and as a standalone unit. The standalone unit is black with silver accents and red buttons, emitting green sound waves.

SAFETY INFORMATION

- **Small Parts Warning:** This product contains small parts and is not suitable for children under 3 years of age due to choking hazards.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the device is not used for extended periods.
- **Adult Supervision:** Adult supervision is recommended during play.

PACKAGE CONTENTS

- 1x SpyX Micro Voice Disguise & Recording Toy
- 3x LR44 Button Cell Batteries (pre-installed)

SETUP

Battery Installation/Replacement

The SpyX Micro Voice Disguise & Recording Toy comes with 3 LR44 button cell batteries pre-installed. If the device does not power on or performance degrades, batteries may need replacement.

1. Locate the battery compartment on the device. This is typically secured with a small screw.
2. Using a small Phillips head screwdriver, carefully loosen the screw and open the battery compartment cover.
3. Remove the old LR44 batteries and dispose of them properly.
4. Insert three new LR44 button cell batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery compartment cover and tighten the screw securely. Do not overtighten.

OPERATING INSTRUCTIONS

Device Overview



Image: A close-up view of the SpyX Micro Voice Disguise & Recording Toy, highlighting its main controls. The top red button is labeled 'Record', the bottom red button is labeled 'Play', and the silver slider on the side is labeled 'Disguise Slide'.

Recording a Message

The device can record up to 10 seconds of audio.

1. Locate the **Record** button (top red button).
2. Press and hold the **Record** button. Speak clearly into the microphone located on the front of the device.
3. Release the **Record** button when you have finished your message or after 10 seconds.

Playing Back a Message

1. Locate the **Play** button (bottom red button).
2. Press the **Play** button to listen to your recorded message.

Disguising Your Voice

The device features a slider to modify the playback of your recorded message.

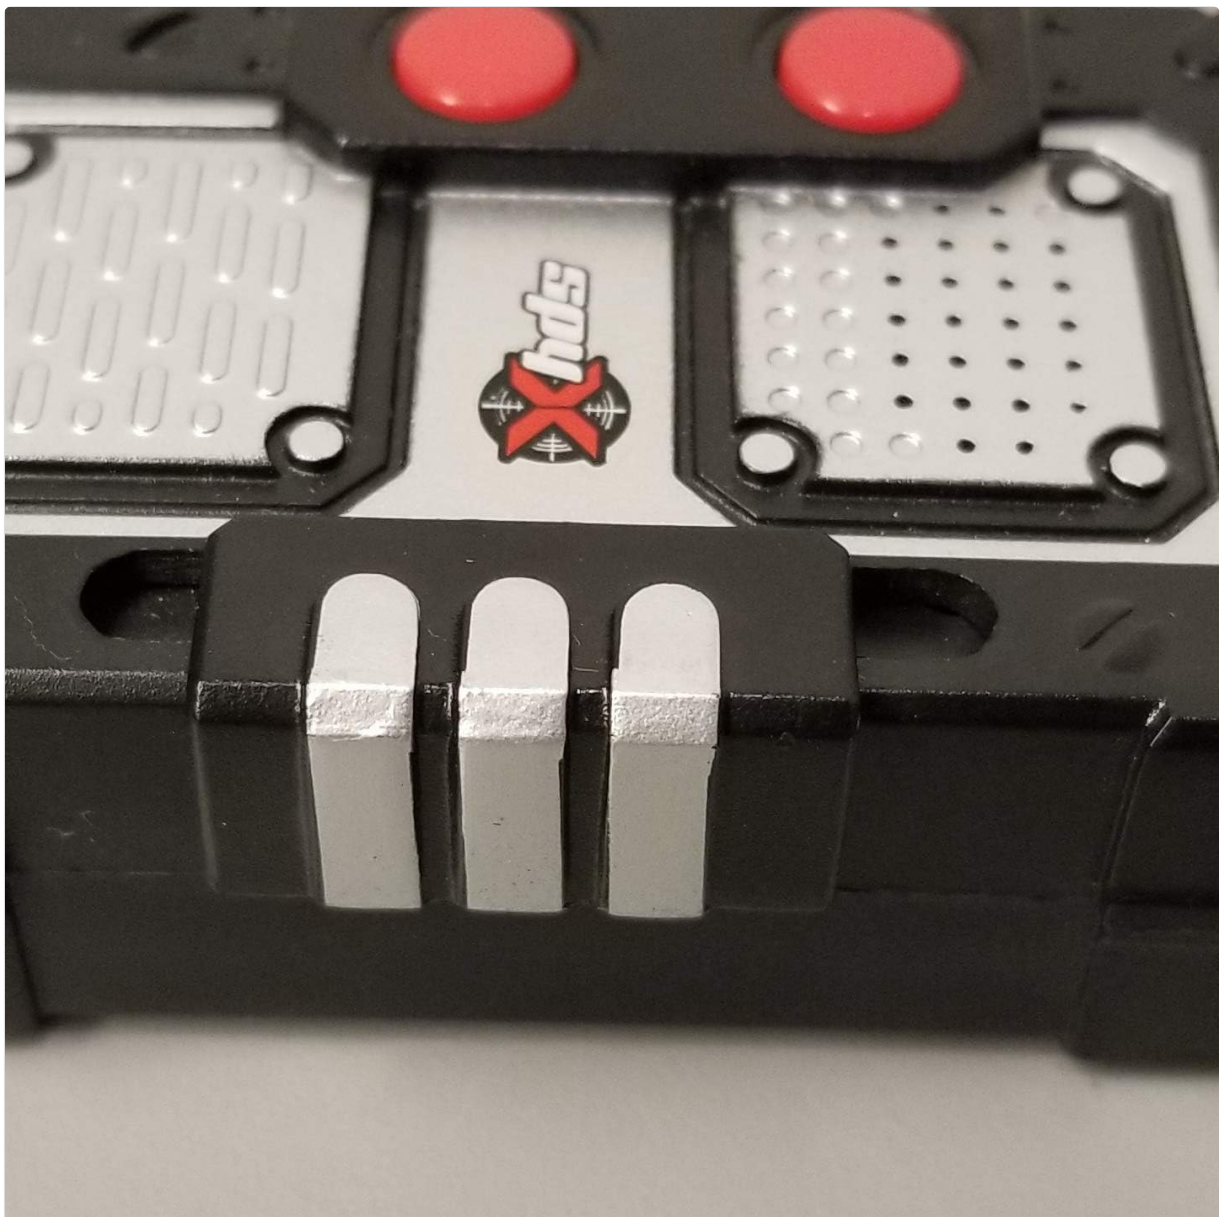


Image: A detailed close-up of the silver 'Disguise Slide' mechanism on the side of the SpyX Micro Voice Disguise & Recording Toy, showing its textured surface for grip.

1. After recording a message, locate the **Disguise Slide** on the side of the device.
2. Move the slider up or down to select different voice effects (e.g., fast, slow, high-pitched, low-pitched).

3. Press the **Play** button to hear your message with the selected voice disguise. Experiment with different slider positions for various effects.





Image: A person holding the SpyX Micro Voice Disguise & Recording Toy to their mouth, demonstrating its use for voice recording or playback. The device is black with red buttons and silver accents.

MAINTENANCE

Cleaning

To clean the device, wipe it with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

Storage

Store the device in a cool, dry place away from direct sunlight when not in use. If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **No Sound/Device Not Turning On:**
Check if the batteries are correctly installed and not depleted. Replace with new LR44 batteries if necessary.
- **Voice Unclear/Distorted (during recording):**
Ensure you are speaking directly into the microphone. Avoid speaking too loudly or too softly.
- **Voice Unclear/Distorted (during playback):**
Adjust the 'Disguise Slide' to a different position. If the issue persists, try re-recording the message.

SPECIFICATIONS

Feature	Detail
Model Number	10055
Product Dimensions	3 x 2 x 2 inches
Item Weight	1.6 ounces
Batteries Required	3 LR44 button cell batteries (included)
Recommended Age	6 - 15 years
Manufacturer	Mukikim

WARRANTY AND SUPPORT

This product is covered by the manufacturer's standard warranty. For warranty claims, technical support, or further assistance, please contact Mukikim customer service. Refer to the product packaging or the manufacturer's official website for specific contact details.

