

SpyX 10517

SpyX Night Ranger Set Instruction Manual

Model: 10517

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your SpyX Night Ranger Set. Please read all instructions carefully before use to ensure optimal performance and safety.

The SpyX Night Ranger Set includes the following components:

- Night Mission Goggles
- Micro Motion Alarm
- Micro Voice Disguiser
- Invisible Ink Pen



Image: All components of the SpyX Night Ranger Set.

SETUP AND BATTERY INSTALLATION

The SpyX Night Ranger Set requires 5 AAA batteries for operation. Some components may include LR43 batteries, but additional AAA batteries are needed.

Battery Installation Steps:

1. Locate the battery compartments on each device (Night Mission Goggles, Motion Alarm, Voice Disguiser, Invisible Ink Pen).
2. Using a small Phillips head screwdriver (not included), open the battery compartment cover.
3. Insert the required batteries (AAA or LR43 as specified for each component) ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Caution: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Always remove exhausted batteries promptly.

1. Night Mission Goggles

These goggles are designed for enhanced visibility in low-light conditions and daytime observation.

- **Wearing the Goggles:** Adjust the strap for a comfortable and secure fit.
- **Activating Night Vision:** Locate the power switch or button to activate the twin light beams. These lights illuminate your immediate surroundings, allowing you to see up to 25 feet in the dark.
- **Daytime Scope:** A special flip-out scope is included for daytime use, providing a magnified view for observation.

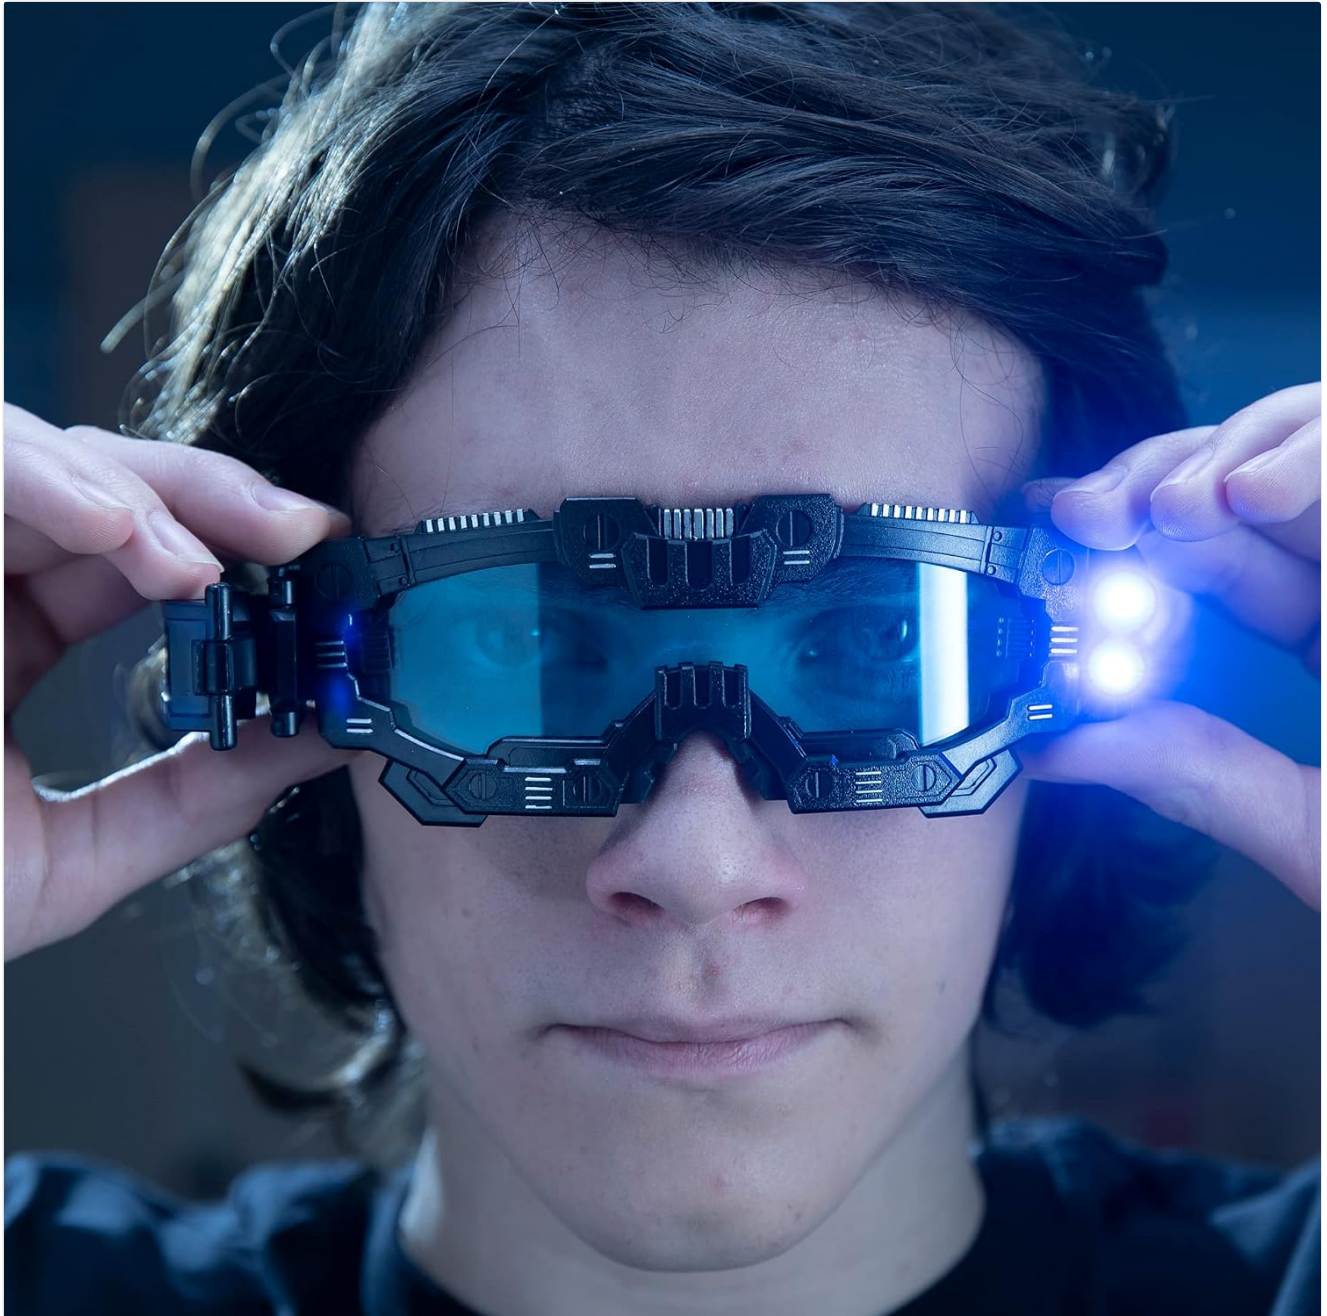


Image: A person wearing the Night Mission Goggles, demonstrating their use.

2. Micro Motion Alarm

Use the motion alarm to secure an area and detect movement or vibration.

- **Placement:** Position the alarm in an area you wish to monitor, such as near a door, window, or valuable item.

- **Activation:** Turn on the alarm. It will enter an armed state.
- **Detection:** The alarm uses a vibration sensor to detect movement up to 1.5 meters. When triggered, it will emit an alert sound.



Image: The Micro Motion Alarm detecting movement on a floor.

3. Micro Voice Disguiser

Conceal your identity by recording and altering your voice.

- **Recording:** Press the record button and speak into the microphone. You can record up to 10 seconds of audio.
- **Playback and Disguise:** Use the playback button to listen to your recorded message. The device allows you to alter the pitch and speed of your voice, creating a disguised effect.





Image: A person using the Micro Voice Disguiser.

4. Invisible Ink Pen

Write and read secret messages with this specialized pen.

- **Writing Secret Messages:** Use the pen to write on paper. The ink is invisible under normal light.
- **Revealing Messages:** Activate the UV light located on the pen. Shine the UV light over the written area to reveal the secret message.
- **Storage:** The pen includes a hidden compartment for storing secret message papers.

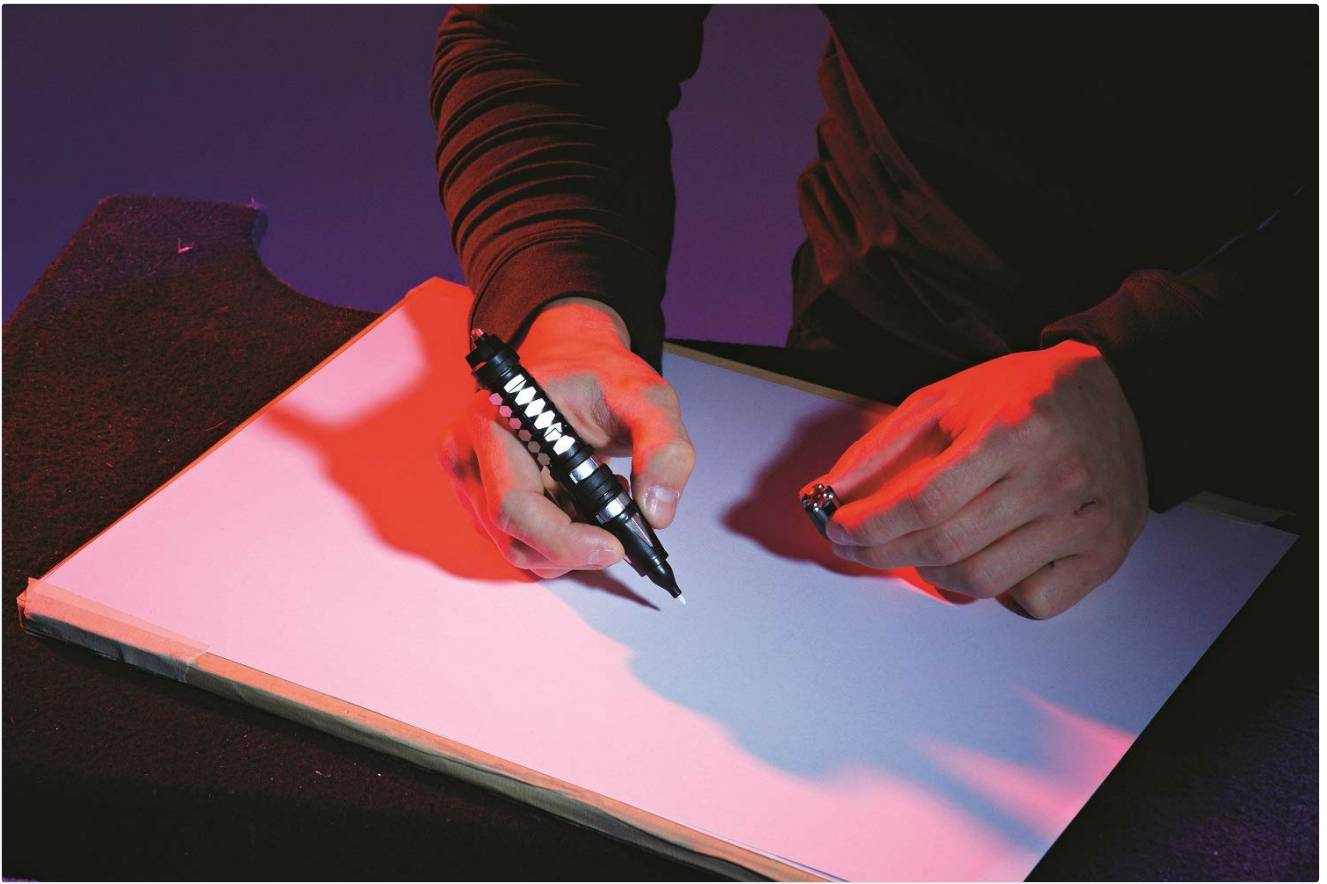


Image: A person writing with the Invisible Ink Pen.



Image: Revealing a secret message using the Invisible Ink Pen's UV light.

Official Product Videos

Video: An overview of SpyX gear, demonstrating various spy tools in action. This video highlights the general functionality and play experience of SpyX products, including elements similar to those in the Night Ranger Set.

Video: A demonstration of the SpyX Micro Gear Set, which includes Night Mission Goggles. This video provides a closer look at the goggles and other micro gear items, showcasing their features and how they are used.

MAINTENANCE

- **Cleaning:** Wipe all components with a dry, soft cloth. Do not use abrasive cleaners or immerse any part in water.
- **Battery Replacement:** Replace batteries when performance diminishes. Refer to the "Setup and Battery Installation" section for instructions.
- **Storage:** Store the set in a cool, dry place away from direct sunlight when not in use. Remove batteries if the product will not be used for an extended period to prevent corrosion.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not turning on or functioning	Dead or incorrectly installed batteries.	Check battery polarity. Replace all batteries with fresh ones. Ensure battery compartment is securely closed.
Invisible Ink Pen light not working	Corroded batteries or dead batteries.	Open the battery compartment and inspect for corrosion. Clean contacts if necessary. Replace batteries.
Motion Alarm not detecting movement	Incorrect placement or low battery.	Ensure the alarm is placed on a stable surface. Replace batteries. Test sensitivity in different locations.
Voice Disguiser audio unclear or distorted	Low battery or microphone obstruction.	Replace batteries. Ensure the microphone is clear and not covered during recording.

SPECIFICATIONS

Feature	Detail
Model Number	10517
Product Dimensions	8 x 2.76 x 2 inches
Item Weight	9.45 ounces (268 g)
Recommended Age	6 - 15 years (72 to 180 months)
Batteries Required	5 AAA batteries (additional LR43 batteries may be included for some components)
Material Type	Plastic
Color	Black
Indoor/Outdoor Usage	Indoor

WARRANTY INFORMATION

The SpyX Night Ranger Set comes with a**30-day warranty** against manufacturer defects. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, questions, or to report any issues with your SpyX Night Ranger Set, please contact the manufacturer, Mukikim.

You may also visit the official SpyX brand store for additional product information and resources[SpyX Store on Amazon](#).

© 2026 SpyX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question