

Pioneer BDP-3130-K

Pioneer BDP-3130-K Blu-ray Disc Player Instruction Manual

Model: BDP-3130-K

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Pioneer BDP-3130-K Blu-ray Disc Player. Please read these instructions thoroughly before using the product and retain them for future reference. The Pioneer BDP-3130-K is a versatile Blu-ray disc player designed to deliver high-quality video and audio playback, including upscaling functionality for standard definition content.



Image 1.1: Front view of the Pioneer BDP-3130-K Blu-ray Disc Player.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- **Power Supply:** Connect the player only to a power outlet with the specified voltage (100 V, 50/60 Hz).
- **Ventilation:** Do not block ventilation openings. Ensure adequate space around the unit for proper airflow to

prevent overheating.

- **Water and Moisture:** Do not expose the unit to rain, moisture, dripping, or splashing. Do not place objects filled with liquids, such as vases, on the apparatus.
- **Foreign Objects:** Do not insert any objects into the unit's openings. This could cause electric shock or malfunction.
- **Cleaning:** Disconnect the power cord before cleaning. Use a dry, soft cloth. Do not use liquid or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Pioneer BDP-3130-K Blu-ray Disc Player
- Remote Control Unit
- Power Cord
- Batteries for Remote Control (AAA x 2)
- Instruction Manual (this document)

Note: HDMI cable and other connection cables are typically sold separately.

4. SETUP

4.1. Connections

Before making any connections, ensure the player and all connected devices are turned off and unplugged from the power outlet.



Image 4.1: Rear panel connections of the Pioneer BDP-3130-K Blu-ray Disc Player.

- **HDMI Output:** Connect an HDMI cable from the player's **HDMI OUTPUT** port to an HDMI input on your TV or AV receiver. This single cable transmits both high-definition video and multi-channel audio.
- **Digital Audio Output (Coaxial):** For audio connection to an AV receiver without HDMI, use a coaxial digital audio cable from the player's **DIGITAL AUDIO OUTPUT (COAXIAL)** to the corresponding input on your receiver.
- **Analog Audio Output (L/R):** Connect RCA audio cables from the player's **ANALOG AUDIO OUTPUT (L/R)** to the analog audio inputs on your TV or stereo receiver.
- **LAN (10/100):** Connect an Ethernet cable from the player's **LAN** port to your home network router for internet connectivity, enabling firmware updates and network features.
- **Power:** After all other connections are made, connect the power cord to the player and then to a wall outlet.

4.2. Initial Setup

After connecting the player, turn on your TV and select the correct input source. Then, power on the Blu-ray Disc player. The initial setup wizard will guide you through basic settings such as language, video output

resolution, and network configuration.

1. Follow the on-screen instructions to complete the setup.
2. Ensure your network connection is active if you plan to use internet-dependent features or update firmware.

5. OPERATING INSTRUCTIONS

5.1. Basic Disc Playback

1. **Power On:** Press the **POWER** button on the unit or remote control.
2. **Open Disc Tray:** Press the **OPEN/CLOSE** button to open the disc tray.
3. **Insert Disc:** Place a Blu-ray Disc or DVD into the tray with the label side facing up.
4. **Close Disc Tray:** Press the **OPEN/CLOSE** button again to close the tray.
5. **Start Playback:** The disc will usually start playing automatically. If not, select **PLAY** from the on-screen menu or press the **PLAY** button on the remote.
6. **Control Playback:** Use the **PLAY**, **PAUSE**, **STOP**, **FAST FORWARD**, and **REWIND** buttons on the remote control.

5.2. Advanced Features

- **USB Media Playback:** Insert a USB storage device into the USB port (if available on the front panel, not visible in rear image). The player supports various file formats including AVI, MP4, JPEG, and MP3. Navigate through the files using the on-screen menu.
- **Upscaling:** The player features upscaling technology to enhance the picture quality of standard definition DVDs to near high-definition resolution when connected via HDMI.
- **Audio Formats:** Enjoy immersive sound with support for advanced audio formats such as Dolby Digital, DTS, Dolby TrueHD, and DTS-HD Master Audio. Ensure your AV receiver is compatible with these formats for optimal experience.

6. MAINTENANCE

6.1. Cleaning the Unit

Wipe the exterior of the player with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they can damage the finish. Ensure the unit is unplugged before cleaning.

6.2. Disc Care

Handle discs by their edges to avoid fingerprints. Store discs in their cases away from direct sunlight and heat. Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.

7. TROUBLESHOOTING

If you encounter problems with your Blu-ray Disc player, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cord not connected securely.	Check power cord connection to the unit and wall outlet.
No picture	Incorrect input selected on TV/receiver. HDMI cable loose or faulty.	Select correct input. Reconnect HDMI cable. Try a different HDMI cable.
No sound	Audio cables not connected. TV/receiver volume too low or muted.	Check audio cable connections. Adjust volume/unmute TV/receiver.
Disc not playing	Disc inserted incorrectly. Disc is dirty or scratched. Region code mismatch.	Insert disc correctly. Clean or replace disc. Ensure disc region matches player.
Remote control not working	Batteries are dead or inserted incorrectly. Obstruction between remote and player.	Replace batteries. Ensure correct polarity. Remove obstructions.

If the problem persists after trying these solutions, contact Pioneer customer support or a qualified service technician.

8. SPECIFICATIONS

- **Brand:** Pioneer
- **Model:** BDP-3130-K
- **Media Type:** Blu-ray Disc, DVD
- **Resolution:** 1920 x 1080 pixels (1080p video output)
- **Connector Type:** HDMI
- **Connectivity Technology:** HDMI
- **Color:** Black
- **Item Weight:** 1.2 kilograms
- **Audio Output Mode:** Stereo, Surround
- **Product Dimensions (L x W x H):** 36 x 20.8 x 3.9 cm
- **Supported Audio Formats:** Dolby Digital, DTS, Dolby TrueHD, DTS-HD Master Audio
- **Recommended Media/File:** Blu-ray Disc
- **HDMI Ports:** 1
- **Video Encoding Formats:** H.264/AVC, H.265/HEVC (for compatible media)
- **Compatible Devices:** TV
- **Analog Video Format:** NTSC
- **Supported File Formats (USB):** AVI, MP4, JPEG, MP3, etc.
- **Speaker Channel Configuration:** 5.1 (for compatible audio output)
- **Power Consumption:** 13 W
- **Power Supply:** 100 V ~ 50/60 Hz

9. WARRANTY AND SUPPORT

For warranty information, product registration, and technical support, please refer to the warranty card included with your product or visit the official Pioneer website. Keep your purchase receipt as proof of purchase for warranty claims.

Online Resources: For the latest information, FAQs, and software updates, please visit the Pioneer support website.