

[Manuals.plus](#) /

› [VTech](#) /

› VTech Tote and Go Laptop (Model 80-155450) Instruction Manual

VTech 80-155450

VTech Tote and Go Laptop Instruction Manual

Model: 80-155450

Brand: VTech

INTRODUCTION

The VTech Tote and Go Laptop is an educational electronic toy designed to help children aged 3 to 6 years learn and grow. This portable laptop offers 20 interactive activities with progressive learning levels that teach a variety of subjects including words, spelling, shapes, logic, and animals. Children can also customize it with their name, age, avatar, favorite tunes, and more. It features an attached mouse to introduce basic mouse skills and plays 30 popular melodies in rock, country, or jazz styles.

SETUP INSTRUCTIONS

1. **Battery Installation:** The VTech Tote and Go Laptop requires 2 AA batteries. Two AA batteries are included for demo purposes; for regular use, replace them with new batteries. Ensure correct polarity when inserting.
2. **Power On:** Open the laptop lid. Locate the power button (usually marked with a power symbol) and press it to turn on the device.
3. **Personalization:** Upon first use or when prompted, customize the laptop with your child's name, age, favorite food, and avatar by following the on-screen prompts.



Image: The VTech Tote and Go Laptop in pink, with its lid open, displaying the screen and keyboard. This image shows the overall appearance of the product.

OPERATING INSTRUCTIONS

- **Activity Selection:** The laptop features various activity categories. Use the dedicated buttons (e.g., ABC, 123, Animals & Food, Logic & Games, Music Time) to select a learning mode.
- **Keyboard Use:** The keyboard allows children to type letters and numbers. Press individual keys to hear their names or associated sounds/words, depending on the selected activity.
- **Mouse Skills:** An attached mouse introduces basic mouse skills. Use the mouse to navigate on-screen options or interact with games.
- **Screen Display:** The computer screen is not backlit. Adjust the screen contrast manually using the dedicated controls (if available) or move to a well-lit area.



Image: A young child smiling while interacting with the VTech Tote and Go Laptop, demonstrating its use in a home setting.

KEY FEATURES

- **20 Learning Activities:** Engages children with over 60 words, spelling exercises, shape recognition, logic puzzles, and animal facts.
- **Progressive Learning Levels:** Activities are designed to gradually increase in difficulty, adapting to the child's development.
- **30 Popular Melodies:** Features a selection of rock, country, and jazz-style tunes for musical exploration.
- **Customization:** Allows children to personalize their laptop experience by entering their name, age, favorite food, and choosing an avatar.
- **Attached Mouse:** Helps develop fine motor skills and introduces fundamental computer mouse operation.
- **Portable Design:** The compact and durable design with a built-in handle makes it easy for children to carry their laptop anywhere.



Image: A child interacting with the VTech Tote and Go Laptop, which displays a personalized name on its screen, highlighting the customization feature.



Image: A young child happily carrying the VTech Tote and Go Laptop by its handle, illustrating its portable design.

PRODUCT DEMONSTRATION

Your browser does not support the video tag.

Video: An official demonstration of the VTech Tote and Go Laptop, showcasing its various interactive activities, keyboard, and mouse functionality.

MAINTENANCE

- **Cleaning:** Wipe the laptop with a slightly damp cloth. Do not immerse in water or use harsh cleaning agents.
- **Battery Care:** Remove batteries if the unit will not be used for an extended period. Dispose of old batteries responsibly.
- **Storage:** Store the laptop in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

- **No Power:** Ensure fresh AA batteries are correctly installed.
- **Screen is Dark/Unclear:** The screen is not backlit. Adjust the screen contrast manually using the dedicated controls (if available) or move to a well-lit area.
- **Sound Issues:** Check the volume settings. If sound is still not working, try replacing the batteries.

SPECIFICATIONS

Product Dimensions	2.68 x 10.67 x 8.23 inches
Item Weight	1.88 pounds
Item Model Number	80-155450
Manufacturer Recommended Age	36 months - 6 years
Batteries	2 AA batteries required (included for demo)
Release Date	June 1, 2014
Manufacturer	VTech

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the packaging or contact VTech customer service directly. Contact details can typically be found on the manufacturer's official website or product documentation.