

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GPX](#) /

› [User Manual for GPX Portable CD/MP3 Player with USB and iPod/iPhone Docking Station](#)

GPX PCD 940


User Manual

GPX PORTABLE CD/MP3 PLAYER WITH USB AND IPOD/IPHONE DOCKING STATION

Model: PCD 940

1. INTRODUCTION

Thank you for purchasing the GPX Portable CD/MP3 Player with USB and iPod/iPhone Docking Station. This device combines a versatile audio player with modern connectivity options, allowing you to enjoy your music from various sources including CDs, MP3 files, USB drives, and your Apple devices. Please read this manual carefully before operating the unit to ensure proper use and to maximize its performance.

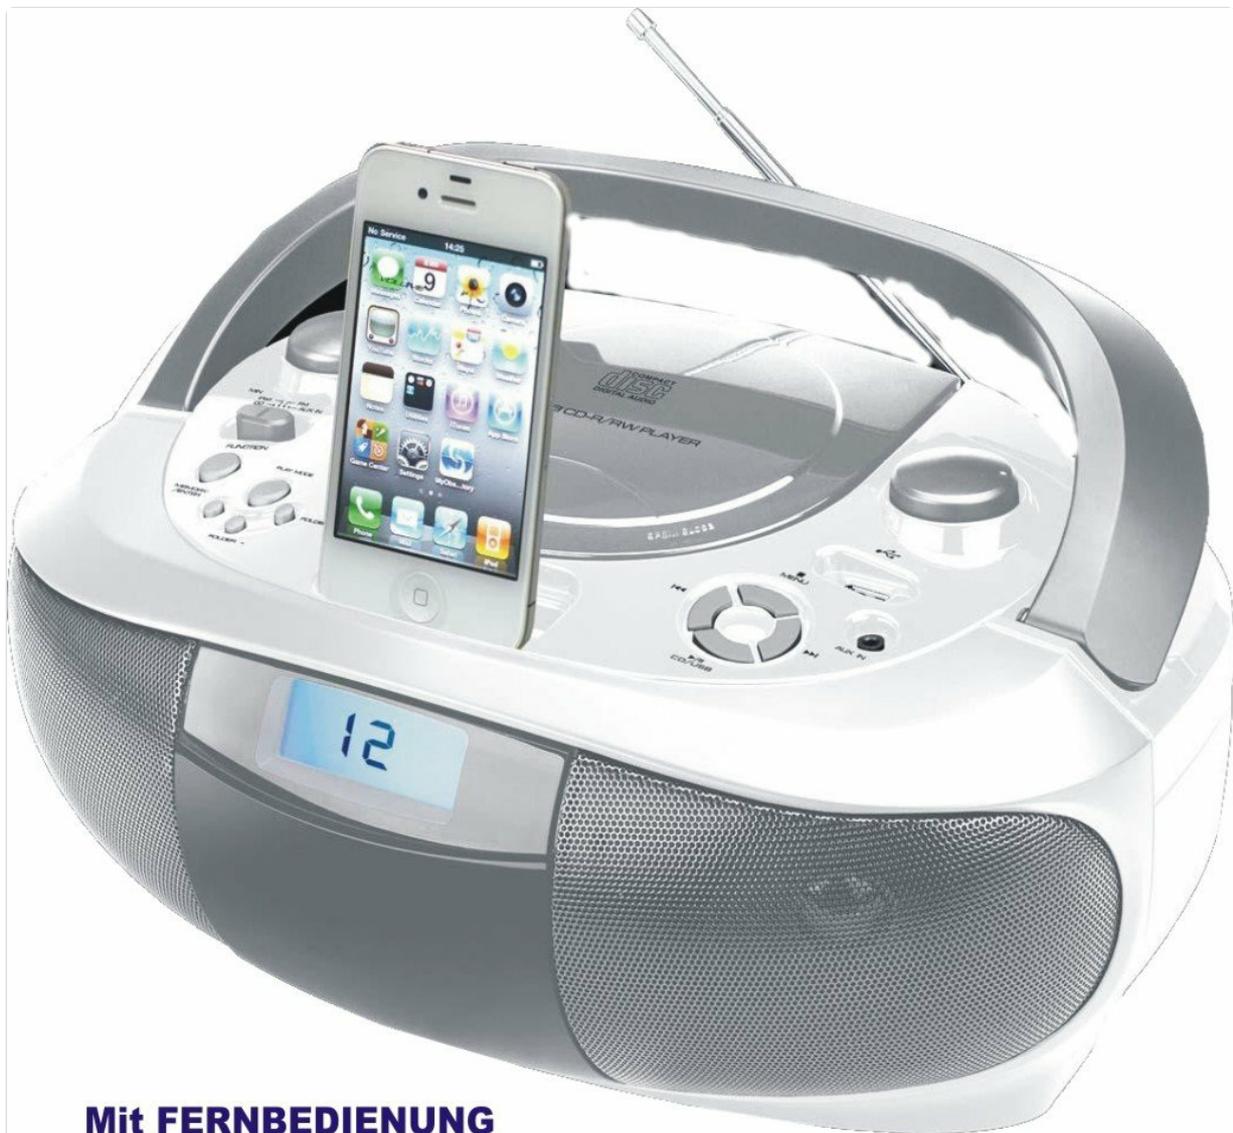

Mit FERNBEDIENUNG

RADIO

CD/ Mp3

USB

iPod / iPhone docking

Figure 1: GPX Portable CD/MP3 Player (PCD 940)

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain or moisture to prevent fire or shock hazards.
- Do not block ventilation openings. Ensure adequate space around the unit for proper airflow.
- Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not open the casing. There are no user-serviceable parts inside.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- GPX Portable CD/MP3 Player (PCD 940)
- Remote Control
- AC Power Cable
- User Manual (this document)

Note: iPod/iPhone devices are not included and must be purchased separately.

4. PRODUCT FEATURES

- **Top-Loading CD Player:** Supports CD-R, CD-RW, MP3, and WMA playback. Features include repeat (single track, folder, all), skip, and search functions.
- **Digital FM Stereo Radio:** Analog frequency display with telescopic antenna for clear reception.
- **Powerful Sound Output:** 60 Watts P.M.P.O (2x3 W RMS) for rich audio.
- **Versatile Power Options:** Operates on both AC mains power and batteries for portability.
- **Remote Control:** Full-function remote for convenient operation.
- **Multiple Connectivity:**
 - AUX Input for connecting external audio devices.
 - USB Port for MP3/WMA playback from USB flash drives.
 - Integrated iPod/iPhone Docking Station for charging and playback.
- **LCD Display:** Clear display for track information, radio frequency, and mode.

5. CONTROLS AND CONNECTIONS

Familiarize yourself with the various controls and connection points on your GPX unit.

5.1 Front Panel Controls

- **POWER Button:** Turns the unit on or off.
- **FUNCTION/MODE Button:** Switches between CD, USB, Radio (FM), AUX, and iPod/iPhone modes.
- **VOLUME +/- Knobs:** Adjusts the audio output level.
- **PLAY/PAUSE Button (▶/⏸):** Starts or pauses CD/USB/iPod playback.
- **STOP Button (■):** Stops CD/USB/iPod playback.
- **SKIP/SEARCH Buttons (◀◀▶▶):** Skips tracks/files or searches within a track/file. In Radio mode, tunes frequency.
- **REPEAT Button:** Cycles through repeat modes (Repeat 1, Repeat Folder, Repeat All).
- **PROGRAM Button:** Programs CD/USB tracks for custom playback order.
- **LCD Display:** Shows current mode, track number, time, and radio frequency.
- **iPod/iPhone Docking Station:** Connector for compatible Apple devices.

5.2 Rear Panel Connections

- **AC IN Jack:** Connects the supplied AC power cable.
- **USB Port:** For connecting USB flash drives.
- **AUX IN Jack:** 3.5mm stereo input for connecting external audio devices.
- **FM Telescopic Antenna:** Extend for optimal FM radio reception.
- **Battery Compartment:** For optional battery operation (batteries not included).

6. SETUP

6.1 Power Connection

Your unit can be powered by AC mains or batteries.

- **AC Power:** Insert the supplied AC power cable into the AC IN jack on the rear of the unit and plug the other end into a standard wall outlet.
- **Battery Power (Optional):** Open the battery compartment cover on the rear. Insert the required number of C-size batteries (not included), ensuring correct polarity (+/-). Close the cover securely. The unit will automatically switch to battery power when AC power is disconnected.

6.2 Antenna Setup

For optimal FM radio reception, fully extend the telescopic antenna located on the rear of the unit. Adjust its position for the best signal.

7. OPERATING INSTRUCTIONS

7.1 CD/MP3 Playback

1. Press the **POWER** button to turn on the unit.
2. Press the **FUNCTION/MODE** button repeatedly until "CD" appears on the LCD display.
3. Open the CD compartment cover and place a CD (audio CD, CD-R, CD-RW, MP3 CD, or WMA CD) onto the spindle with the label side facing up. Close the cover.
4. The unit will read the disc, and playback will begin automatically. If not, press the **PLAY/PAUSE** button.
5. Use the **SKIP/SEARCH** buttons (◀◀▶▶) to skip tracks. Hold them down to search within a track.
6. Press the **REPEAT** button to cycle through repeat modes: Repeat 1 (current track), Repeat Folder (for MP3/WMA CDs), Repeat All.
7. Press the **STOP** button to stop playback.

7.2 Radio Operation (FM)

1. Press the **POWER** button to turn on the unit.
2. Press the **FUNCTION/MODE** button repeatedly until "FM" appears on the LCD display.
3. Extend the FM telescopic antenna for best reception.
4. Use the **SKIP/SEARCH** buttons (◀◀▶▶) to manually tune to a desired frequency. Hold them down for automatic station search.
5. Adjust the **VOLUME** knobs to your desired listening level.

7.3 USB Playback

1. Press the **POWER** button to turn on the unit.
2. Insert a USB flash drive into the USB port on the rear of the unit.
3. Press the **FUNCTION/MODE** button repeatedly until "USB" appears on the LCD display.
4. The unit will automatically detect and begin playing compatible audio files (MP3/WMA) from the USB drive.
5. Use the **PLAY/PAUSE**, **STOP**, **SKIP/SEARCH**, and **REPEAT** buttons as you would for CD playback.

7.4 iPod/iPhone Docking

1. Press the **POWER** button to turn on the unit.
2. Carefully dock your compatible iPod or iPhone onto the docking connector. Ensure it is seated firmly.
3. Press the **FUNCTION/MODE** button repeatedly until "iPod" or "iPhone" appears on the LCD display.
4. Playback and charging of your docked device will begin. You can control playback using the unit's controls or directly from your iPod/iPhone.
5. Adjust the **VOLUME** knobs on the unit.

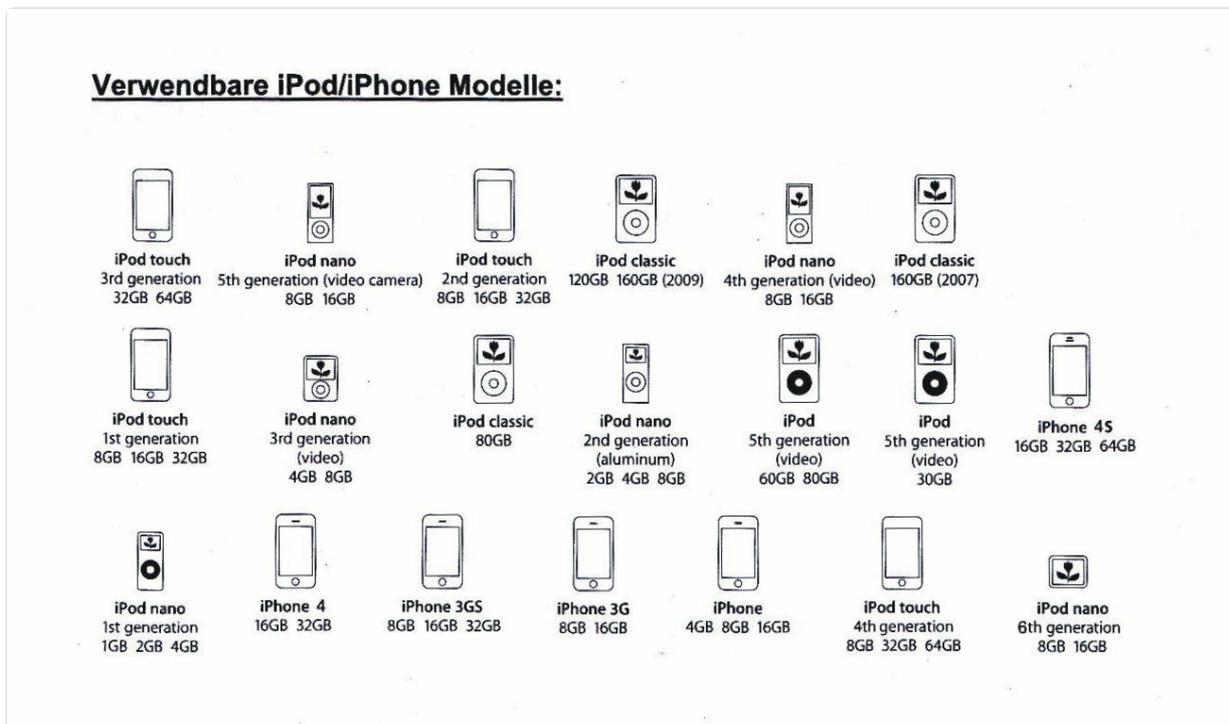


Figure 2: Compatible iPod/iPhone Models

7.5 AUX Input

1. Press the **POWER** button to turn on the unit.
2. Connect an external audio device (e.g., MP3 player, smartphone) to the AUX IN jack on the rear of the unit using a 3.5mm stereo audio cable (not included).
3. Press the **FUNCTION/MODE** button repeatedly until "AUX" appears on the LCD display.
4. Playback will be controlled from your external audio device. Adjust the **VOLUME** knobs on the GPX unit.

7.6 Remote Control

The included remote control allows for convenient operation of most functions from a distance. Ensure the remote has working batteries and is pointed towards the front of the unit.

- **POWER:** On/Off
- **MODE:** Selects function (CD, USB, FM, AUX, iPod/iPhone)
- **VOL +/-:** Adjusts volume
- **PLAY/PAUSE, STOP, SKIP/SEARCH, REPEAT, PROGRAM:** Functions as on the main unit.
- *Additional buttons may be present for specific functions depending on the remote model. Refer to the remote's markings.*

8. MAINTENANCE

Proper care will ensure long-lasting performance from your unit.

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **CD Lens Care:** Do not touch the CD lens. If the lens is dirty, use a commercially available CD lens cleaner.
- **Storage:** If the unit will not be used for a long period, remove the batteries to prevent leakage. Store in a cool, dry place.

9. TROUBLESHOOTING

If you experience problems with your unit, please check the following points before seeking service.

Problem	Possible Cause / Solution
Unit does not power on.	Check if the AC power cable is securely connected to the unit and the wall outlet. If using batteries, ensure they are inserted correctly and are not depleted.
No sound.	Increase the volume. Ensure the correct function/mode (CD, USB, FM, AUX, iPod) is selected. If using AUX, check the volume on the external device. If using iPod/iPhone, ensure it is properly docked and playing.
CD/USB not playing.	Ensure the disc/USB is inserted correctly. Check if the disc/USB contains compatible audio files (MP3/WMA). Disc may be dirty or scratched; clean or try another disc. USB drive may be corrupted or incompatible; try another USB drive.
Poor radio reception.	Fully extend and adjust the FM telescopic antenna. Relocate the unit to a different position to improve signal. Interference from other electronic devices.

10. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model	PCD 940
Power Output	60 Watts P.M.P.O (2 x 3W RMS)
CD Compatibility	CD, CD-R, CD-RW, MP3 CD, WMA CD
USB Compatibility	USB flash drives (MP3/WMA playback)
Radio Frequency	FM Stereo (Frequency range not specified, typical for region)
Connections	AUX In (3.5mm), USB Port, iPod/iPhone Docking Connector
Power Source	AC 230V ~ 50Hz or DC (Batteries: C-size x 8, not included)
Dimensions (W x H x D)	Approx. 37 x 25.5 x 16.5 cm (14.6 x 10 x 6.5 inches)
Color	White / Silver
UPC	000024652599

11. DISPOSAL INFORMATION


This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed of separately from your household waste at the end of its life. There are separate collection systems for recycling in your country. For more information, please contact the local authority or your retailer where you purchased the product.

The crossed-out wheeled bin symbol indicates that batteries should not be disposed of in the normal household waste stream. Please dispose of batteries at designated collection points or return them to the retailer for proper recycling.

© GPX. All rights reserved.

Model: PCD 940

Related Documents - PCD 940

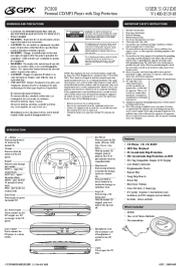

[GPX PC800 Personal CD/MP3 Player User Guide](#)

User guide for the GPX PC800 Personal CD/MP3 Player with Skip Protection, detailing features, operation, safety, and troubleshooting.




[GPX ML8X8B Instruction Manual - Portable Media Player Guide](#)

Comprehensive instruction manual for the GPX ML8X8B portable media player. Learn how to power on, load media, play music and videos, record audio, use the FM radio, navigate menus, and troubleshoot common issues.




[GPX MWB308 Bluetooth MP3 Player User's Guide](#)

Comprehensive user's guide for the GPX MWB308 Bluetooth MP3 Player, detailing features, operation, controls, charging, music management, Bluetooth connectivity, radio functions, recording capabilities, e-book reader, and settings. Includes FCC warnings and additional safety information.

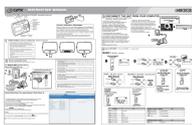

[GPX MW3836 Portable MP3/WMA Player Instruction Manual](#)

User manual for the GPX MW3836 portable digital audio player. Learn how to connect, download music, operate playback features, troubleshoot issues, and understand safety precautions.

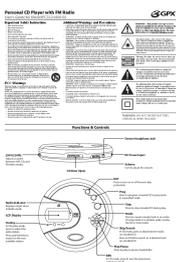

[GPX Personal CD Player with FM Radio User Guide \(Model PC332 v800-03\)](#)

User's guide for the GPX Personal CD Player with FM Radio, Model PC332 v800-03. Includes important safety instructions, FCC warnings, operational procedures for CD and FM radio functions, power requirements, and international support information.



[GPX PCB319 Portable Compact CD Player User's Guide](#)

Comprehensive user guide for the GPX PCB319 portable compact CD player. Learn about safety precautions, device features, controls, power options, CD playback, programming, and Bluetooth connectivity.