

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Pyle](#) /

> [Pyle PWBH18BK Water Resistant Bluetooth Streaming Wireless Headphones User Manual](#)

Pyle PWBH18BK

Pyle PWBH18BK Water Resistant Bluetooth Streaming Wireless Headphones

USER MANUAL

1. Introduction

Thank you for purchasing the Pyle PWBH18BK Water Resistant Bluetooth Streaming Wireless Headphones. These headphones are designed to provide high-fidelity audio and hands-free calling capabilities, ideal for sports and exercise. Featuring a comfortable over-the-ear style and water-resistant construction, they ensure reliable performance during demanding routines. This manual will guide you through the setup, operation, and maintenance of your new headphones.

2. Safety Information

Please read all safety warnings and instructions carefully before using this product to ensure safe operation and prevent damage.

- Do not expose the headphones to extreme temperatures, humidity, or corrosive substances.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not attempt to disassemble or modify the headphones. This will void the warranty and may cause damage.
- Keep the headphones away from children and pets.
- Clean the headphones with a soft, dry cloth only. Do not use harsh chemicals or abrasive materials.
- While water-resistant (IP64), these headphones are not designed for submersion. Avoid prolonged exposure to heavy rain or direct water jets. Do not use for swimming.
- Using headphones at high volume for extended periods can cause permanent hearing damage. Adjust volume to a safe level.

3. Package Contents

Ensure all items are present in the package:

- Pyle PWBH18BK Bluetooth Water Resistant Headphones
- USB Charging Cable
- Additional Earbuds (various sizes)

- User Manual (this document)

4. Product Overview

Familiarize yourself with the components of your Pyle PWBH18BK headphones:



Image 1: Front view of the Pyle PWBH18BK Water Resistant Bluetooth Headphones. The image displays both the left and right earpieces, connected by a cable. The left earpiece shows control buttons and a charging port, while the right earpiece features the Pyle logo. Both earpieces have an over-the-ear hook design for secure fit.

- **Power/Multi-function Button:** Used for powering on/off, play/pause, answering/ending calls.
- **Volume Up/Next Track Button:** Increases volume with a short press, skips to next track with a long press.

- **Volume Down/Previous Track Button:** Decreases volume with a short press, goes to previous track with a long press.
- **Microphone:** For hands-free calling.
- **LED Indicator:** Shows power, pairing, and charging status.
- **Micro USB Charging Port:** For connecting the charging cable.
- **Ear Hooks:** Designed for a secure and comfortable fit during activity.

5. Setup

5.1 Charging the Headphones

Before first use, fully charge your headphones.

1. Locate the Micro USB charging port on the left earpiece.
2. Connect the supplied USB charging cable to the headphones and the other end to a USB power source (e.g., computer USB port, USB wall adapter).
3. The LED indicator will illuminate red during charging.
4. Once fully charged, the LED indicator will turn blue or turn off (refer to specific model behavior, typically blue). A full charge takes approximately 2-3 hours.
5. Disconnect the charging cable once charging is complete.

Note: The average battery life is approximately 7 hours of continuous playback.

5.2 Pairing with a Bluetooth Device

To use your headphones wirelessly, you must pair them with a Bluetooth-enabled device.

1. Ensure the headphones are turned off.
2. Press and hold the Power/Multi-function Button for approximately 5-7 seconds until the LED indicator flashes red and blue alternately. This indicates the headphones are in pairing mode.
3. On your Bluetooth device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "Pyle PWBH18BK" or a similar name from the list of found devices.
5. Once successfully paired, the LED indicator on the headphones will flash blue slowly or turn off, and you may hear an audible confirmation.
6. If prompted for a password, enter "0000".

Note: The headphones will automatically attempt to reconnect to the last paired device when powered on, if the device is within range (up to 10 meters) and has Bluetooth enabled.

6. Operating Instructions

6.1 Power On/Off

- **Power On:** Press and hold the Power/Multi-function Button for about 3 seconds until the LED indicator flashes blue and you hear a power-on tone.
- **Power Off:** Press and hold the Power/Multi-function Button for about 3 seconds until the LED indicator flashes red and you hear a power-off tone.

6.2 Music Playback

- **Play/Pause:** Short press the Power/Multi-function Button.

- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.

6.3 Call Handling

- **Answer/End Call:** Short press the Power/Multi-function Button when a call comes in or during a call.
- **Reject Call:** Long press the Power/Multi-function Button when a call comes in.
- **Redial Last Number:** Double-press the Power/Multi-function Button.

7. Maintenance

- **Cleaning:** Wipe the headphones with a soft, slightly damp cloth. Do not use abrasive cleaners or immerse in water. Ensure the charging port cover is securely closed before cleaning.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in use for extended periods.
- **Earbuds:** Regularly clean or replace the silicone earbuds for hygiene and optimal sound quality.

8. Troubleshooting

Problem	Possible Cause	Solution
Headphones won't turn on.	Battery is dead.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; Bluetooth off on device; device too far.	Ensure headphones are in pairing mode (flashing red/blue). Turn on Bluetooth on your device. Move device closer to headphones (within 10 meters).
No sound or low volume.	Volume too low on headphones or device; headphones not connected properly.	Increase volume on both headphones and connected device. Re-pair the headphones.
Intermittent connection or choppy audio.	Device too far; interference; low battery.	Move closer to the connected device. Avoid obstacles between headphones and device. Charge the headphones.
Microphone not working.	Microphone blocked; device settings.	Ensure microphone is not covered. Check audio input settings on your connected device.

9. Specifications

- **Model:** PWBH18BK
- **Bluetooth Version:** (Not specified, assume standard for release date)
- **Bluetooth Range:** Up to 10 meters (33 feet)
- **Water Resistance Rating:** IP64 (Marine Grade Water Resistant)

- **Battery Life:** Approximately 7 hours (playback)
- **Charging Time:** Approximately 2-3 hours
- **Frequency Response:** 20Hz - 20kHz
- **Impedance:** (Not specified)
- **Sensitivity:** (Not specified)
- **Built-in Microphone:** Yes
- **Controls:** Button controls for power, volume, track, and call management
- **Weight:** 4 ounces (approx. 113 grams)
- **Dimensions:** 5.75" x 7.25" x 1.5" (approx. 14.6 x 18.4 x 3.8 cm)
- **Color:** Black

10. Warranty and Support

Pyle products are designed and manufactured to the highest standards. For warranty information or technical support, please refer to the warranty card included with your product or visit the official Pyle website.

Website: www.pyleusa.com

Contact: Refer to the support section on the Pyle website for contact details.

