

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic DVD-S700 DVD Player Instruction Manual](#)

Panasonic DVD-S700

Panasonic DVD-S700 DVD Player Instruction Manual

Model: DVD-S700 | Brand: Panasonic

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Panasonic DVD-S700 DVD Player. Designed for ease of use, this player offers 1080p up-conversion for enhanced image quality and Dolby Digital sound for a superior audio experience. It supports various media formats and includes convenient HDMI and USB connections.

Key Features:

- **1080p Up-conversion:** Enhances standard DVD video to Full-HD 1080p resolution, providing clear and detailed images.
- **Dolby Digital Sound:** Delivers superior audio quality for movies and music from DVDs and CDs.
- **USB Connection:** Allows playback of content from USB memory devices.
- **Compact Design:** Space-saving and easy to integrate into any entertainment setup.
- **Multi-format Playback:** Supports DVD-Video/R/R DL/RW/+R/+RW/+R DL, CD-Audio/R/RW.

WHAT'S IN THE Box

- Panasonic DVD-S700 Progressive Scan 1080p Up-conversion DVD Player
- Remote Control (with 2 AAA batteries included)
- Power Cable
- Instruction Manual (this document)

SETUP

1. Unpacking and Placement:

Carefully remove the DVD player and all accessories from the packaging. Place the unit on a stable,

level surface with adequate ventilation. Avoid placing it near heat sources or in direct sunlight.



Image: Front view of the Panasonic DVD-S700 DVD Player, showing the disc tray, USB port, and control buttons.

2. Connecting to your TV:

Connect the DVD player to your television using an HDMI cable for optimal 1080p up-converted video and audio. Insert one end of the HDMI cable into the HDMI OUT port on the DVD player and the other end into an available HDMI IN port on your TV.

For older TVs, you may use RCA audio/video cables (not included) by connecting the corresponding color-coded jacks (yellow for video, red for right audio, white for left audio) from the DVD player to your TV.

3. Power Connection:

Plug the power cord into the AC IN jack on the back of the DVD player, then plug the other end into a wall outlet.

4. Initial Power On:

Press the power button on the front of the unit or on the remote control to turn on the DVD player. Switch your TV's input source to the corresponding HDMI or AV input where the DVD player is connected.

OPERATING INSTRUCTIONS

1. Loading a Disc:

Press the **OPEN/CLOSE** button on the remote or the eject button on the unit to open the disc tray. Place a DVD or CD disc gently onto the tray with the label side facing up. Press the **OPEN/CLOSE** button again to close the tray.

2. Playback:

The player will typically begin playback automatically. If not, press the **PLAY/PAUSE** button on the remote or the unit.



Upconverts to Full HD Resolution

Standard DVD images are rendered in beautiful HD image quality (1080p)



Plays Multiple File Formats

DVD-Video/R/R DL/RW/+R/+RW/+R DL,
plus CD-Audio/R/RW and USB



Dolby Digital Sound

Clear, superior audio for action, adventure, dialogue,
and music



Plug in Your External HD

Share your favorite movies, photos, and more on a
large screen



Image: The Panasonic DVD-S700 DVD Player with its remote control resting on top, highlighting the compact design and accessible controls.

3. Using the Remote Control:

The remote control provides full functionality for the DVD player. Key buttons include:

- **Power (Red button):** Turns the unit on or off.
- **OPEN/CLOSE:** Opens and closes the disc tray.
- **PLAY/PAUSE:** Starts or pauses playback.
- **STOP:** Stops playback.
- **SKIP (<< / >>):** Skips to the previous or next track/chapter.
- **SEARCH (<< / >>):** Fast forwards or rewinds.
- **SETUP:** Accesses the player's settings menu.
- **MENU/TOP MENU:** Navigates disc menus.
- **OK (Enter):** Confirms selections.
- **Arrow Buttons:** Navigate menus and selections.
- **USB:** Switches to USB input for media playback.



Full-HD
1080

Full-HD 1080p Upconverting

If power goes out, player restarts within 10 seconds of where you left off

Image: Close-up of the remote control for the Panasonic DVD-S700, showing all buttons and their functions.

4. USB Playback:

Insert a USB memory device into the USB port on the front of the player. Use the remote control to select the USB input. Navigate through your media files (photos, music, videos) using the arrow buttons and press **OK** to play.

5. 1080p Up-conversion:

The player automatically up-converts standard definition DVDs to 1080p resolution when connected via HDMI to a compatible TV. This feature enhances visual clarity and detail.



Dolby Digital Sound

Clear, superior audio for action, adventure, dialogue, and music

Image: A graphic illustrating the Full-HD 1080p upconverting feature, showing a dinosaur on a screen with enhanced detail.

6. Dolby Digital Sound:

The player supports Dolby Digital audio for rich, immersive sound. Ensure your audio system or TV is configured to receive Dolby Digital signals for the best experience.



Image: A graphic highlighting the Dolby Digital Sound feature, depicting sound waves emanating from speakers.

MAINTENANCE

- **Cleaning the Unit:**

Wipe the exterior of the DVD player with a soft, dry cloth. Do not use liquid cleaners or aerosol sprays, as they may damage the finish or internal components.

- **Disc Care:**

Handle discs by their edges to avoid fingerprints. Clean discs with a soft, lint-free cloth, wiping from the center outwards. Do not use abrasive cleaners or solvents.

- **Ventilation:**

Ensure the ventilation slots on the unit are not blocked to prevent overheating. Maintain adequate space around the player for proper airflow.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not securely connected.	Check power cord connection to the unit and wall outlet.
No picture or sound	Incorrect TV input selected; HDMI/AV cables loose or faulty.	Select the correct input on your TV. Check all cable connections.
Disc does not play	Disc inserted incorrectly; dirty or scratched disc; unsupported disc format.	Insert disc with label side up. Clean the disc. Ensure the disc format is supported (DVD-Video, CD-Audio).
Remote control not working	Batteries are dead or inserted incorrectly; obstruction between remote and player.	Replace batteries. Ensure correct polarity. Remove any obstructions.
Sound cuts out constantly	Loose HDMI cable; audio settings issue.	Ensure HDMI cable is securely connected. Check audio settings on both the player and TV.

SPECIFICATIONS

- **Brand:** Panasonic
- **Model:** DVD-S700
- **Dimensions (W x D x H):** 12.25 x 8 x 1.5 inches
- **Weight:** 2.43 pounds
- **Color:** Black
- **Media Type:** DVD, CD
- **Resolution:** 1920x1080 (1080p up-conversion)
- **Connectivity:** HDMI, USB
- **Audio Output Mode:** Stereo, Dolby Digital
- **Audio S/N:** 90dB
- **Special Feature:** Compact

OFFICIAL PRODUCT VIDEOS

Panasonic DVD Player DVD-S700 Overview

Your browser does not support the video tag.

Video: An overview of the Panasonic DVD-S700 DVD Player, demonstrating its features and functionality. This video is provided by the seller.

VIERA - Understanding Aspect Ratio

Your browser does not support the video tag.

Video: A quick tip from Panasonic explaining aspect ratios and how to adjust them on a VIERA television. This video is a preview provided by the seller and is relevant for understanding display settings with the DVD player.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Panasonic website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Protection plans are available for purchase separately:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect: One plan covers all eligible past and future purchases

For further assistance, visit the [Panasonic Store](#).

Related Documents - DVD-S700

	<p>Panasonic DVD/CD Player Owner's Manual (Models DVD-S500, DVD-S700)</p> <p>This is the official owner's manual for the Panasonic DVD/CD Player, models DVD-S500 and DVD-S700. It provides important safety instructions, operating procedures, specifications, and troubleshooting guides.</p>
	<p>Panasonic DVD/CD Player Operating Instructions - Models DVD-CP67, DVD-CV52, DVD-CV47, DVD-CV37</p> <p>Comprehensive operating instructions for Panasonic DVD/CD Players, covering setup, basic and advanced operations, troubleshooting, specifications, and warranty information. Includes detailed guidance on connecting to a TV, using the remote control, playing various disc formats (DVD-Video, CD, MP3, WMA), and enhancing movie viewing experiences.</p>
	<p>Panasonic DVD Recorder FAQ: Reset, Tuning, Copying, and Recording Modes</p> <p>Comprehensive FAQ for Panasonic DVD recorders covering factory reset procedures, troubleshooting 'No Signal' issues, setting date/time, upscaling with 4K TVs, copying HDD to DVD, and understanding recording modes.</p>
	<p>Panasonic DVD/CD Player Operating Instructions Manual - Models DVD-S35, DVD-S31A, DVD-S31</p> <p>Comprehensive operating instructions manual for Panasonic DVD/CD players, models DVD-S35, DVD-S31A, and DVD-S31. Covers setup, basic and advanced operations, troubleshooting, maintenance, and specifications.</p>

	<p><u>Panasonic DVD/CD Player Operating Instructions</u></p> <p>Comprehensive operating instructions manual for the Panasonic DVD/CD Player models DVD-S35, DVD-S31A, and DVD-S31. Covers setup, basic and advanced playback, troubleshooting, and maintenance.</p>
	<p><u>Panasonic DVD/CD Player Operating Instructions - DVD-CV52/DVD-CV47/DVD-CV37</u></p> <p>Comprehensive operating instructions for Panasonic DVD/CD Players, models DVD-CV52, DVD-CV47, and DVD-CV37. Covers setup, basic and advanced operations, connection guides, troubleshooting, and specifications.</p>